



Download
Manual



Growatt New Energy

Shenzhen Growatt New Energy Co., Ltd
4-13/F, Building A, Sino-German (Europe) Industrial Park,
Hangcheng Ave, Bao'an District, Shenzhen, China

T +86 755 2747 1942
E service@ginverter.com
W www.ginverter.com

GR-UM-299-A-02



WIT 50-100K Storage/Hybrid Inverter User Manual

Contents

| | |
|--|-----------|
| 1 Notes on this manual | 1 |
| 1.1 Introduction | 1 |
| 1.2 Target Group | 1 |
| 1.3 Product Range..... | 1 |
| 2 Safety Precautions | 2 |
| 2.1 Safety Instructions | 2 |
| 2.2 Symbol Conventions | 3 |
| 2.3 Label Description..... | 4 |
| 3 Product Description | 5 |
| 3.1 Overview | 5 |
| 3.2 Basic Data | 8 |
| 3.3 Nameplate | 9 |
| 3.4 Operating Principle | 10 |
| 3.4.1 Operating Principle of WIT 50-100K-A | 10 |
| 3.4.2 Operating Principle of WIT 50-100K-H | 10 |
| 3.4.3 Operating Principle of WIT 50-100K-AE and WIT 50-100K-AU | 11 |
| 3.4.4 Operating Principle of WIT 50-100K-HE and WIT 50-100K-HU | 11 |
| 3.5 Storing the WIT Inverter | 12 |
| 3.6 Supported Grid Types | 12 |
| 3.7 AFCI Function | 12 |
| 3.7.1 AFIC function description | 12 |
| 3.7.2 Clearing the alarm | 13 |
| 3.8 Anti-PID Function | 13 |
| 4 Inspection upon delivery | 14 |
| 5 Installation | 16 |
| 5.1 Basic Installation Requirements..... | 16 |
| 5.2 Installation Environment Requirements | 17 |
| 5.3 Moving the WIT Inverter..... | 18 |
| 5.4 Mounting the WIT Inverter | 19 |
| 5.4.1 Ground-mounted Installation..... | 19 |
| 5.4.2 Wall-mounted Installation | 20 |
| 6 Electrical Connection | 22 |
| 6.1 Connecting the Ground Cables..... | 26 |
| 6.2 Connection on the AC Side..... | 27 |
| 6.3 Connection on the PV Side | 30 |

| | | | |
|---|------------|---|------------|
| 6.4 Connection on the Battery Side | 32 | Table 10.4 WIT 50/63/75/100K-HEspecification..... | 112 |
| 6.4.1 Connecting the Main Power Cable of the Battery..... | 32 | Table 10.5 WIT 50/63/75/100K-AU specification | 116 |
| 6.4.2 Connecting the Battery BMS-AC Terminal..... | 33 | Table 10.6 WIT 50/63/75/100K-HU specification | 119 |
| 6.5 Connecting Communication Cables | 34 | 11 Decommissioning the WIT Inverter | 123 |
| 6.5.1 Battery Communication Connection | 35 | 12 Warranty | 124 |
| 6.5.2 External Communication Connection | 36 | 12.1 Conditions..... | 124 |
| 6.5.3 Parallel Communication Connection..... | 38 | 12.2 Disclaimer..... | 124 |
| 6.5.4 Monitoring Device Terminal..... | 41 | 13 Contact Us..... | 125 |
| 6.5.5 DRMS Port | 41 | | |
| 6.6 Post-installation Checks | 43 | | |
| 7 Commissioning..... | 45 | | |
| 7.1 Powering on/off the System | 45 | | |
| 7.2 Commissioning the WIT Inverter | 46 | | |
| 7.2.1 Set the Communication Address..... | 46 | | |
| 7.2.2 Set the Time and Date | 46 | | |
| 7.3 Mode of operation | 47 | | |
| 7.3.1 Waiting Mode | 47 | | |
| 7.3.2 Operating Mode | 47 | | |
| 7.3.3 Fault Mode | 48 | | |
| 7.3.4 Shutdown Mode | 48 | | |
| 7.4 LED and OLED Display Panel | 49 | | |
| 8 Monitoring..... | 52 | | |
| 8.1 Remote Monitoring | 52 | | |
| 8.1.1 Remote Monitoring on the APP (ShinePhone)..... | 52 | | |
| 8.1.2 Remote Monitoring on the ShineServer Webpage | 68 | | |
| 9 System Maintenance..... | 89 | | |
| 9.1 Routine Maintenance..... | 89 | | |
| 9.1.1 Clean the Chassis..... | 89 | | |
| 9.1.2 Fan Maintenance | 89 | | |
| 9.2 Troubleshooting..... | 91 | | |
| 9.2.1 Warning..... | 91 | | |
| 9.2.2 Error | 96 | | |
| 10 Product specifications | 102 | | |
| Table 10.1 WIT 50/63/75/100K-A specification | 102 | | |
| Table 10.2 WIT 50/63/75/100K-H specification | 105 | | |
| Table 10.3 WIT 50/63/75/100K-AE specification | 109 | | |

1 Notes on this manual

1.1 Introduction

This manual is intended to introduce the WIT 50-100K Storage/Hybrid Inverters manufactured by Shenzhen Growatt New Energy Co.,Ltd. (hereinafter referred to as Growatt) in terms of their installation, operation, commissioning, maintenance and troubleshooting. Please read this manual carefully before using the product, and keep it in a convenient place for future reference. The content of this manual is continually reviewed and amended, where necessary. Growatt reserves the right to make changes to the material at any time and without notice.

Note:

“WIT” refers to the product name and “50-100K” indicates the power classes. The WIT series comprises both Storage Inverter models and Hybrid Inverter models.

1.2 Target Group

This document is intended for qualified technicians. Only qualified and well-trained technicians are allowed to install and operate the WIT inverter. Should any questions arise during installation, you can visit www.growatt.com to leave a message, or call our 24-hour service hotline at +86 755 2747 1942.

1.3 Product Range

The WIT 50-100K (380V/400V) Storage/Hybrid inverters consist of six models, each offering four power classes: 50kW, 63kW, 75kW, and 100kW. In total, there are 24 products in this series. This manual is valid for the following models:

Table 1.1 WIT 50-100K Storage/Hybrid inverter


| | | | |
|-------------|--|-------------|---|
| WIT 50K-A | Three-phase Storage Inverter | WIT 50K-H | Three-phase Hybrid Inverter |
| WIT 63K-A | | WIT 63K-H | |
| WIT 75K-A | | WIT 75K-H | |
| WIT 100K-A | | WIT 100K-H | |
| WIT 50K-AE | Three-phase Storage Inverter with EPS function | WIT 50K-HE | Three-phase Hybrid Inverter with EPS function |
| WIT 63K-AE | | WIT 63K-HE | |
| WIT 75K-AE | | WIT 75K-HE | |
| WIT 100K-AE | | WIT 100K-HE | |
| WIT 50K-AU | Three-phase Storage Inverter with UPS function | WIT 50K-HU | Three-phase Hybrid Inverter with UPS function |
| WIT 63K-AU | | WIT 63K-HU | |
| WIT 75K-AU | | WIT 75K-HU | |
| WIT 100K-AU | | WIT 100K-HU | |

Safety Precautions 2




2.1 Safety Instructions

- 1) Please read this manual carefully before installation. Damages caused by failure to follow the instructions in the manual are beyond the warranty scope.
- 2) Only qualified and trained electrical technicians are allowed to perform operations on the WIT Inverter.
- 3) During installation, please do not touch other parts inside the equipment other than the wiring terminals.
- 4) Ensure that all electrical connections comply with local electrical standards.
- 5) Only designated personnel are permitted to perform maintenance on the inverter.
- 6) Before operating the WIT Inverter in on-grid mode, ensure that you have obtained any permission needed from the local grid operator.


Transportation:


| | |
|---|---|
|  WARNING | <ul style="list-style-type: none"> • Risk of injury when lifting the WIT Inverter or due to a falling inverter, as it is heavy. Please transport and lift the inverter with caution. |
|---|---|

Installation:



| | |
|--|---|
|  NOTICE | <ul style="list-style-type: none"> • Please read this manual carefully before installation. Damages caused by failure to observe instructions specified in this manual are not covered under any warranty. |
|  DANGER | <ul style="list-style-type: none"> • Do not connect any cables before installation. |
|  WARNING | <ul style="list-style-type: none"> • Please observe the installation instructions specified in this manual, including the installation environment and clearance requirements. • Install the WIT Inverter in a dry and well-ventilated location; otherwise, performance de-rate may be initiated due to excessive temperature. • Please read the installation instructions and safety precautions carefully before installation. |

Electrical Connections:



| | |
|--|--|
|  DANGER | <ul style="list-style-type: none"> • Before connecting cables, ensure that the DC switches of the WIT Inverter are OFF, and turn off the switch and breaker on the AC side and the battery side. Otherwise, high voltages may cause severe injuries. • It must be operated by qualified and trained electrical technicians. Technicians should observe instructions in this manual and local regulations. • High voltages may cause electric shocks and serious injury. Please do not touch the WIT Inverter in operation. • Do not install the inverter in potentially explosive and flammable atmospheres. |
|--|--|

| | |
|---|---|
|  WARNING | <ul style="list-style-type: none"> Each WIT Inverter must be equipped with an AC circuit breaker. Multiple WIT Inverters cannot connect to the same AC circuit breaker. Do not connect the load between the WIT Inverter and the circuit breaker. If the cable is thick, do not shake the cable terminals after tightening them. Otherwise, the loose connection may cause overheating and device damage. Ensure that the terminals are properly connected before starting the WIT Inverter. Ensure the correct polarity of the terminals before connecting the PV array to the WIT Inverter. |
|---|---|



Maintenance and replacement:




| | |
|---|---|
|  DANGER | <ul style="list-style-type: none"> It must be operated by qualified and trained electrical technicians. Technicians should observe instructions in this manual and local regulations. After turning off the DC switches and the AC breakers, wait for at least five minutes before performing any operations to avoid risks. When the OLED screen indicates "PV Isolation low", do not touch the chassis as a ground fault may have been detected. Beware of high voltages which may cause electric shocks. |
|  WARNING | <ul style="list-style-type: none"> To ensure good dissipation, clean the fan regularly. Do not use the air pump to clean the fan. Otherwise, the fan may be damaged. |

Others:








| | |
|---|--|
|  | <ul style="list-style-type: none"> Upon receiving the product, check if the contents are intact and complete. If any damage is found or any component is missing, please contact your distributor. |
|  WARNING | <ul style="list-style-type: none"> The maximum PV input voltage cannot exceed 1100V. The battery input voltage cannot exceed 1000V. For the WIT Inverter that will not be put into operation in the future, you should properly dispose of them by yourself. |

2.2 Symbol Conventions

| Symbol | Description |
|---|--|
|  DANGER | DANGER indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury. |
|  WARNING | WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. |

| Symbol | Description |
|---|--|
|  CAUTION | CAUTION indicates a hazard with potential risk which, if not avoided, could result in minor or moderate injury. |
|  NOTICE | NOTICE indicates that under certain circumstances, improper operations could result in property damage. |
|  | Remind operators to check the instructions before installing or operating the WIT Inverter. |

2.3 Label Description

| Symbol | Name | Meaning |
|---|----------------------|--|
|  | High voltage | High voltages exist after the WIT Inverter is powered on. Only qualified and trained electrical technicians are allowed to perform operations. |
|  | Burn warning | Do not touch a running inverter because it generates high temperatures on the shell. |
|  | Grounding | Indicates the position for connecting the PE cable. |
|  | Delay discharge mark | Residual voltage exists after the WIT Inverter is powered off. It takes 5 minutes to discharge to the safe voltage. |
|  | Refer to the manual | Remind operators to refer to the manual before installing and operating the WIT Inverter. |
|  | DC | Direct Current. |
|  | AC | Alternating Current. |

3 Product Description

| | |
|--|--|
|  NOTICE | <p>The front view and the bottom view of all models are identical.</p> |
|--|--|

3.1 Overview

Front view:

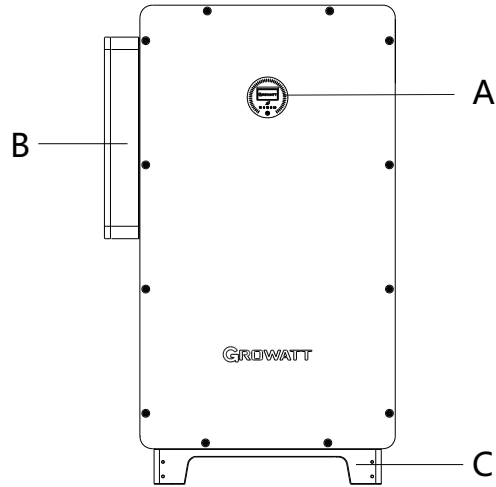


Fig 3.1 Front view

Bottom view:

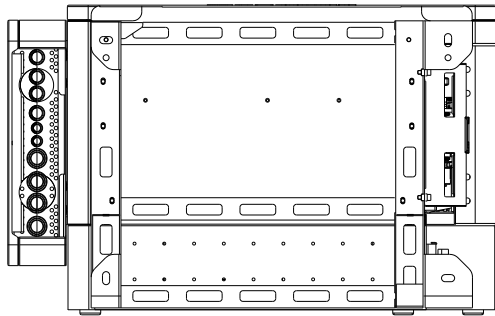


Fig 3.2 Bottom view

Left view:

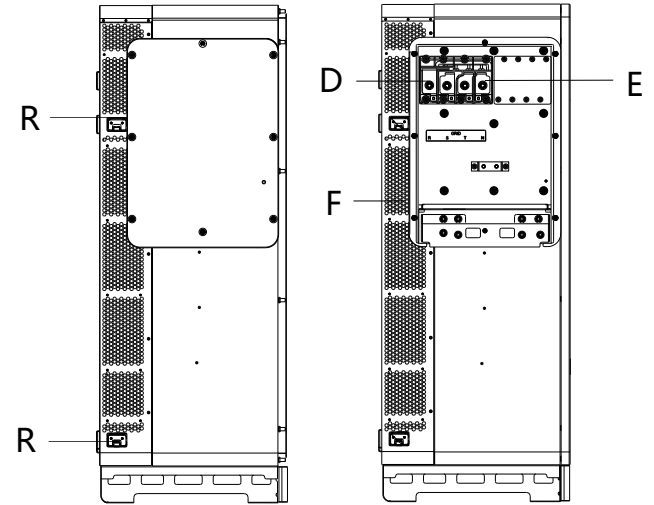


Fig 3.3 Left view of WIT 50-100K-A and WIT 50-100K-H

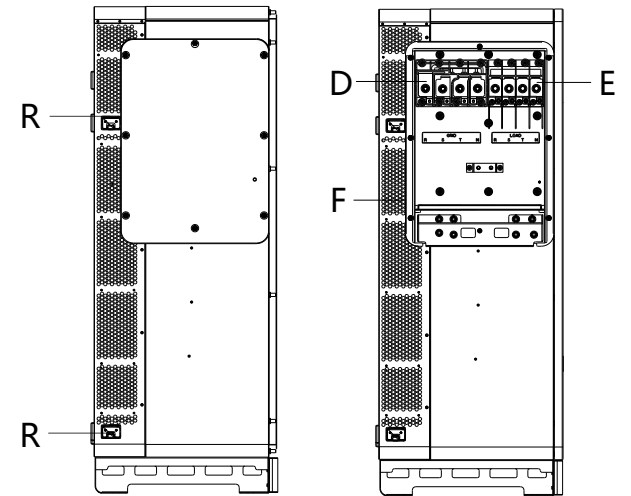


Fig 3.4 Left view of WIT 50-100K-AE, WIT 50-100K-AU, WIT 50-100K-HE and WIT 50-100K-HU

Right view:

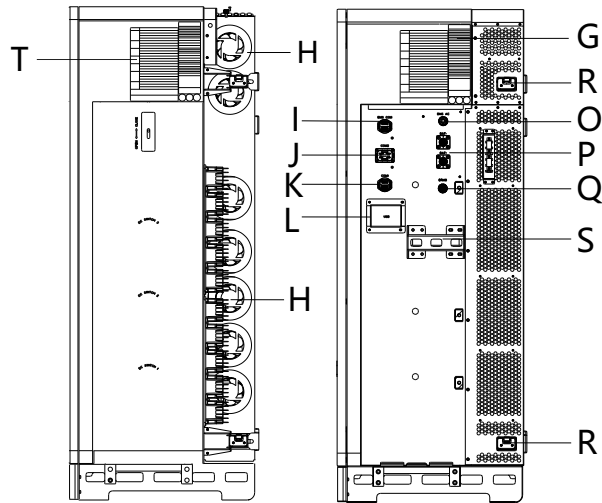


Fig 3.5 Right view of WIT 50-100K-A, WIT 50-100K-AE and WIT 50-100K-AU

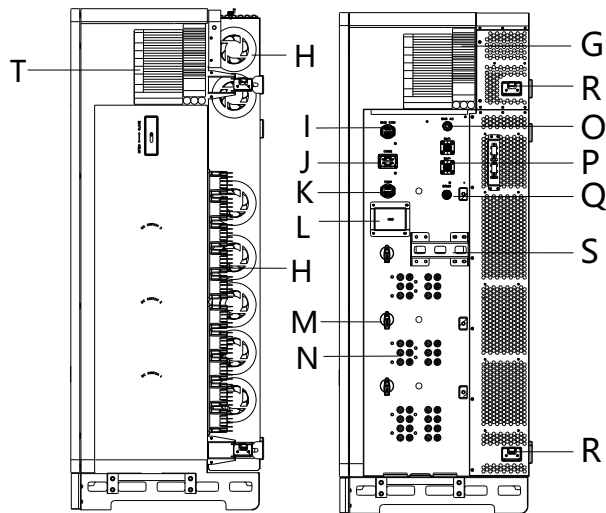


Fig 3.6 Right view of WIT 50-100K-H, WIT 50-100K-HE, WIT 50-100K-HU

Table 3.1 Component description

| No. | Description | No. | Description |
|-----|----------------------------------|-----|--------------------------------|
| A | Display | B | AC junction box |
| C | Base | D | Power grid connection terminal |
| E | Load wiring terminal | F | Heat sink |
| G | Nameplate | H | Fan |
| I | 16-pin terminal (BMS COM) | J | 30 pin terminal (COM2) |
| K | 16-pin terminal (COM1) | L | USB interface box |
| M | DC Switch | N | PV terminal |
| O | Battery supply terminal (BMS AC) | P | Battery terminal |
| Q | DRMS port | R | Flexible handle (4 groups) |
| S | Fixed handle | T | Indicator description label |

3.2 Basic Data

Table 3.2 Dimensions and weight

| | Model | Size (mm) | | | Weight (kg) |
|----------------------------------|----------------------|-----------|-------|-------|-----------------|
| | | Height | Width | Depth | |
| The WIT Inverter without package | WIT 50/63/75/100K-A | 1350 | 820 | 510 | 120/120/120/120 |
| | WIT 50/63/75/100K-H | | | | 133/133/140/140 |
| | WIT 50/63/75/100K-AE | | | | 130/130/130/130 |
| | WIT 50/63/75/100K-HE | | | | 143/143/150/150 |
| | WIT 50/63/75/100K-AU | | | | 140/140/140/140 |
| | WIT 50/63/75/100K-HU | | | | 153/153/160/160 |
| The WIT Inverter with package | WIT 50/63/75/100K-A | 1524 | 988 | 733 | 160/160/160/160 |
| | WIT 50/63/75/100K-H | | | | 173/173/180/180 |
| | WIT 50/63/75/100K-AE | | | | 170/170/170/170 |
| | WIT 50/63/75/100K-HE | | | | 183/183/190/190 |
| | WIT 50/63/75/100K-AU | | | | 180/180/180/180 |
| | WIT 50/63/75/100K-HU | | | | 193/193/200/200 |

3.3 Nameplate

The following figure shows the nameplate of WIT 100K-HU and WIT 100K-AU as examples. The nameplate figure is for reference only. The actual nameplate prevails. For detailed specifications, please refer to Section 10 Product Specifications.

| GROWATT Hybrid Inverter | |
|---------------------------------------|--------------------------|
| Model name | WIT 100K-HU |
| PV input data | |
| Max. PV voltage | 1100 d.c.V |
| MPPT voltage range | 180-800 d.c.V |
| PV Isc | 40 d.c.A*10 |
| Max. input current | 32 d.c.A*10 |
| AC input/output data | |
| Nominal input/output power | 200 KW/100 kW |
| Max. input/output apparent power | 200 kVA/110 kVA |
| Nominal voltage | 3W/N/PE 230/400 a.c.V |
| Max. input/output current | 303/166.7 a.c.A |
| Nominal frequency | 50/60 Hz |
| Power factor range | 1 leading~1 lagging |
| Backup power | |
| Nominal AC output power | 100 kW |
| Nominal AC output voltage | 230/400 a.c.V |
| Nominal AC output frequency | 50/60 Hz |
| Battery data | |
| Battery voltage range | 600-1000 d.c.V |
| Max. charging and discharging current | 167 d.c.A |
| Type of battery | Lithium-ion |
| Others | |
| Safety level | Class I |
| Ingress protection | IP66 |
| Operation ambient temperature | -30°C - +60°C |
| | |
| | |
| Made in China | |

| GROWATT Storage Inverter | |
|---------------------------------------|--------------------------|
| Model name | WIT 100K-AU |
| AC input/output data | |
| Nominal input/output power | 200 kW/100 kW |
| Max. input/output apparent power | 200 kVA/110 kVA |
| Nominal voltage | 3W/N/PE 230/400 a.c.V |
| Max. input/output current | 303/166.7 a.c.A |
| Nominal frequency | 50/60 Hz |
| Power factor range | 1 leading~1 lagging |
| Backup power | |
| Nominal AC output power | 100 kW |
| Nominal AC output voltage | 230/400 a.c.V |
| Nominal AC output frequency | 50/60 Hz |
| Battery data | |
| Battery voltage range | 600-1000 d.c.V |
| Max. charging and discharging current | 167 d.c.A |
| Type of battery | Lithium-ion |
| Others | |
| Safety level | Class I |
| Ingress protection | IP66 |
| Operation ambient temperature | -30°C - +60°C |
| | |
| | |
| Made in China | |

Fig 3.7 Nameplate

3.4 Operating Principle

3.4.1 Operating Principle of WIT 50-100K-A

- 1> Convert DC power into AC power consistent with the voltage and power quality requirements of the utility grid through an inverter circuit to supply power to the loads and feed power into the grid;
- 2> Convert AC power into DC power through a rectifying circuit to charge the battery

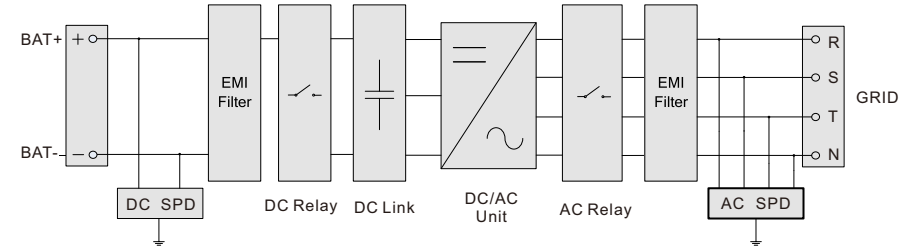


Fig 3.8 WIT 50-100K-A Grid-connected conceptual diagram

3.4.2 Operating Principle of WIT 50-100K-H

- 1> The Hybrid Inverter receives DC inputs from PV strings which go through the MPPT routes. The DC power is then converted into AC power through an inverter circuit to power the loads and feed power into the grid;
- 2> The PV strings can supply power to charge the battery through the MPPT routes;
- 3> Convert battery power to AC power supplies for the loads and feeding to the grid;
- 4> Charge the battery from the grid through a rectifier circuit.

NOTE: WIT 50K-H models have 7 MPPT routes. WIT 63K-H models have 8 MPPT routes. WIT 75K-H and WIT 100K-H models have 10 MPPT routes.

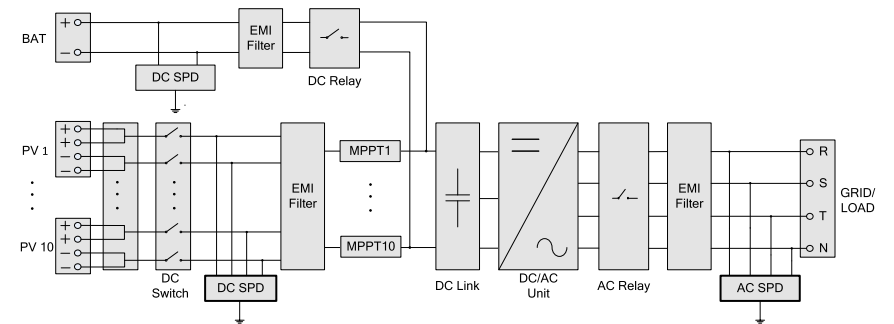


Fig 3.9 WIT 50-100K-H Grid-connected conceptual diagram

3.4.3 Operating Principle of WIT 50-100K-AE and WIT 50-100K-AU

- 1> Convert battery power to AC power supply for the loads or feeding the energy to the grid;
- 2> Charge the battery from the grid through a rectifier circuit;
- 3> Convert the battery power into AC power through the inverter circuit to provide power to critical loads.

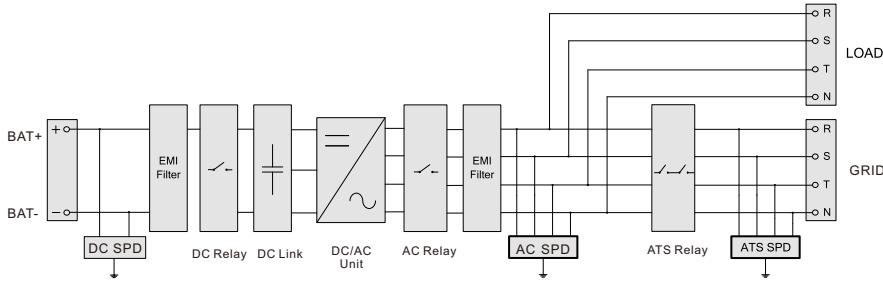


Fig 3.10 WIT 50-100K-AE and WIT 50-100K-AU Grid-connected conceptual diagram

3.4.4 Operating Principle of WIT 50-100K-HE and WIT 50-100K-HU

- 1> The Hybrid Inverter receives DC inputs from PV strings which go through the MPPT routes. The DC power is then converted into AC power through the inverter circuit to power the loads and feed power into the grid;
- 2> The PV strings can supply power to charge the battery through the MPPT routes;
- 3> Convert battery power to AC power for the loads and feeding to the grid;
- 4> Charge the battery from the grid through a rectifier circuit;
- 5> Convert DC input from PV strings and the battery power into AC power through the inverter circuit to power critical loads.

NOTE: WIT 50K-HE/-HU models have 7 MPPT routes. WIT 63K-HE/-HU models have 8 MPPT routes. WIT 75K-HE/-HU and WIT 100K-HE/-HU models have 10 MPPT routes.

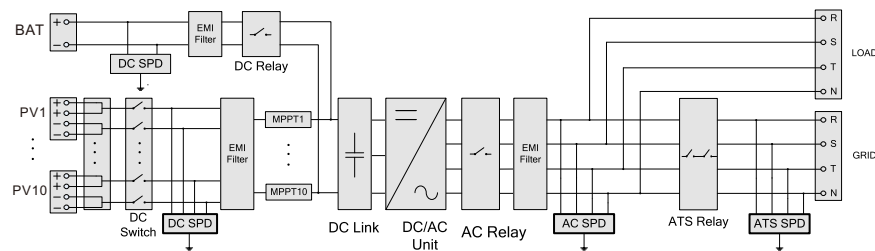


Fig 3.11 WIT 50-100K-HE and WIT 50-100K-HU Grid-connected conceptual diagram

3.5 Storing the WIT Inverter

- 1> Put the WIT Inverter in the original package and place it in a dry and well-ventilated place.
- 2> Keep the storage temperature from -30°C to $+70^{\circ}\text{C}$ and the humidity from 0%–95% RH.
- 3> A maximum of three WIT Inverters can be stacked. Do not stack inverters without package.
- 4> If the WIT Inverter has been long-term stored, inspections and tests should be conducted by qualified personnel before installation.



Wrong time and date may occur if the WIT Inverter has been stored for over one month. Fix the time and date before connecting the WIT Inverter to the grid. For details, see 7.2 Commissioning the WIT Inverter.

3.6 Supported Grid Types

Grid connection modes for WIT 50-100K Storage/Hybrid Inverters are shown in Figure 3.12.

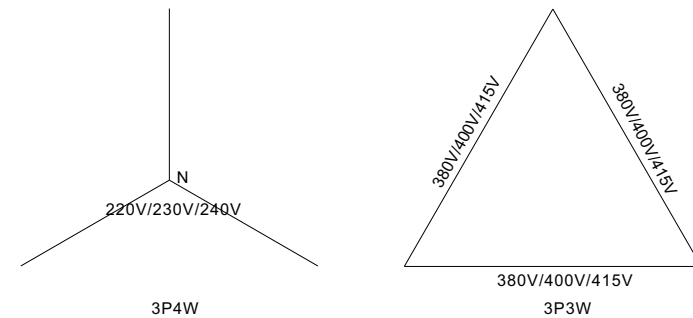


Fig3.12 380V /400V system(type Y/Δ)

3.7 AFCI Function

3.7.1 AFCI function description

An AFCI, or Arc-Fault Circuit Interrupter, is a solution designed to detect and mitigate the risk of electrical arcing in a photovoltaic (PV) system, supported by intelligent arc detection algorithm. Arcing can occur when there is a high voltage breakdown in the electrical insulation or when conductive materials come into contact with each other. This can pose a fire hazard and damage the system components. The AFCI continuously monitors the system for potential arc faults and, if detected, interrupts the circuit to prevent a fire or other damage. AFCIs are required by the National Electrical Code (NEC) in certain parts of a PV system, such as the DC side of the inverter, to improve safety and reduce the risk of fires.

NOTE:

1. The AFCI Function of the WIT Inverter is disabled by default. If you want to enable the AFCI, please contact Growatt support.
2. Do not connect the Maximum Power Point Trackers (MPPTs) on the DC side in parallel as it might trigger the AFCI mistakenly.

Inspection upon delivery 4

3.7.2 Clearing the alarm

In the event that the WIT Inverter reports "Error 200" and the PV indicator turns red, an arc fault might have been detected. Please perform the following steps to clear the alarm.

Step 1: Disconnect the WIT inverter from all power sources. Turn off the battery switch and the AC output circuit breaker, then turn the DC switches to the OFF position. Wait until the error message disappears.

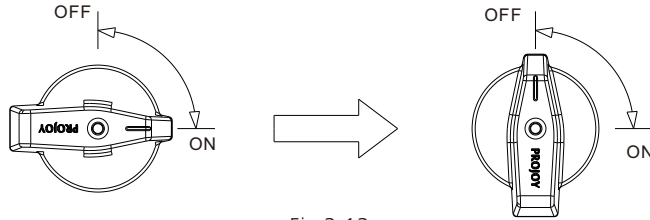


Fig 3.13

Step 2: Troubleshooting. Check if the open-circuit of all PV strings are within the permissible range.

Step 3: After the fault is rectified, restart the inverter. Turn on the battery switch and the AC breaker, and turn the DC switch to the ON position. Wait until the system is working properly.

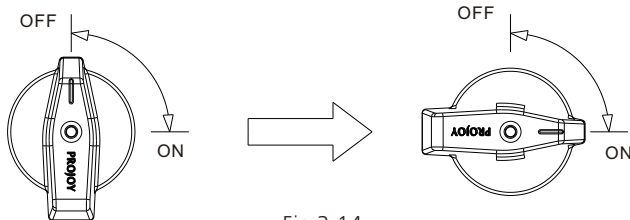


Fig 3.14

If the WIT Inverter passes the AFCI self-test, it will work in the normal mode and the PV indicator will be green. If it fails, the inverter will report "Error 425". In this case, please reboot the system and perform Step 1 to Step 3. If it failed again, please disconnect all power sources and contact Growatt support.

3.8 Anti-PID Function

PID refers to the potential induced degradation. It occurs when a large amount of charge accumulates on the surface of the PV modules, causing the surface passivation to deteriorate. This leads to a decrease in the fill factor, open-circuit voltage, short-circuit current, and the power output of the PV modules. The Anti-PID function enables the WIT Inverters to mitigate the PID effect by rectifying and boosting the AC voltage or battery voltage during nighttime to generate a DC voltage. The DC voltage is connected to the PV positive terminal and the ground, applying a positive bias to reverse the PID effect and extend the service life of the PV modules.

NOTE: The Anti-PID function is optional.

Unpacking and inspection

- 1> Before unpacking the WIT Inverter, check the shipping box for any externally visible damage. If any damage is found, contact the shipping company as soon as possible.
- 2> After unpacking the WIT Inverter, check if the scope of delivery is intact and complete. If any damage is found or any component is missing, contact your distributor. Check the following items:

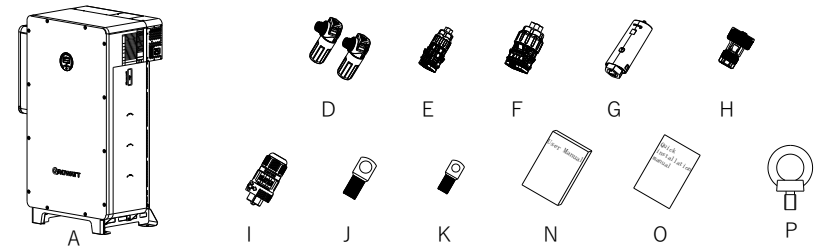


Fig 4.1 WIT 50-100K-A Scope of Delivery

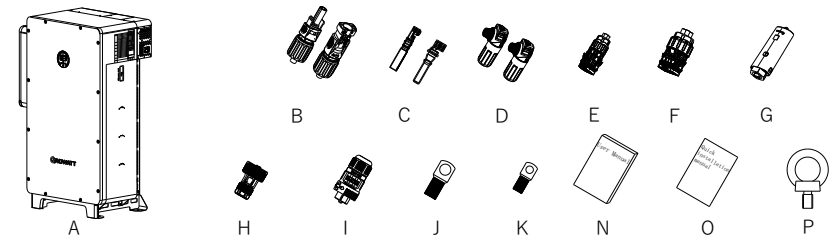


Fig 4.2 WIT 50-100K-H Scope of Delivery

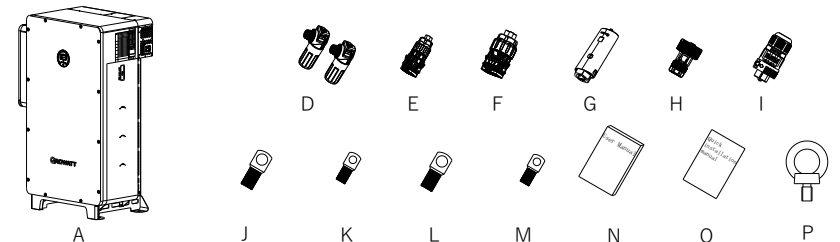


Fig 4.3 WIT 50-100K-AE, WIT 50-100K-AU Scope of Delivery

Installation 5

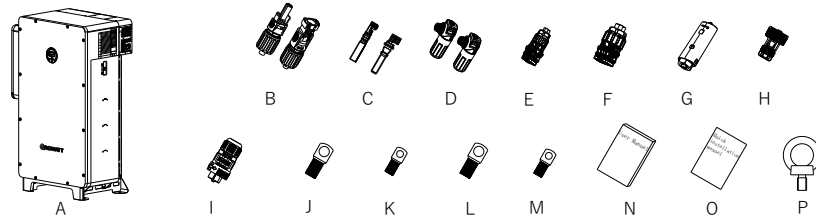


Fig 4.4 WIT 50-100K-HE, WIT 50-100K-HU Scope of Delivery

Table 4.1 Packing list

| No. | Description | Quantity |
|-----|--|----------|
| A | WIT Storage/Hybrid Inverter | 1 |
| B | PV+ connector, PV - connector | 20/20 |
| C | PV+ metal contact, PV- metal contact | 20/20 |
| D | Battery + terminal, Battery - terminal | 1/1 |
| E | 16-pin terminal | 2 |
| F | 30-pin terminal | 1 |
| G | Data logger | 1 |
| H | RJ45 connector protector | 1 |
| I | BMS power supply terminal | 1 |
| J | SC70-12 | 4 |
| K | SC50-8 | 1 |
| L | SC120-12 | 4 |
| M | SC70-8 | 1 |
| N | User manual | 1 |
| O | Quick Installation guide | 1 |
| P | Hoist ring | 2 |

NOTE:

1. The table above shows the packing list of the WIT 100K-HU Hybrid inverter as an example. For WIT 50-100K-H, WIT 50-100K-HE, WIT 50-100K-HU models, 14 pairs of PV connectors and 14 pairs of metal contacts are delivered with 50kW models; 16 pairs of PV connectors and 16 pairs of metal contacts are delivered with 63kW models; 20 pairs of PV connectors and 20 pairs of metal contacts are delivered with 75kW and 100kW models.
2. Sturdy and durable though the packing carton is, please carry and handle it with caution.

5.1 Basic Installation Requirements

- A. Ensure that the installation surface is solid enough to bear the weight of the WIT Inverter. (Refer to Table 3.2 for the weight of the WIT Inverter)
- B. Ensure that the installation position is suitable for the dimensions of the WIT Inverter.
- C. Do not install the WIT Inverter in areas with flammable or thermolabile materials.
- D. The WIT Inverter is protected to IP66 and can be installed indoors or outdoors.
- E. Do not expose the WIT Inverter to direct sunlight. Otherwise, excessive temperature may lead to power reduction.
- F. Keep the humidity at 0% to 95% RH.
- G. Keep the ambient temperature at -30°C to 60°C.
- H. The WIT inverter can only be vertically mounted on a flat ground or a vertical wall. Please refer to the following figures:

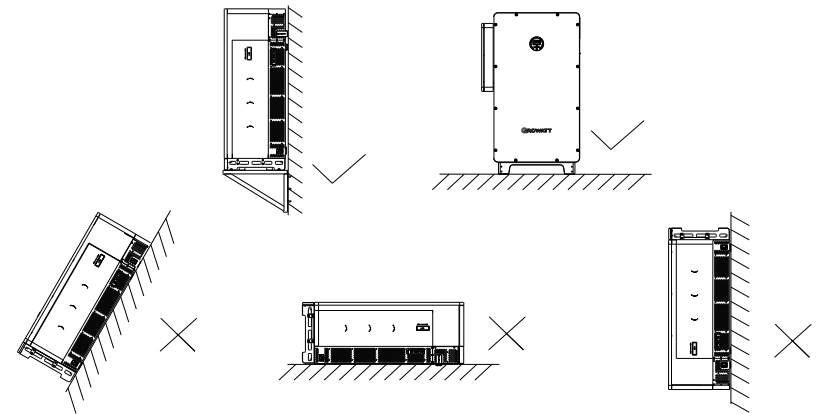


Fig 5.1

- I. Reserve enough clearance around the WIT Inverter to ensure sufficient space for heat dissipation and operation. Ensure that there are no objects within 1 m of the left, right and top of the WIT Inverter; In ground-mounted installation, keep the back of the chassis at least 0.1m away from the wall surface to ensure the optimal performance of the WIT Inverter.

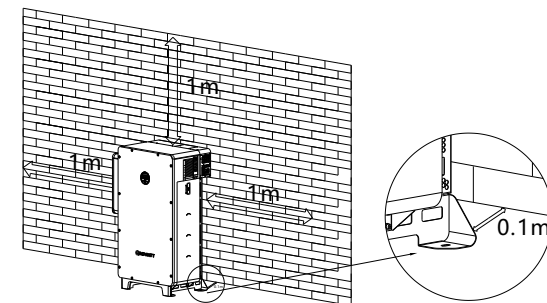


Fig 5.2

- J. Keep the WIT Inverter away from strong interference sources.
- K. Ensure that the WIT Inverter is not accessible to children.

5.2 Installation Environment Requirements

- A. Though the WIT Inverter is protected to IP66, do not expose it to direct sunlight, rain and snow. Please refer to the figures below:

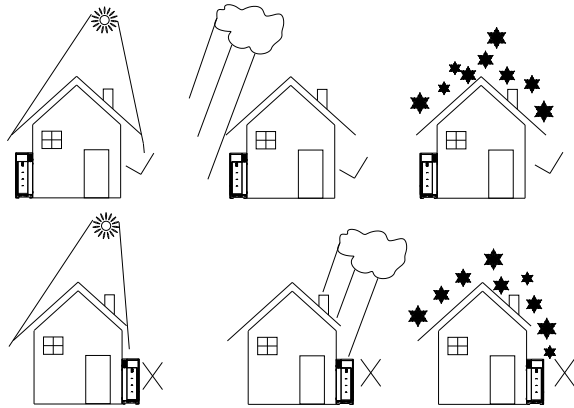


Fig 5.3

- B. It is recommended an awning be installed over the WIT Inverter to extend its service life and avoid performance de-rate. Ensure that a distance of at least 1 m exists between the frame of the awning and the top of the WIT Inverter and 1.5 m between the sides of the awning and the WIT Inverter. Please refer to the figures below.

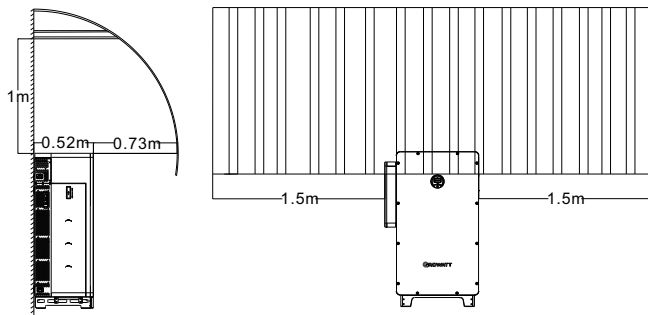


Fig 5.4

- C. Do not operate the WIT Inverter in an enclosed or narrow space.

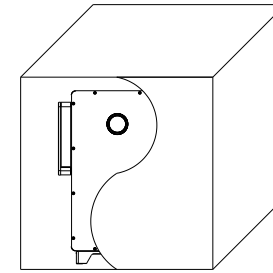


Fig 5.5

5.3 Moving the WIT Inverter



CAUTION

- To prevent personal injury caused by a falling inverter, keep balance and be careful when moving the WIT Inverter as it is heavy.

Plan 1 Hoisting:

- 1> As shown in Fig 5.6 below, unpack the WIT Inverter (remove the top panel and the support plates). Then piece the support plates together with the bottom panel. Install the hoisting rings and pull out the handles. Turn the WIT Inverter upright using the handles. Run a rope strong enough to bear the inverter through the hoisting rings and hoist the equipment, and then move the inverter to the installation position;
- 2> Keep balance when hoisting and moving the WIT Inverter.

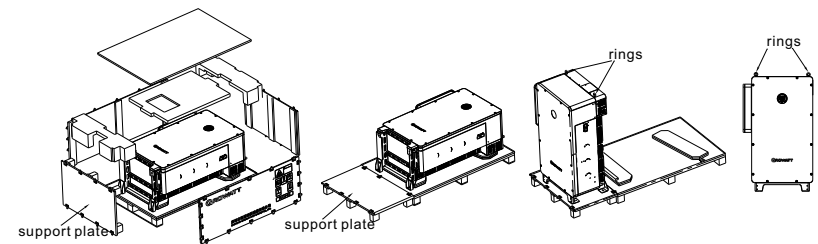


Fig 5.6 Hoisting the WIT Inverter

Plan 2 Forklift handling:

- 1> Unpack the WIT Inverter (remove the top panel and the support plates); turn the equipment upright (place it on a flat ground or a floor support);
- 2> As shown in Fig 5.7, operate the forklift to insert the tines into the pallet openings to lift the inverter and then transport it to the installation position. (the fork width should be less than 0.42 m);
- 3> Keep balance when lifting and moving the WIT Inverter.

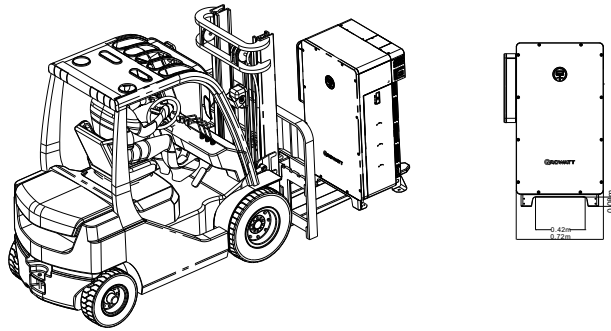


Fig 5.7 Moving the WIT Inverter with a forklift

Plan 3 Lifting:

- 1> Unpack the WIT Inverter (remove the top panel and the support plates) and pull out the handles, as shown in Fig 5.8 below. It requires four people to lift the WIT Inverter and move it to the installation position;
- 2> Keep balance when lifting and moving the WIT Inverter.


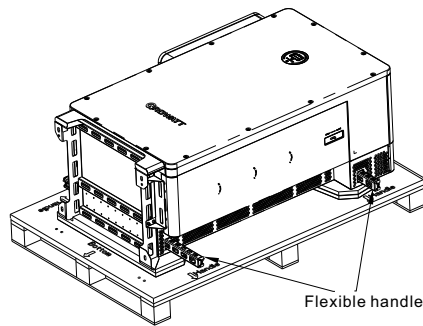


Fig 5.8 Lifting the WIT inverter

5.4 Mounting the WIT Inverter

5.4.1 Ground-mounting Installation

The WIT 50-100K Storage/Hybrid Inverters can be installed on the ground. Determine the hole positions using the marking-off template and drill holes into the ground. Insert nuts ($\varphi 12$) into the ground, and then place the inverter in the correct position and tighten the screws. The dimensions of the marking-off template are shown in Fig 5.9.

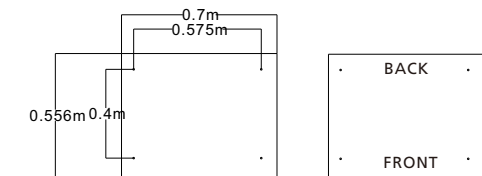

Dimensions of the marking-off template Marking-off template

Fig 5.9 Floor-mounting installation hole positions

Refer to figure 5.10 for floor-mounting installation.


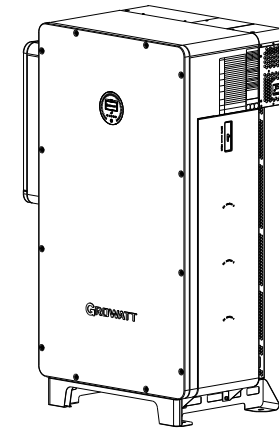


Fig 5.10 Floor-mounting installation

5.4.2 Wall-mounting Installation

The WIT 50-100K Storage/Hybrid Inverters can be mounted on the wall. For wall-mounted installation, you need to purchase the mounting bracket from Growatt. Determine the hole positions for installing the mounting bracket using the marking-off template and drill holes. Align the mounting bracket with the hole positions and insert nuts ($\varphi 12$) into the holes. Secure the mounting bracket by tightening the screws. Then install the WIT Inverter on the bracket and secure it to the wall. Please refer to Fig 5.11 for the dimensions of the marking-off template and Fig 5.12 for the wall-mounted installation diagram.

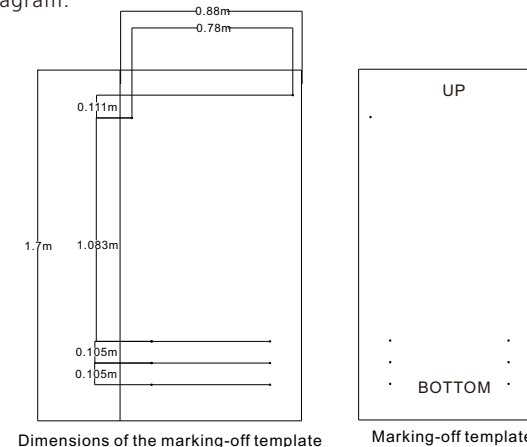

Dimensions of the marking-off template


Marking-off template

Fig 5.11 Marking-off template for wall-mounting installation

NOTE: The marking-off template and mounting bracket are optional accessories. Customers who purchase the mounting bracket will have a marking-off template delivered with the bracket.

Electrical Connection 6

A maximum of 7 PV strings can be connected to the WIT 50K Hybrid Inverter, 8 strings to the 63K model and 10 strings to the 75K and 100K models.

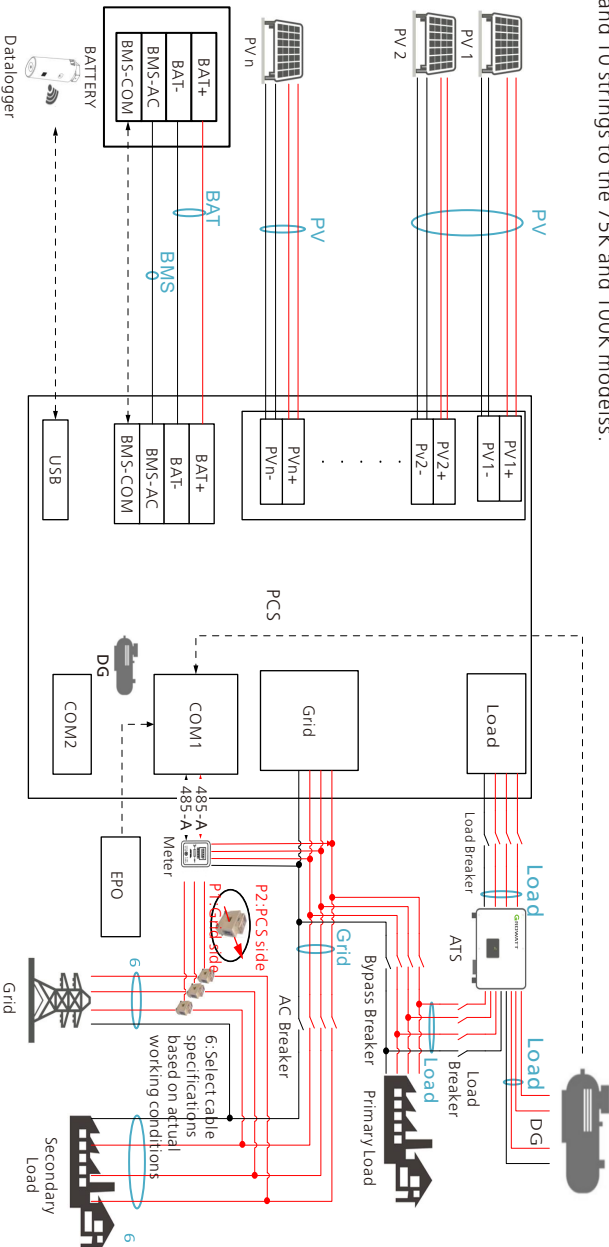

| | PV | BAT | BMS | Load | Grid | Load Breaker | AC Breaker | Bypass Breaker | | PV | BAT | BMS | Load | Grid | Load Breaker | AC Breaker | Bypass Breaker |
|-----|---------------------|--------------------|---------------------|--------------------|--------------------|--------------|------------|----------------|------|---------------------|--------------------|---------------------|--------------------|---------------------|--------------|------------|----------------|
| 50K | 4-6 mm ² | 50 mm ² | 1.5 mm ² | 35 mm ² | 95 mm ² | 150A | 300A | 150A | 75K | 4-6 mm ² | 50 mm ² | 1.5 mm ² | 70 mm ² | 150 mm ² | 250A | 400A | 250A |
| 63K | 4-6 mm ² | 50 mm ² | 1.5 mm ² | 35 mm ² | 95 mm ² | 150A | 300A | 150A | 100K | 4-6 mm ² | 50 mm ² | 1.5 mm ² | 70 mm ² | 150 mm ² | 250A | 400A | 250A |

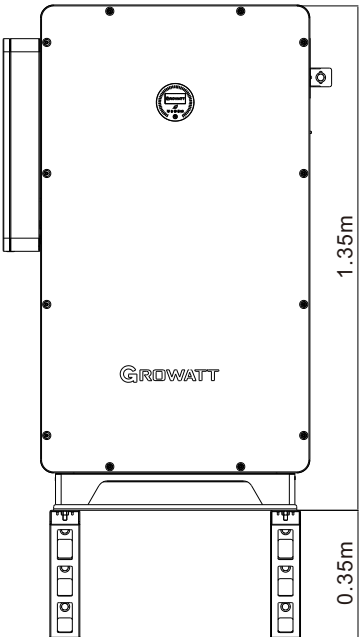



Fig 5.12 Wall-mounting installation

NOTICE Ensure that the wall meets the load-bearing requirements of the equipment. For details about the weight of the inverter, see Table 3.2.

Wiring diagram of the system with a single WIT 50-100K-HU inverter

| PV | BAT | BMS | Load Branch | Grid Branch | Load Branch (main) | Load Breaker1 | Load Breaker2 | AC Bypass Breaker | PV | BAT | BMS | Load Branch | Grid Branch (main) | Load Breaker1 | Load Breaker 2 | AC Bypass Breaker |
|-----|-----------------|-----------------|-----------------|-----------------|--------------------|---------------|---------------|-------------------|-----------------|-----------------|-----------------|-----------------|--------------------|-----------------|----------------|-------------------|
| 4-6 | 50 | 1.5 | 35 | 95 | 95 | 150A | 300A | 300A | 4-6 | 50 | 1.5 | 70 | 150 | 150 | 250A | 400A |
| 50K | mm ² | mm ² | mm ² | mm ² | mm ² | 150A | 300A | 300A | 4-6 | 50 | 1.5 | 70 | 150 | 150 | 250A | 400A |
| 63K | 4-6 | 50 | 35 | 95 | 95 | 150A | 300A | 300A | 4-6 | 50 | 1.5 | 70 | 150 | 150 | 250A | 400A |
| | mm ² | mm ² | mm ² | mm ² | mm ² | 150A | 300A | 300A | mm ² | mm ² | mm ² | mm ² | mm ² | mm ² | 250A | 400A |


Wiring diagram of the system with two WIT 50-100K-HU inverters connected in parallel

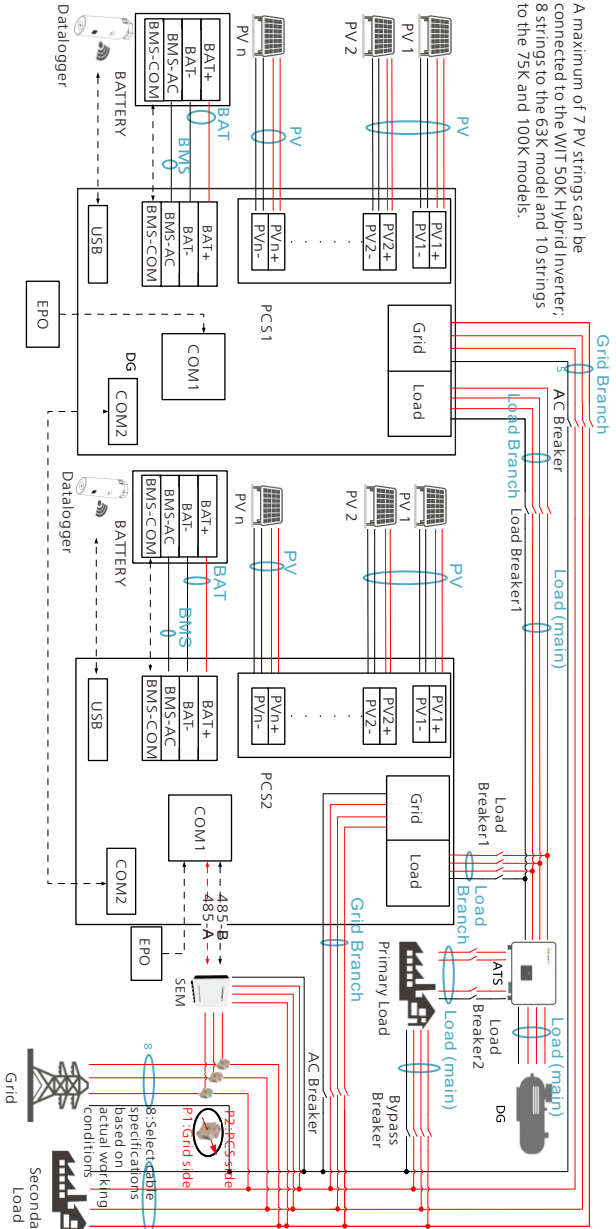

A maximum of 7 PV strings can be connected to the WIT 50K Hybrid Inverter; 8 strings to the 63K model and 10 strings to the 75K and 100K models.

| PV | BAT | BMS | Load Branch | Grid Branch (main) | Load Breaker1 | Load Breaker2 | AC Bypass Breaker | PV | BAT | BMS | Load Branch | Grid Branch (main) | Load Breaker1 | Load Breaker 2 | AC Bypass Breaker |
|-----|-----------------|-----------------|-----------------|--------------------|-----------------|---------------|-------------------|-----------------|-----------------|-----------------|-----------------|--------------------|-----------------|----------------|-------------------|
| 4-6 | 50 | 1.5 | 35 | 95 | 95 | 150A | 400A | 4-6 | 50 | 1.5 | 70 | 150 | 150 | 250A | 600A |
| 50K | mm ² | mm ² | mm ² | mm ² | mm ² | 150A | 400A | 4-6 | 50 | 1.5 | 70 | 150 | 150 | 250A | 600A |
| 63K | 4-6 | 50 | 35 | 95 | 95 | 150A | 400A | 4-6 | 50 | 1.5 | 70 | 150 | 150 | 250A | 600A |
| | mm ² | mm ² | mm ² | mm ² | mm ² | 150A | 400A | mm ² | mm ² | mm ² | mm ² | mm ² | mm ² | 250A | 600A |


Wiring diagram of the system with three WIT 50-100K-HU inverters connected in parallel

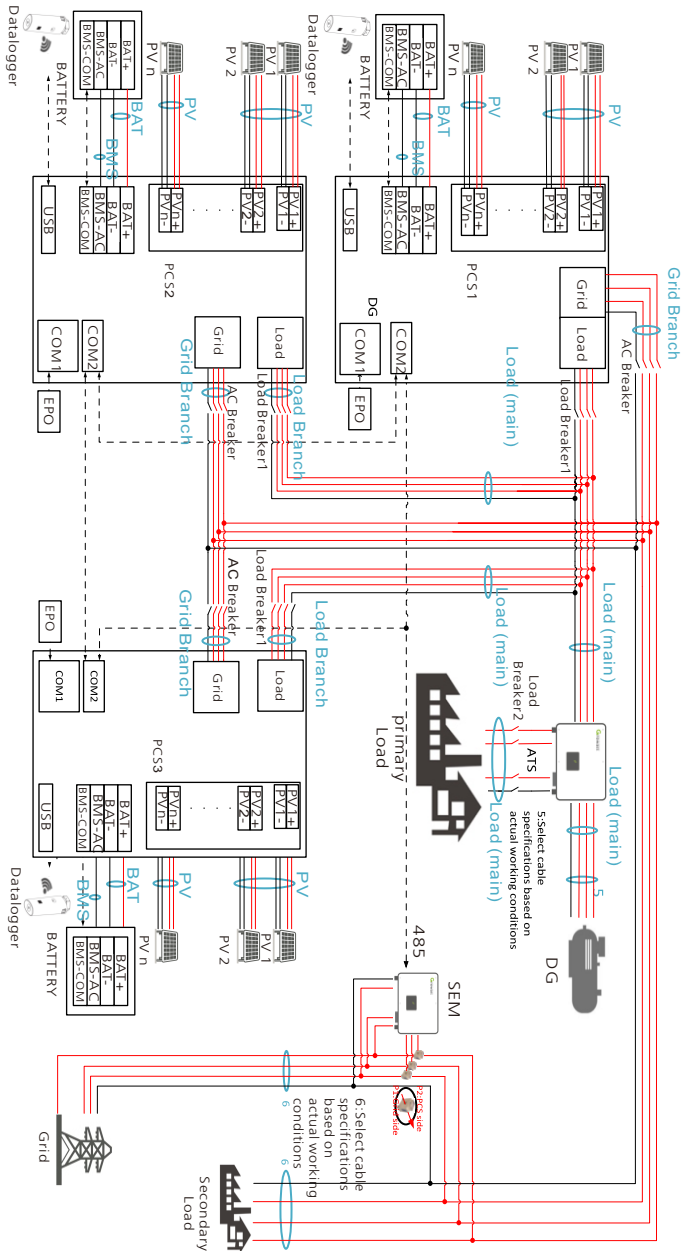

A maximum of 7 PV strings can be connected to the WIT 50K Hybrid Inverter; 8 strings to the 75K and 100K models.

| | | | | | | | | | | | | | | | | | |
|-----|---------------------|--------------------|---------------------|--------------------|--------------------|--------------|------------|----------------|--|---------------------|--------------------|---------------------|--------------------|---------------------|--------------|------------|----------------|
| | PV | BAT | BMS | Load | Grid | Load Breaker | AC Breaker | Bypass Breaker | | PV | BAT | BMS | Load | Grid | Load Breaker | AC Breaker | Bypass Breaker |
| 50K | 4-6 mm ² | 50 mm ² | 1.5 mm ² | 35 mm ² | 95 mm ² | 150A | 300A | 150A | | 4-6 mm ² | 50 mm ² | 1.5 mm ² | 70 mm ² | 150 mm ² | 250A | 400A | 250A |
| 63K | 4-6 mm ² | 50 mm ² | 1.5 mm ² | 35 mm ² | 95 mm ² | 150A | 300A | 150A | | 4-6 mm ² | 50 mm ² | 1.5 mm ² | 70 mm ² | 150 mm ² | 250A | 400A | 250A |

A maximum of 7 PV strings can be connected to the WIT 50K Hybrid Inverter; 8 strings to the 63K model and 10 strings to the 75K and 100K models.

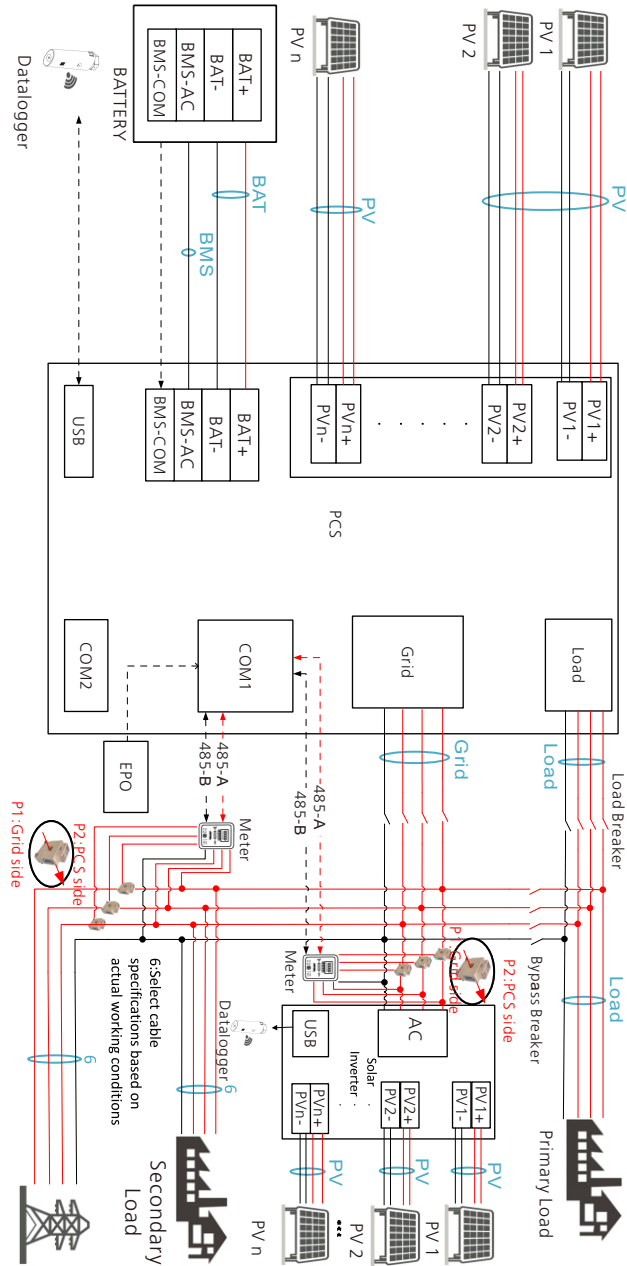

Wiring diagram of the system with a single WIT 50-100K-HU inverter and two meters

6.1 Connecting The Ground Cables

1. It is essential to connect the ground cable to the WIT inverter before connecting other cables to prevent personal injury or device damage.
2. All non-current-carrying metal parts and the enclosures of the devices of the energy storage system should be properly grounded, including the rack and the enclosures of the combiner box, the distribution panel, the inverter and the battery.
3. For a single WIT inverter, connect a ground cable to the ground point on the chassis shell. For a system with multiple WIT inverters connected in parallel, ensure that the enclosures of the WIT Inverters, the metal racks of the PV modules and the batteries are connected to the same area to achieve equipotential bonding.
4. The position of the ground points of the WIT 50-100K Storage/Hybrid Inverter is shown in Fig 6.1. You can find the ground points after removing the right cover plate.

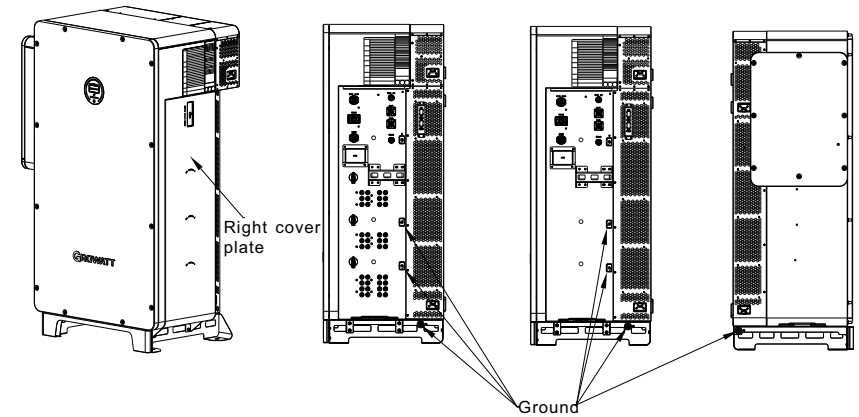




Fig 6.1 Ground points

NOTE:

1. Keep the lightning protection grounding at the greatest possible distance from the protective grounding.
2. Protect the terminals of the ground cables against rain and do not expose them to open air.
3. Tighten the enclosure grounding screw to a torque of 60 kgf-cm.

6.2 Connection on the AC Side

| | |
|---|--|
|  DANGER | <ul style="list-style-type: none"> • Before connecting cables, ensure that the DC switches on the WIT Inverter are OFF. Turn off the switches and breakers on the AC side and the battery side. Otherwise, the high voltages of the WIT Inverter may result in electric shocks. • Only qualified and trained electrical technicians are allowed to perform operations. Technicians must observe instructions in this manual and local regulations. • High voltages may cause electric shocks and serious injury. Please do not touch the inverter in operation. • Do not place inflammable and explosive materials around the WIT Inverter. |
|  WARNING | <ul style="list-style-type: none"> • Each WIT Inverter must be equipped with an AC circuit breaker. Multiple WIT Inverters cannot connect to the same AC circuit breaker (not applicable to off-grid mode). • Please do not connect loads between the WIT Inverter and the circuit breaker. • If the cable is thick, do not shake the cable terminals after tightening them. Otherwise, the loose connection may cause overheating that will damage the device. Ensure that the terminals are properly connected before powering on the WIT Inverter. • After connecting the cables, apply the fireproof mud evenly on the waterproof silica gel pad inside the AC junction box to prevent water from entering into the box. |

Preparation:

- 1> Ensure the grid voltage and the grid frequency are within the acceptable range;
- 2> Disconnect the DC switches and the breakers on the AC side and the battery side.

The circuit breaker on the AC side:

A circuit breaker needs to be installed on the AC side, ensuring a safe disconnection between the WIT Inverter and the upstream input when an exception occurs.

1. Recommended circuit breaker specifications for WIT 50-100K-A and WIT 50-100K-H models.

| Device type | Rated voltage of the circuit breaker | Rated current of the circuit breaker |
|---------------|--------------------------------------|--------------------------------------|
| WIT 50K-A/-H | 400V | 150A |
| WIT 63K-A/-H | 400V | 150A |
| WIT 75K-A/-H | 400V | 200A |
| WIT 100K-A/-H | 400V | 200A |

2. Recommended circuit breaker specifications for WIT 50-100K-AE, WIT 50-100K-AU, WIT 50-100K-HE and WIT 50-100K-HU models.

| Device type | Rated voltage of the circuit breaker | Rated current of the circuit breaker on the grid side | Rated current of the circuit breaker on the load side |
|-------------------------|--------------------------------------|---|---|
| WIT 50K-AE/-AU/-HE/-HU | 400V | 300A | 150A |
| WIT 63K-AE/-AU/-HE/-HU | 400V | 300A | 150A |
| WIT 75K-AE/-AU/-HE/-HU | 400V | 400A | 250A |
| WIT 100K-AE/-AU/-HE/-HU | 400V | 400A | 250A |

Recommended power cable specifications:

1. Recommended AC power cable specifications for WIT 50-100K-A and WIT 50-100K-H models.

| Device type | Recommended cable specification |
|---------------|---------------------------------|
| WIT 50K-A/-H | 35mm ² |
| WIT 63K-A/-H | 35mm ² |
| WIT 75K-A/-H | 70mm ² |
| WIT 100K-A/-H | 70mm ² |

2. Recommended AC power cable specifications for WIT 50-100K-AE, WIT 50-100K-AU, WIT 50-100K-HE and WIT 50-100K-HU models.

| Device type | Recommended cable specification on the grid side | Recommended cable specification on the load side |
|-------------------------|--|--|
| WIT 50K-AE/-AU/-HE/-HU | 95mm ² | 35mm ² |
| WIT 63K-AE/-AU/-HE/-HU | 95mm ² | 35mm ² |
| WIT 75K-AE/-AU/-HE/-HU | 150mm ² | 70mm ² |
| WIT 100K-AE/-AU/-HE/-HU | 150mm ² | 70mm ² |

NOTE: The wires should be tinned and are not frayed or cracked.

AC side connection steps:

1. Open the cover of the AC junction box. The position of the cover is shown in Fig 6.2;
2. Connect a ground cable to the copper grounding bar in the AC junction box. Fig 6.2 shows the position of the grounding bar inside the AC junction box;
3. Connect the main power cables according to the label. Fig 6.2 shows the position of the label and the AC terminals.

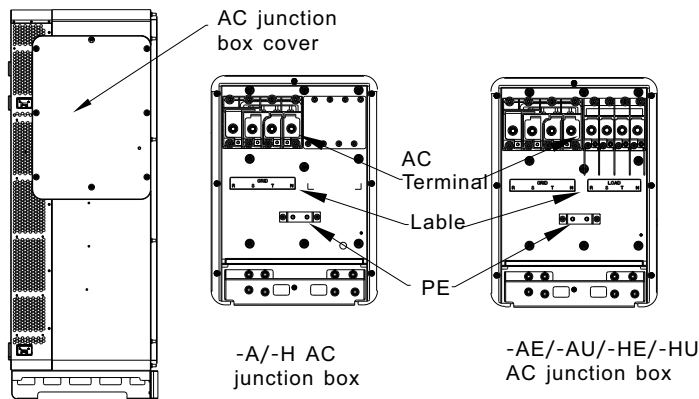


Fig 6.2 AC terminal wiring position and diagram

NOTE:

1. The waterproof silicone pad is used to protect the lower side of a terminal box. Cut holes in the pad according to the outer diameter of the cables to route them through. After routing through the cables, determine the cable stripped length based on the specifications of the terminals (18-22 mm is recommended). Crimp the cables and the terminals. See Figure 6.3 for crimping a cable;

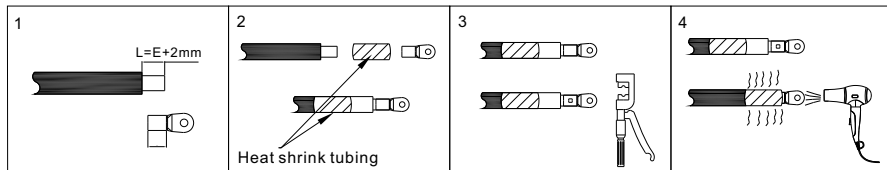


Fig 6.3 Crimping a cable

2. Cold-pressed terminals are delivered with the package. Select terminals based on the cable specifications;
3. WIT 50-100K-AE, WIT 50-100K-HE, WIT 50-100K-AU and WIT 50-100K-HU models have an additional type of terminal in the AC junction box compared with WIT 50-100KA and WIT 50-100K-H models. Connect cables according to the label ;
4. After connecting the cables, apply fireproof mud to the waterproof silicone mat at the inlet side. Lock the cover of the AC junction box after the fireproof mud is applied. See Fig 6.4 below.

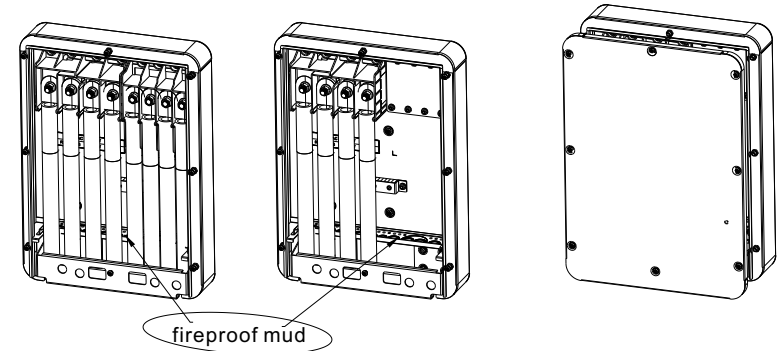


Fig 6.4 Applying fireproof mud

6.3 Connection on the PV Side

| | |
|-----------------------|--|
| <p>NOTICE</p> | <ul style="list-style-type: none"> • Only WIT 50-100K-H, WIT 50-100K-HE and WIT 50-100K-HU models need to be connected on the PV side. |
| <p>DANGER</p> | <ul style="list-style-type: none"> • Before connecting cables, ensure that the DC switches of the WIT Inverter are OFF, and turn off the breakers on the AC side and the battery side. Otherwise, the high voltages of the WIT Inverter may cause electric shocks. • Only qualified and trained electrical technicians are allowed to perform operations. Technicians must observe instructions in this manual and local regulations. • Check the positive and negative terminals for the correct polarity before connecting the PV module to the WIT Inverter. • High voltages may cause electric shocks and serious injury. Please do not touch the inverter in operation. • Please do not place inflammable and explosive materials around the WIT Inverter. |
| <p>WARNING</p> | <ul style="list-style-type: none"> • The maximum open-circuit voltage of each string should not exceed 1100Vdc. • Ensure that the following conditions are met; Otherwise, fire hazard or inverter damage may occur. Growatt is not liable for the consequence and it is beyond the warranty scope. |

NOTE:

1. The solar irradiance on the PV modules generates voltage. High voltages presented in the PV strings connected in series could be fatal. Therefore, shield the PV modules from sunlight before connecting the DC input power cable and ensure that the DC switches on the WIT Inverter are OFF.
2. The PV modules connected in series should be of the same model.
3. The maximum short-circuit current of each PV string must be lower than or equal to 40A.
4. The power of the PV panels should not exceed twice the input power of the WIT Inverter.
5. For optimal system configuration, it is recommended to connect two DC inputs with an equal number of PV modules.

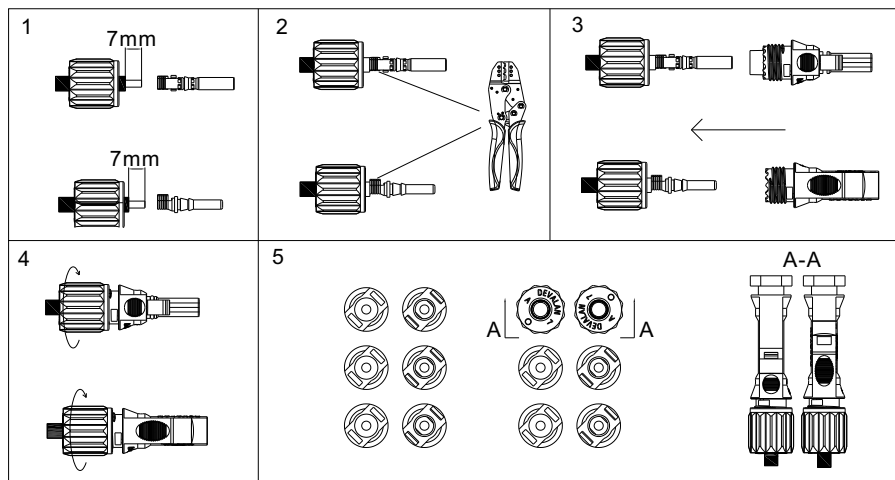


Fig 6.5 PV terminals

Procedure for connecting cables on the PV side:

1. Open the right cover plate of the WIT inverter, the position of which is shown in Fig 6.1;
2. Strip 6-8 mm of the insulation layer of the DC cables.
3. Insert the exposed core wires into the crimping area of the wiring terminal and crimp them using a crimping plier;
4. Route the cable through the cable sealing sleeve and insert the insulation sleeve until it snaps. Slightly pull the cable back to ensure that it is securely connected. Then tighten the locking nut;
5. Insert the positive and negative connectors of the PV modules to the corresponding terminals of the inverter. For the maximum input current of different models, please see Table 6.1. For the cable specifications, please see Table 6.2.

Table 6.1 Maximum current of a single MPPT route

| Device type | Max. current of a single MPPT route |
|----------------|-------------------------------------|
| WIT 50-100K-H | 16A*2 |
| WIT 50-100K-HE | 16A*2 |
| WIT 50-100K-HU | 16A*2 |

Table 6.2 Cable specifications on the PV side

| Device type | Recommendation cable specifications |
|----------------|-------------------------------------|
| WIT 50-100K-H | 4-6mm ² |
| WIT 50-100K-HE | 4-6mm ² |
| WIT 50-100K-HU | 4-6mm ² |

NOTE:

1. For a single WIT Inverter, connect the ground cable of the inverter. For a system with multiple WIT Inverters connected in parallel, connect the ground cables of all inverters and the metal racks of the PV modules to the same area to ensure equipotential bonding. Before connecting the PV cables, ensure that the ground cables on the PV side are properly connected.
2. Use male and female connectors in pair. Ensure the correct polarity before connecting the PV string to the inverter.
3. The total current of all strings cannot exceed the WIT Inverter's maximum input current;
4. Do not touch the solar panels in operation;
5. The wires should be tinned and are not frayed or cracked.

6.4 Connection on the Battery Side

| | |
|--------------------|---|
| DANGER | <ul style="list-style-type: none"> • Before connecting cables, ensure that the DC switches of the WIT Inverter are OFF, and turn off the breakers on the AC side and the battery side. Otherwise, the high voltages of the WIT Inverter may cause electric shocks. • Only qualified and trained electrical technicians are allowed to perform operations. Technicians must observe instructions in this manual and local regulations. • High voltages may cause electric shocks and serious injury. Please do not touch the inverter in operation. • Please do not place inflammable and explosive materials around the WIT Inverter. |
| WARNING | <ul style="list-style-type: none"> • If the cable is thick, do not shake the cable after fastening it. Ensure that all cables are securely connected before powering on the WIT Inverter. Loose connection may cause overheating that will damage the device. |

Note:

1. The recommended battery voltage range is 600V to 1000V.
2. You are advised to install a DC circuit breaker between the battery and the WIT inverter.

6.4.1 Connecting the Main Power Cable of the Battery

Preparation:

1. Check that the battery terminals of the WIT Inverter are intact;
2. Disconnect the DC switches on the WIT inverter, the AC breaker and the DC switch on the battery;
3. Take out the battery terminals from the accessory kit delivered with the package. See Packing list in Section 4;
4. Open the cover plate on the right side of the inverter, the position of which is shown in Fig 6.1.

Procedure for connecting the main battery power:

1. Connect the ground cable to the battery power ground bar, as shown in Fig 6.6;
2. Strip 18-20 mm of the insulation layer of the DC cables;
3. Crimp the battery cables and the battery terminals using crimping pliers, and then tighten the insulation sleeve;
4. Connect the battery cables to the battery terminals on the inverter, as shown in Fig 6.6;
5. After connecting the main battery power cables, bind power cables at the reserved position, as shown in Fig 6.6.

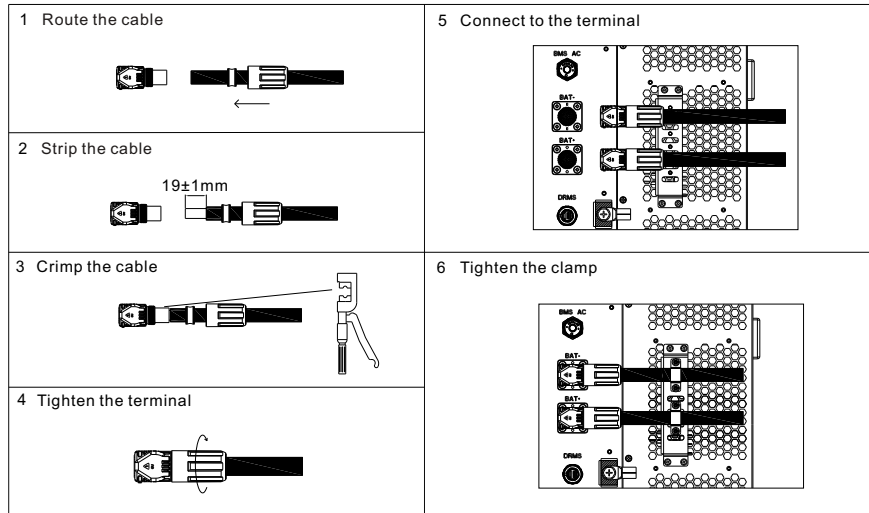


Fig 6.6 Position of the battery terminals

NOTE:

1. Connect the ground cable before connecting the battery cable; the ground point is shown in Fig 6.6.
2. Bind the battery power cables at the designated place after connecting them to the WIT Inverter.
3. Lock the right cover plate after connecting the cables.

6.4.2 Connecting the Battery BMS-AC Terminal

NOTE: Perform operations according to on-site requirements.

Procedure for connecting the battery BMS-AC terminal:

1. Open the cover plate on the right side of the inverter, the position of which is shown in Fig 6.6;
2. Find the corresponding terminal from the accessory kit. Refer to Table 6.3 to connect the terminal;
3. Remove the dustproof cover from the BMS-AC terminal, insert the terminal that has been crimped with the cables to the BMS-AC terminal, and tighten it.

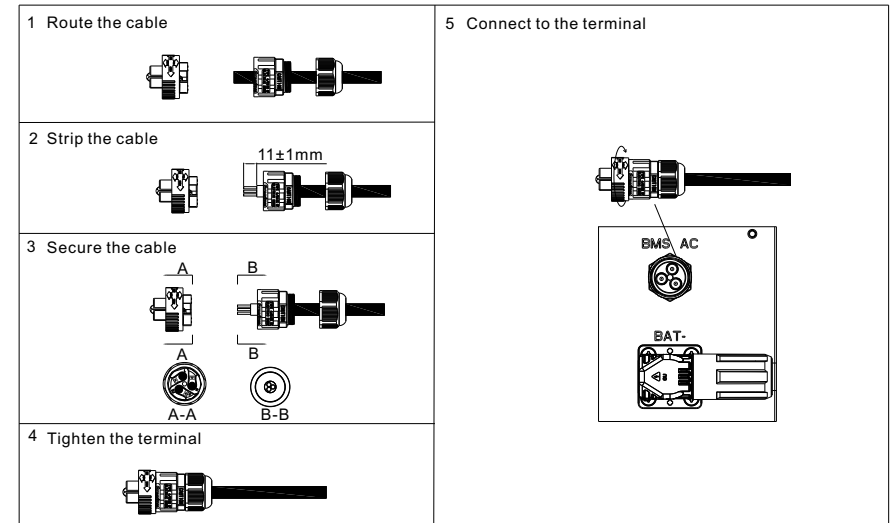


Fig 6.7 BMS-AC terminal

Table 6.3 Definitions of BMS-AC terminal

| BMS-AC terminal port definition | | |
|---------------------------------|----------------------|-------------------------|
| Number | Definition of signal | Note |
| 1 | L | Supply power to the BMS |
| 2 | N | |
| 3 | PE | Grounding |

NOTE:

1. Do not touch or remove the dustproof cover if the BMS-AC terminal is idle.
2. Reinstall the battery protective plate and the right cover plate after the cable connection is completed.

6.5 Connecting Communications Cables

6.5.1 Battery Communication Connection

The BMS-COM terminal of the WIT 50-100K Inverter is a 16-pin connector. The matching male terminal are delivered with the package.

1. Connect the communication cables to the corresponding terminals as required. For details, see Table 6.4;
2. Remove the dustproof cover from the BMS-COM terminal, insert the 16-pin terminal (the client side) to the corresponding position, and ensure that it is tightly connected;

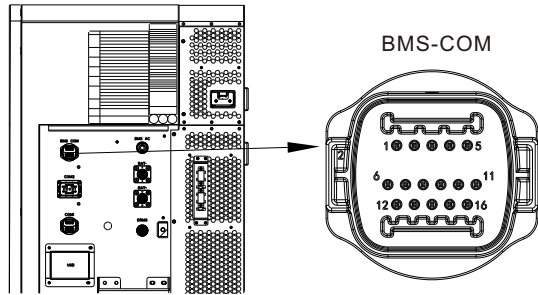


Fig 6.8 BMS-COM communication terminals

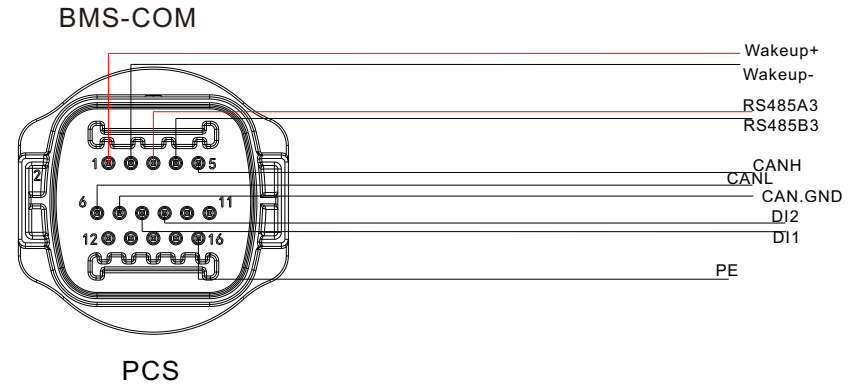


Fig 6.9 BMS-COM communication connection

Table 6.4 Battery communication terminal description

| Definition of battery communication terminal | | |
|--|----------------------|---|
| Number | Definition of signal | Note |
| 1 | Wakeup+ | Battery wake up signal |
| 2 | Wakeup- | |
| 3 | RS485A3 | The PCS communicates with the battery via RS485 |
| 4 | RS485B3 | |
| 5 | CANH | The PCS communicates with the battery via CAN |
| 6 | CANL | |
| 7 | CAN.GND | |
| 8 | D11 | Battery shutdown input signal |
| 9 | D12 | |
| 10 | NA | NA |
| 11 | NA | |
| 12 | NA | |
| 13 | NA | |
| 14 | NA | |
| 15 | NA | |
| 16 | PE | Grounding |

6.5.2 External Communication connection

NOTE:

When connecting external devices, such as the PC, please use isolated communication devices.

The external communication terminal of the WIT Inverter is a 16-pin connector. The matching terminal is in the accessory kit. The connection procedure is as follows:

1. Connect the communication cable to the corresponding terminal as required. For details, see Table 6.5;
2. Remove the dustproof cover from the COM1 terminal and insert the 16-pin terminal (the client side) to the corresponding position;

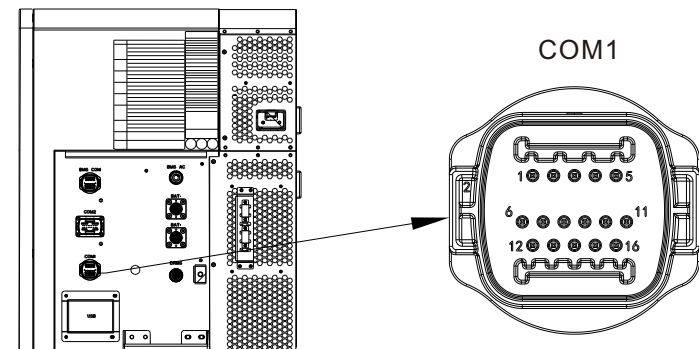


Fig 6.10 External communication terminal

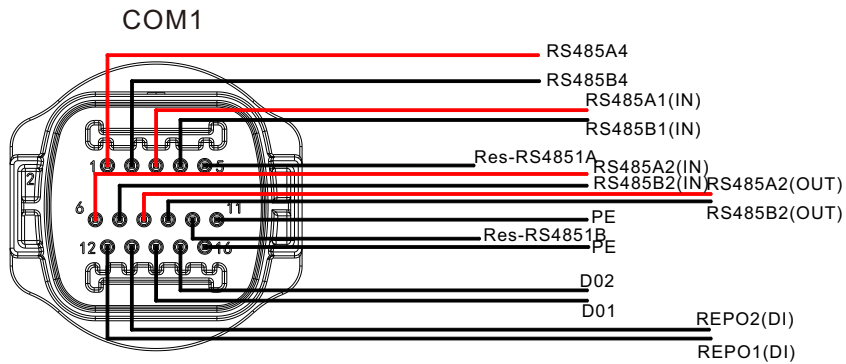


Fig 6.11 COM1 communication connection

3. The external communication terminals of the WIT 50-100K Inverters are described in Table 6.5. Short Pin 5 and pin 10 when the host computer is used.

Table 6.5 External communication terminal description

| Definition of battery communication interface | | |
|---|----------------------|--|
| Number | Definition of signal | Note |
| 1 | PCS_RS485A_4 | RS485_4 |
| 2 | PCS_RS485B_4 | |
| 3 | RS485A1 | RS485 terminal for external communication |
| 4 | RS485B1 | |
| 5 | Res_RS4851A | RS485 matching resistor |
| 6 | RS485A2 | RS485 input port for the meter |
| 7 | RS485B2 | |
| 8 | RS485A2 | RS485 output port for the meter |
| 9 | RS485B2 | |
| 10 | Res_RS4851B | RS485 matching resistor |
| 11 | PE | Grounding |
| 12 | REPO1 | The WIT Inverter shutdown input dry contact signal |
| 13 | REPO2 | |
| 14 | DO1 | Generator start-up output dry contact signal |
| 15 | DO2 | |
| 16 | PE | Grounding |

6.5.3 Parallel Communication Connection

The parallel communication terminal (COM2) of the WIT Inverter uses a 30-pin terminal. The corresponding terminal is included in the accessory kit. Follow these steps to establish the connection:

1. Connect the communication cables to the corresponding terminals as required. For details, see Table 6.6 and Table 6.7;
2. Remove the dustproof cover from the COM2 terminal and insert the 30-pin terminal (the client side) to the corresponding position.



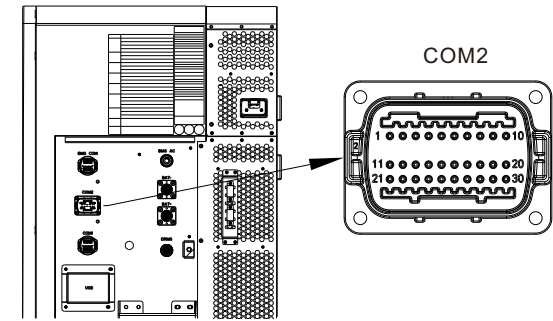


Fig 6.12 Parallel communication terminal

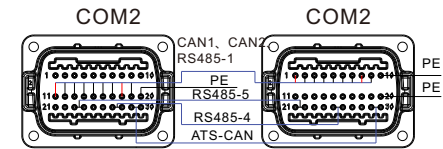

Parallel communication wiring diagram (dual PCS)

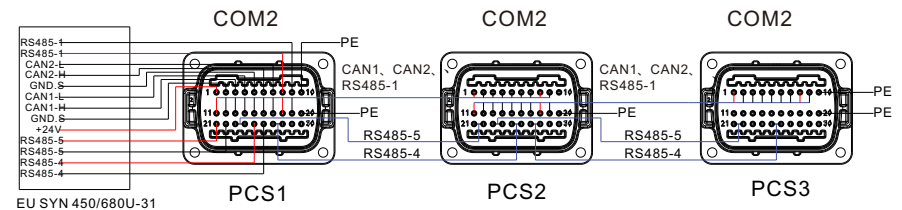

Parallel communication wiring diagram (three PCS)

Fig 6.13 COM2 communication connection

Table 6.6 Parallel communication terminal description

| Pin definition of the parallel communication terminal (WIT 50-100K-A and WIT 50-100K-H) | | |
|--|----------------------|--|
| Number | Definition of signal | Note |
| 1 | 24V.S | Output 24V signal |
| 2 | GND.S | |
| 3 | CAN1_H | Parallel communication CAN1 signal (input) |
| 4 | CAN1_L | |
| 5 | GND.S | |
| 6 | CAN2_H | Parallel communication CAN2 signal (input) |
| 7 | CAN2_L | |
| 8 | RS485_1A | Parallel communication 485-1 signal (input) |
| 9 | RS485_1B | |
| 10 | PE | Grounding |
| 11 | 24V.S | Output 24V signal |
| 12 | GND.S | |
| 13 | CAN1_H | Parallel communication CAN1 signal (output) |
| 14 | CAN1_L | |
| 15 | GND.S | |
| 16 | CAN2_H | Parallel communication CAN2 signal (output) |
| 17 | CAN2_L | |
| 18 | RS485_1A | Parallel communication 485 signal (output) |
| 19 | RS485_1B | |
| 20 | PE | Grounding |
| 21 | RS485_5A | Low frequency synchronization 485 signal(input) |
| 22 | RS485_5B | |
| 23 | RS485_5A | Low frequency synchronization 485 signal (output) |
| 24 | RS485_5B | |
| 25 | RS485_4A | Parallel RS4854_4 communication (input) (PCS) |
| 26 | RS485_4B | |
| 27 | RS485_4A | Parallel RS4854_4 communication (output) (PCS) |
| 28 | RS485_4B | |
| 29 | NA | NA |
| 30 | NA | |

Table 6.7 Parallel communication terminal description

| Pin definition of the parallel communication terminal (WIT 50-100K-HE, WIT 50-100K-HU, WIT 50-100K-AE, WIT 50-100K-AU) | | |
|---|----------------------|---|
| Number | Definition of signal | Note |
| 1 | 24V.S | Output 24V signal |
| 2 | GND.S | |
| 3 | CAN1_H | Parallel communication CAN1 signal (input) |
| 4 | CAN1_L | |
| 5 | GND.S | |
| 6 | CAN2_H | Parallel communication CAN2 signal (input) |
| 7 | CAN2_L | |
| 8 | RS485_1A | Parallel communication RS485 signal (input) |
| 9 | RS485_1B | |
| 10 | PE | Grounding |
| 11 | 24V.S | Output 24V signal |
| 12 | GND.S | |
| 13 | CAN1_H | Parallel communication CAN1 signal (output) |
| 14 | CAN1_L | |
| 15 | GND.S | |
| 16 | CAN2_H | Parallel communication CAN2 signal (output) |
| 17 | CAN2_L | |
| 18 | RS485_1A | Parallel communication 485 signal (output) |
| 19 | RS485_1B | |
| 20 | PE | Grounding |
| 21 | RS485_5A | Low frequency sync 485 signal (input) |
| 22 | RS485_5B | |
| 23 | RS485_5A | Low frequency sync 485 signal (output) |
| 24 | RS485_5B | |
| 25 | RS485_4A | Parallel RS4854_4 communication (input) |
| 26 | RS485_4B | |
| 27 | RS485_4A | Parallel RS4854_4 communication (output) |
| 28 | RS485_4B | |
| 29 | ATS-CAN205_H | Parallel communication CAN signal |
| 30 | ATS-CAN205_L | |

6.5.4 Monitoring Device Terminal

The WIT inverter is equipped with a USB port that allows for remote monitoring when connected to a monitoring device, such as a USB-to-WiFi module, ShineWiFi-X, Shine4G-X, ShineLan-X, and others. Additionally, you can perform software updates using a USB flash drive.

1. Remove the waterproof cover from the USB port.
2. Insert the USB-to-WiFi module, ensuring that the triangle icon is facing upward, and then secure it by tightening the screw, as shown in Fig 6.14. If the module is working properly, its LED indicator will light up.

NOTE: Before you leave, please ensure that the monitoring device is removed and the protective cover should be reinstalled to avoid any water damage.

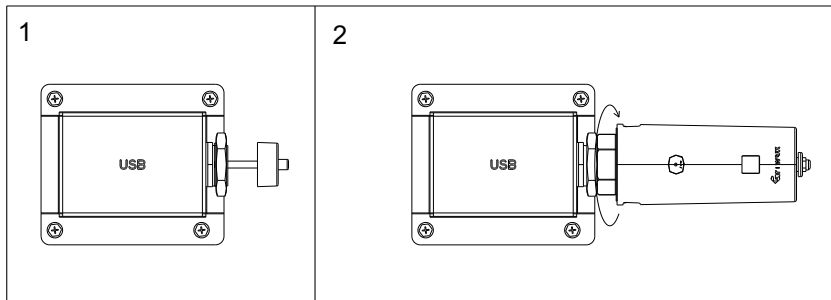


Fig 6.14 Connecting the monitoring device

6.5.5 DRMS Port

The WIT inverter comes with a DRMS port. Users can choose to connect to this terminal if required by local regulations. The connection procedure is as follows:

1. Connect the communication cable to the port as required. The DRMS port is a standard RJ45 connector, so you can establish a connection following the typical Ethernet wiring method.
2. Remove the dustproof cover from the DRMS port and check whether there is a waterproof silica gel pad. Insert the cable and tighten the rubber ring to prevent any loose connections.
3. Once the cable connection is complete, reinstall the dustproof cover. Table 6.8 describes the DRM requirements.

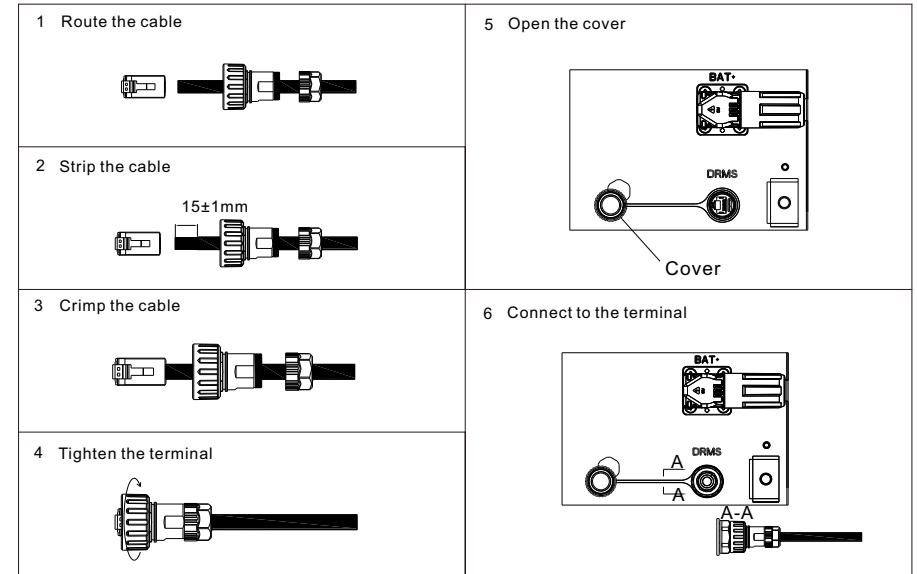


Fig 6.15 DRMS port

Table 6.8 Demand Response Modes (DRMs)

| Mode | Socket asserted by shorting pins | Requirement |
|------|----------------------------------|---|
| DRM0 | 5, 6 | Operate the disconnection device |
| DRM1 | 1, 6 | Do not consume power |
| DRM2 | 2, 6 | Do not consume at more than 50% of rated power |
| DRM3 | 3, 6 | Do not consume at more than 75% of rated power AND Source reactive power if capable |
| DRM4 | 4, 6 | Increase power consumption (subject to constraints from other active DRMs) |
| DRM5 | 1, 5 | Do not generate power |
| DRM6 | 2, 5 | Do not generate at more than 50% of rated power |
| DRM7 | 3, 5 | Do not generate at more than 75% of rated power AND Sink reactive power if capable |
| DRM8 | 4, 5 | Increase power generation (subject to constraints from other active DRMs) |

6.6 Post-installation Checks

The following table lists the post-installation items to be checked:

| Position | Item | Check item |
|--------------|---------------------------------------|---|
| | Ground cable connected to the chassis | Check the cable specifications; ensure that the cable has been securely fastened |
| AC side | Ground cable on the AC side | Check the cable specifications; ensure that the cable has been securely fastened |
| | Grid side (-AE/-AU/-HE/-HU) | Check the cable specifications; ensure that the cable has been securely fastened |
| | Load side | Check the cable specifications; ensure that the cable has been securely fastened |
| | Waterproof silica gel pad | No gaps; the fireproof mud has been evenly applied |
| | AC junction box cover | Install the cover after the items on the AC side are checked |
| PV side | Ground cable on the PV side | Check the cable specifications; ensure that the cable has been securely fastened |
| | PV+/PV- | Check the cable specifications; ensure that the cable has been securely fastened; confirm that the number of PV modules matches the rated power |
| Battery side | Ground cable on the battery side | Check the cable specifications; ensure that the cable has been securely fastened |
| | BAT+/BAT- | Ensure that the positive and negative terminals are connected correctly and securely; the sealing rubber ring is properly seated into the gland |
| | BMS-AC | Ensure that the connection is correct and secured; the sealing rubber ring is properly seated into the gland |
| | Cable bundling | The cables are bundled in the specified position |

| Position | Item | Check item |
|-------------------------|-------------------|--|
| Communication terminals | BMS-COM | Ensure that the connection is correct and secured; the sealing rubber ring is properly seated into the gland |
| | COM1 | Ensure that the connection is correct and secured; the sealing rubber ring is properly seated into the gland |
| | COM2 | Ensure that the connection is correct and secured; the sealing rubber ring is properly seated into the gland |
| | USB | Ensure that the connection is correct and secured; the sealing rubber ring is properly seated into the gland |
| | DRMS | Ensure that the connection is correct and secured; the sealing rubber ring is properly seated into the gland |
| Cover plate | Right cover plate | Reinstall the right cover plate after all the items are checked. |


7 Commissioning

7.1 Powering on/off the System


1. Turn the DC switches on the WIT Inverter to the "ON" position.
2. Turn on the breaker between the grid and the inverter.
3. Turn on the breaker between the battery and the inverter, then turn on the switch on the battery to power it on.
4. Once the start-up requirements of all terminals are fulfilled, the system will be powered on automatically.

To shut down the system, please send a shutdown command on the APP or the webpage prior to performing any operations on the device. Then perform the steps in reverse order as described above.

APP:

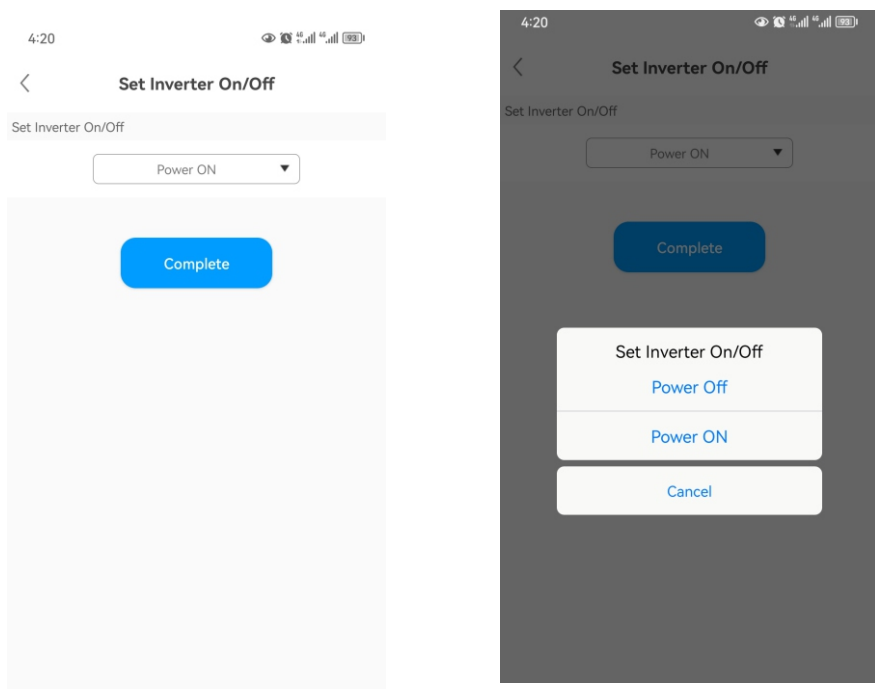

Webpage:

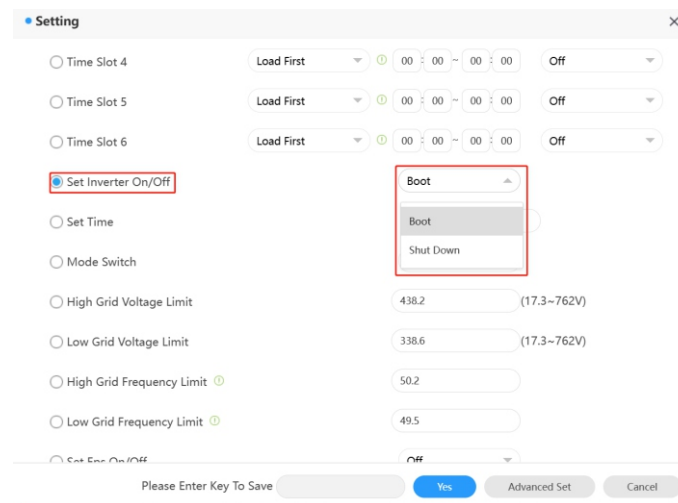

7.2 Commissioning the WIT Inverter



- The WIT Inverter might display incorrect time and date if it has been stored for over a month. You need to set the accurate time and date before connecting the WIT Inverter to the grid.

7.2.1 Set the Communication Address

After the WIT Inverter is powered on, you can set the communication address of the WIT Inverter through RS485 communication or the USB to Wi-Fi module. In cases where multiple inverters are connected in parallel with RS485 hand-in-hand communication, please assign different communication addresses to each inverter. For a single inverter, the communication address is set to 1 by default.



NOTE: The communication address of the WIT Inverter ranges from 1 to 254. By connecting the WIT Inverter to the host computer through RS458 communication, you can change its communication address via ShineBus. This operation should be performed by professional personnel.

7.2.2 Set the Time and Date

7.2.2.1 Set the time and date on the APP

Follow the instructions in Section 6.5.4 to connect the datalogger. When the inverter is powered on, you can set inverter time and date referring to Section 8.1.1. Tap Control > Set Inverter Time, then enter the password "growatt+date". For instance, if the date is July 18, 2023, the password would be "growatt20230718". After that, tap "Yes".

1. Set the correct date, then click "OK". Proceed to set the time, and click "OK".

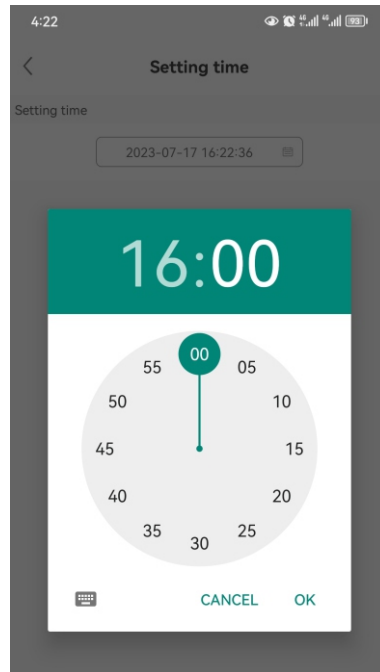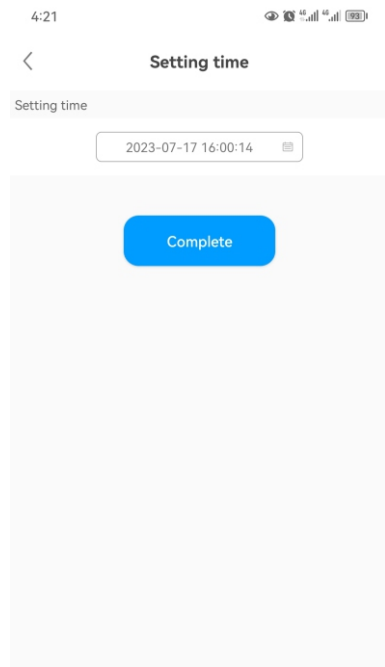

7.2.2.2 Set the Date & Time Automatically

Connect the WIT Inverter to the server following the procedure specified in Section 8.1.2 when the inverter is powered on, then the WIT Inverter will update its date and time automatically.

7.3 Mode of operation

7.3.1 Waiting Mode

When the PV voltage is greater than 180V, the WIT Inverter will be powered on and enters the waiting mode.

In waiting mode, the WIT Inverter performs self-check. If the system is normal and the voltage is greater than or equals to 195V, the WIT Inverter will be powered on.

7.3.2 Operating Mode

7.3.2.1 Operating Mode of WIT 50-100K-A, WIT 50-100K-AE and WIT 50-100K-AU

Standby mode: The WIT Inverter enters the standby mode when the operating requirements are not met.

Charging mode: Charge the battery from the grid (the AC Charging function should be enabled) You need to set this mode manually and configure the charging period and charging power.

Discharging mode: The battery discharges to supply power to the AC side You should set this mode manually and configure the discharging period and discharging power.

NOTE:

1. It is recommended to charge batteries with grid power during off-peak times and discharge battery power during peak hours to lower your electric bills.
2. The working modes listed above are applicable to the grid-tied power system. For the off-grid system, the WIT Inverter converts battery power to power the loads.

7.3.2.2 Operating Mode of WIT 50-100K-H, WIT 50-100K-HE and WIT 50-100K-HU

Load First:

When the WIT inverter works in the Load First mode, the WIT storage unit controls the battery to charge and discharge according to the amount of electricity fed into the grid and drawn from the grid. When there is electricity fed into the grid, the WIT inverter adjusts this part of electricity to charge the battery, reducing the amount of electricity fed into the grid; when there is power from the grid, the WIT inverter adjusts the battery discharge to reduce the amount of electricity drawn from the grid. When the WIT inverter disable the Load First mode, it does not respond to the change of the power fed into the grid and taken from the grid. It will keep the battery power, and enters other priority modes.

Battery First:

When the WIT inverter works in this mode, the battery will ignore the forward and reverse current power and give priority to charging the battery. The user needs to set the mode ON and OFF time. If the customer does not enable AC CHG (AC power grid charging function), the WIT will charge the battery through PV power. If the customer enables AC CHG, the WIT will charge the battery through PV panel and the grid.

Grid First:

When the WIT inverter works in the Grid First mode, the load will be powered firstly, then export power to the grid. The user can choose to work in this mode when the electricity rate is high, and the user needs to set the on and off time of the mode.

7.3.3 Fault Mode

The intelligent control system of the WIT Inverter monitors and adjusts the system status in real time. When an alarm/fault is detected, the corresponding indicator will turn red and the OLED will display the error message. After the fault or alarm is cleared, the system recovers and all status indicators will be steady green.

NOTE: For details about faults and alarms, please see 9.2 Troubleshooting.

7.3.4 Shutdown Mode

When the battery SOC is lower than the discharge cutoff SOC and the PV string output power does not meet the requirements for grid-tied power generation, the WIT Inverter will automatically shut down. In shutdown mode, the inverter still consumes a small amount of energy (PV>Grid>Battery) while waiting to start up again when the operating requirements are met.

NOTE: When the DC input voltage is less than or equal to 150Vdc or the battery voltage is lower than 600V, the WIT Inverter enters the shutdown mode automatically.

7.4 LED and OLED Displays Panel

The LED and OLED display panel demonstrating the running status of the WIT Inverter is shown in the Fig 7.1. The symbol descriptions are provided in Table 7.1; The user interfaces are shown in Fig 7.2, and the LED indicator descriptions are available in Table 7.2.

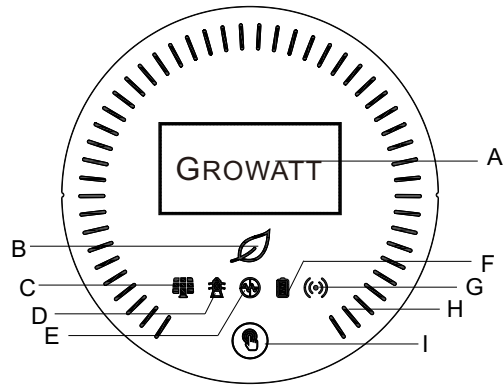


Fig 7.1 Display panel

Table 7.1 Symbol Description

| Number | Description | Note |
|--------|--------------------------|---|
| A | OLED screen | Displays the main system information |
| B | System indicator | Displays the system status |
| C | PV indicator | Indicates the operation status on the PV side |
| D | Grid indicator | Indicates the operation status on the grid side |
| E | Off-grid indicator | Indicates whether the off-grid mode is enabled |
| F | Battery indicator | Indicates the status of the battery |
| G | Communication indicator | Indicates the communication status |
| H | Battery status indicator | Indicates the charging and discharging mode of the battery |
| I | Button | You can switch the information displayed on the OLED by pressing the button |

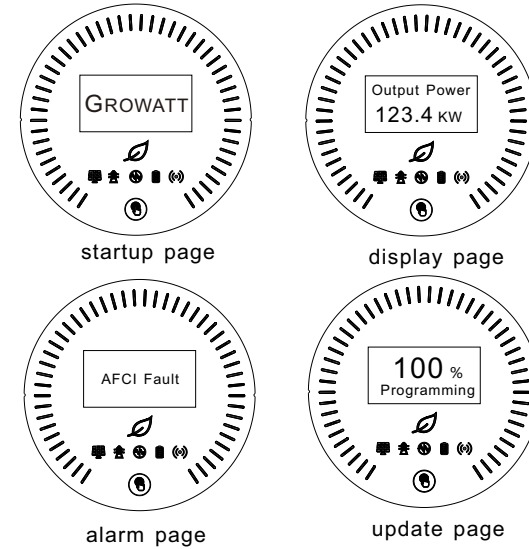


Fig 7.2 User interfaces

Table 7.2 Indicator description

| | Status | Meaning |
|--|----------------------------------|--|
| | Off | The system is not operating |
| | Steady green | The system is operating properly |
| | Blinking green at long intervals | The system is in standby mode or performing an upgrade |
| | Steady red | System failure |
| | Off | The PV voltage is below the operating voltage |
| | Steady green | The PV voltage reaches the operating voltage |
| | Steady red | A fault or alarm occurs on the PV side |
| | Off | The grid voltage is below the operating voltage |
| | Steady green | Successfully connected to the grid |
| | Steady red | A fault or alarm occurs on the grid side |

| | Status | Meaning |
|--|----------------------------------|---|
| | Off | Off-grid mode is disabled |
| | Steady green | Off-grid mode is enabled and has no faults or alarms |
| | Steady red | Off-grid mode is enabled and a fault or alarm occurs on the AC side |
| | Off | The battery voltage is below the operating voltage |
| | Steady green | The battery voltage reaches the operating voltage |
| | Steady red | SOC (state of charge) is low; a fault or alarm occurs on the battery side |
| | Steady green | External communication is normal, such as RS485, Wi-Fi, 4G, etc. |
| | Blinking green at long intervals | The WIT Inverter is upgrading or the USB interface is reading and writing data |
| | Steady red | External communication fails or a system fault occurs |
| | Steady white | Battery is in standby mode |
| | Rotates clockwise | Charging mode |
| | Rotates anticlockwise | Discharging mode |
| | | Displays critical system information. Users can call up and switch the interface by tapping the button. When a fault or alarm occurs in the system, the fault or alarm will be displayed. |
| | | The OLED will wake up when the button is pressed. The OLED will turn off if there is no operation for 5 minutes. |

8.1 Remote Monitoring

Growatt WIT 50-100K Storage/Hybrid inverters support remote monitoring, which can be enabled by installing a datalogger. The operation and configuration methods vary based on different datalogger models. For details, please refer to the links below.

| Compatible Datalogger | Installation & Operation Guide Linkage |
|-----------------------|---|
| ShineWiFi-X | http://oss-eu.growatt.com/common/knowledgeShareH5No?lang=en&type=93 |
| ShineWiFi-X2 | http://oss-eu.growatt.com/common/knowledgeShareH5No?lang=en&type=94 |
| Shine4G-X | http://oss-eu.growatt.com/common/knowledgeShareH5No?lang=en&type=96 |
| Shine4G-X2 | http://oss-eu.growatt.com/common/knowledgeShareH5No?lang=en&type=97 |
| ShineLAN-X | http://oss-eu.growatt.com/common/knowledgeShareH5No?lang=en&type=95 |

8.1.1 Remote Monitoring on the APP (ShinePhone)

1. Scan the following QR code or search for "ShinePhone" in Google/Apple Store to download and install the mobile APP.




NOTE:


- (1) Download and install the latest version of ShinePhone.
- (2) See <https://server-us.growatt.com/?lang=en> for details.

Account Registration on ShinePhone

Run the APP and tap "Create account" on the login page. Fill in the information as required. Fields marked with * are mandatory. Tick the checkbox to agree to the Privacy Policy. Once the account is successfully registered, you can log in to the home screen. The registration page is shown below:

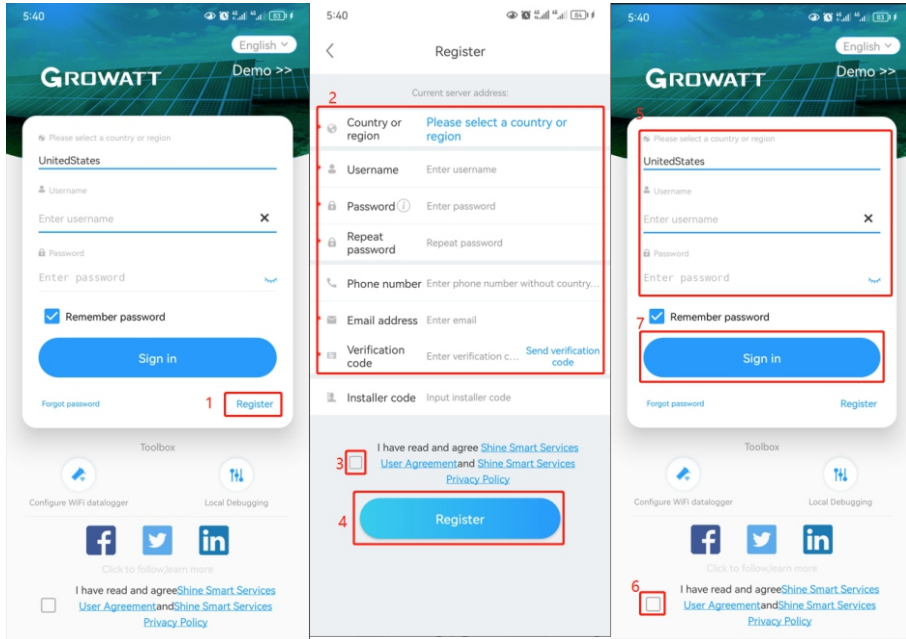


2. **Plant:** displays the plant list and the basic information about each PV plant, as shown in the figure below. You can select your target plant to view detailed information.

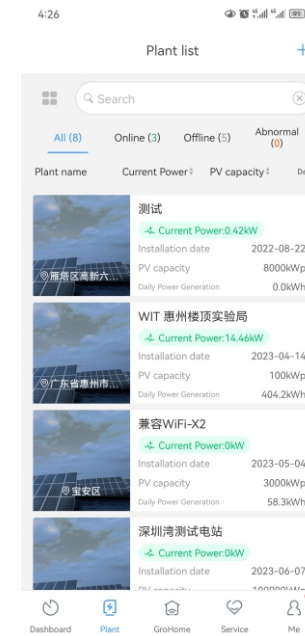

Home Screen of ShinePhone


1. **Dashboard:** displays the critical information of all power plants under the account, such as the total yield, the total revenue and the status of the device. Please refer to the figures below:

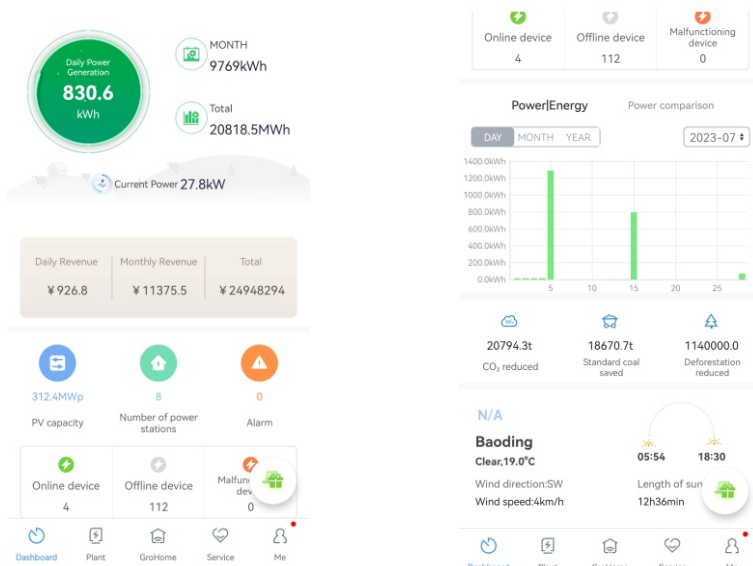


Detail Page of the WIT Inverter:

To access details about the WIT Inverter or related devices:



- 1) Tap "Plant" and the "Plant List" will be displayed. Select your target plant, then you can access the real-time data and history record of the power plant;
- 2) Select the WIT Inverter marked with its SN from "My device list". The figures below show QWL0DC3008 as an example;
- 3) On the Detail Page, you can view information about the inverter and related devices. Three sections - "Events", "Control" and "Edit", are available at the bottom.

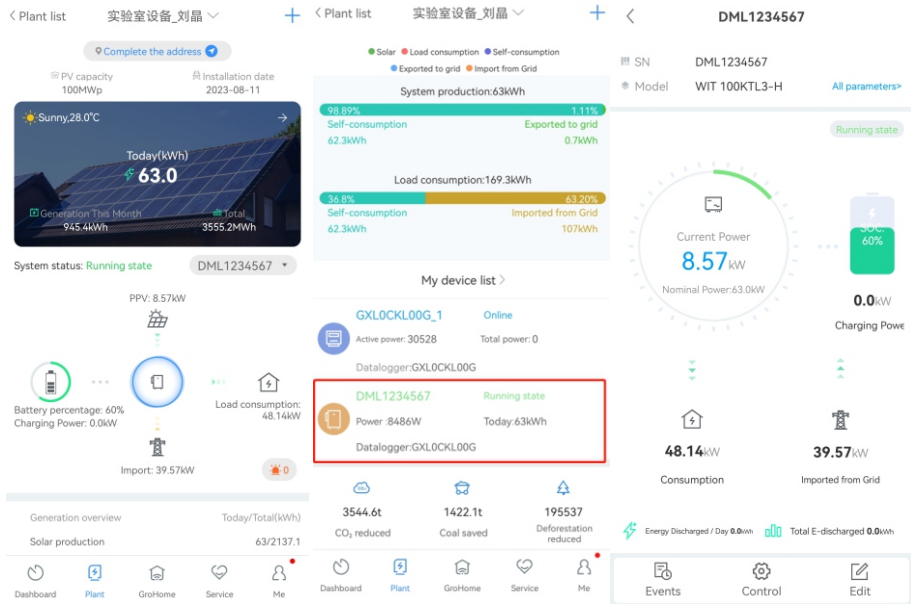

(4) On the "Log" screen, you can view the fault/warning message and suggested troubleshooting measures.



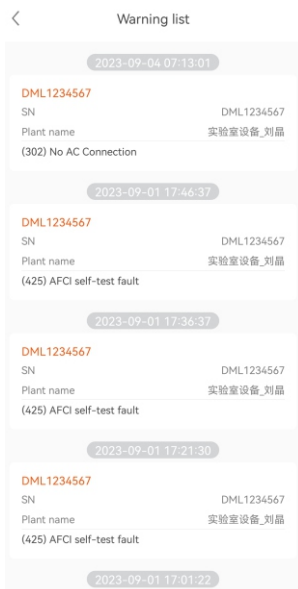


(5) On the "Control" screen, you can configure the WIT Inverter. The password is in the format of "Growatt + the current date", e.g. Growatt20230718.

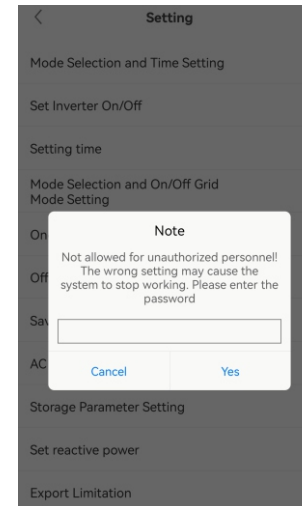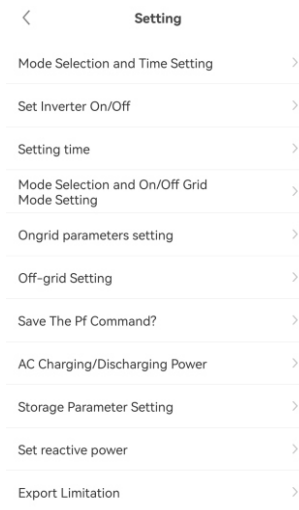


➤ Set Working Modes for Different Time Periods

Tap Control > Mode Selection and Time Setting; 6 time segments are configurable. You can set the start and end time of each period, the corresponding working mode, including Load First, Battery First and Grid First, and whether to enable/disable the selected working mode. Choose the appropriate working mode considering the corresponding electricity rates and power consumption during the specific time period.

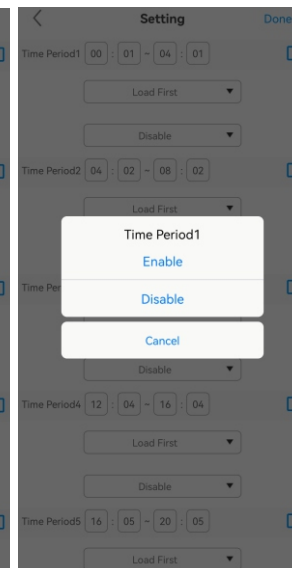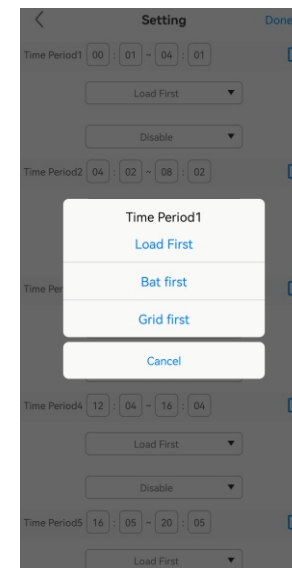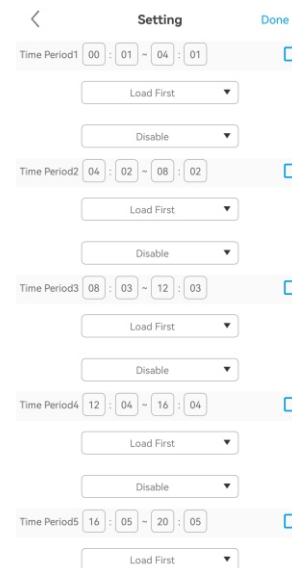


➤ **Set Inverter On/Off**

Tap Control > Set Inverter On/Off; you can power on/off the inverter, as the figure shows.

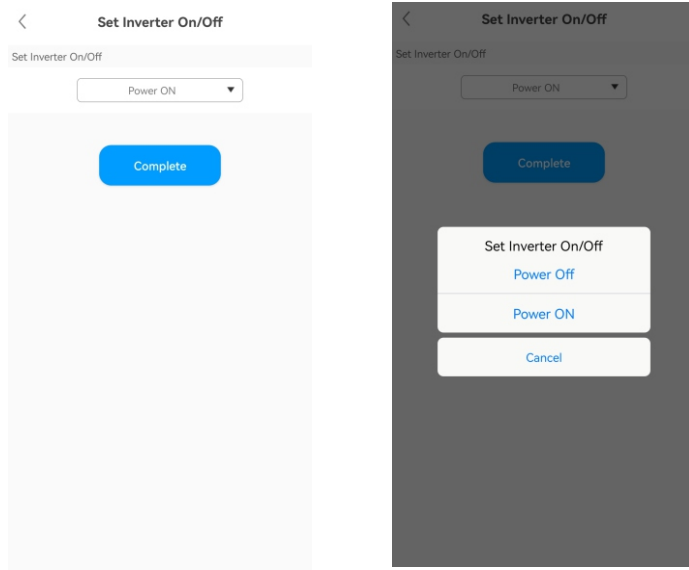


➤ **Set the Working Mode and the On-/Off-grid mode**

Tap Control > Mode selection and On/off grid mode setting. Two options are available: Automatic mode and Manual mode. If the Manual mode is selected, you can set the inverter to work in the on-grid or off-grid mode, as the figure shows. The Automatic Mode is recommended.

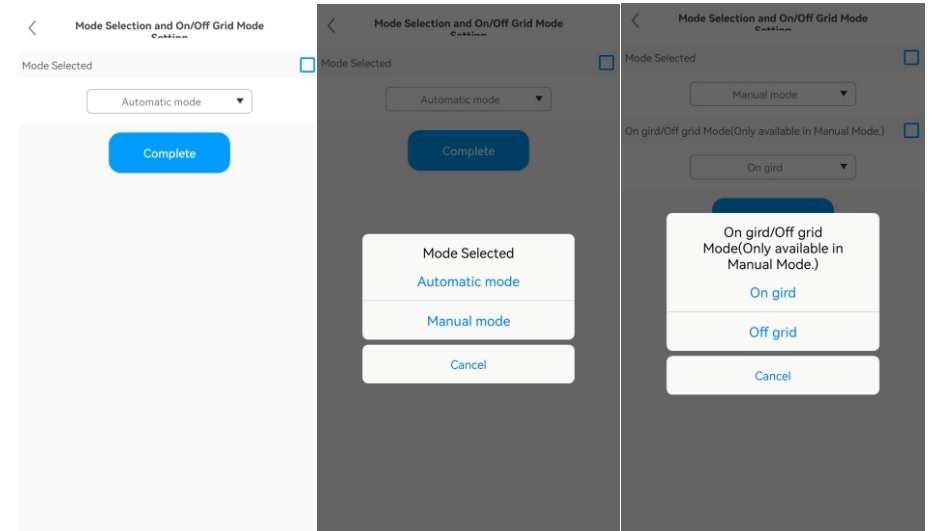

➤ **Set the Time of the Inverter**

Tap Control > Set Inverter Time; you can set the local time, as the figure shows.

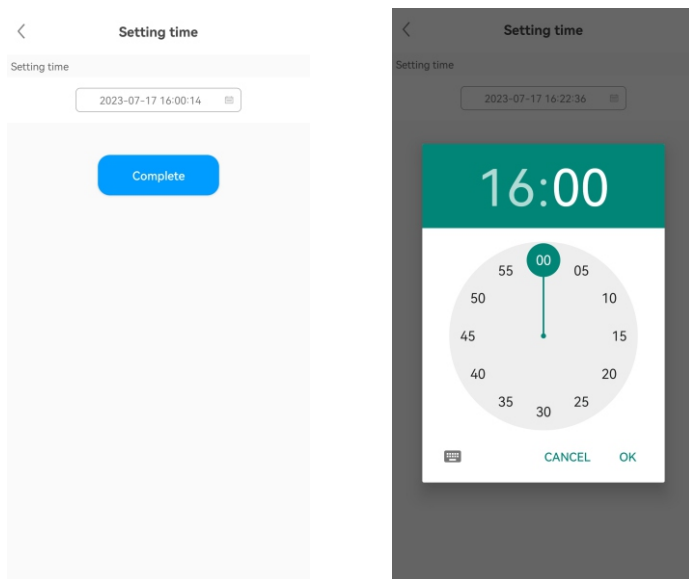


➤ **Set the Grid Parameters**

Tap Control > Grid parameters, you can set the voltage upper/lower threshold of grid connection and the frequency upper/lower threshold of grid connection, as the figure shows.




➤ **Set the Off-grid Parameters**

Tap Control > Off-grid Setting, you can enable/disable the off-grid mode, set the off-grid frequency (50Hz/60Hz) and the off-grid voltage (220V/230V/240V/277V/127V), complying with the safety regulations.

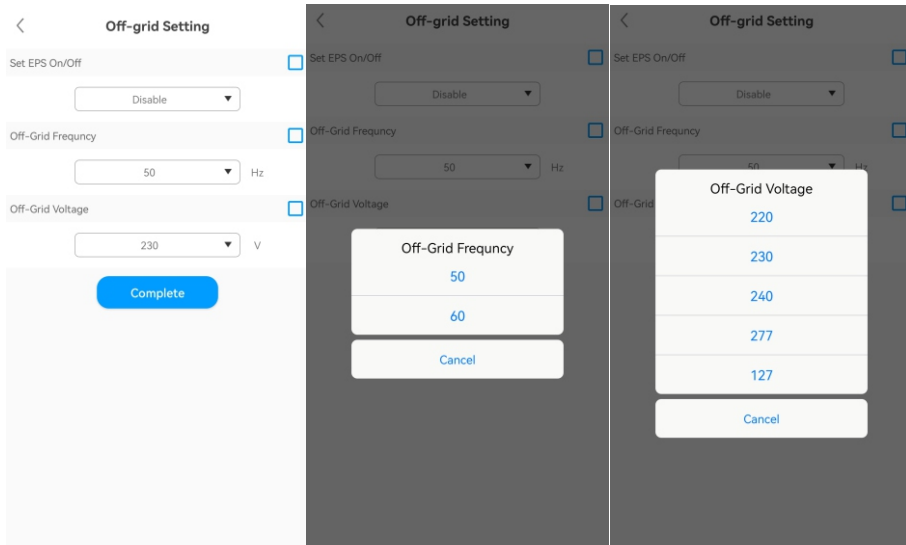


➤ **Set Whether to Apply the Following PF Command**

Tap Control > Whether to apply the following PF command, you can select whether to apply the following PF command, as the figure shows.

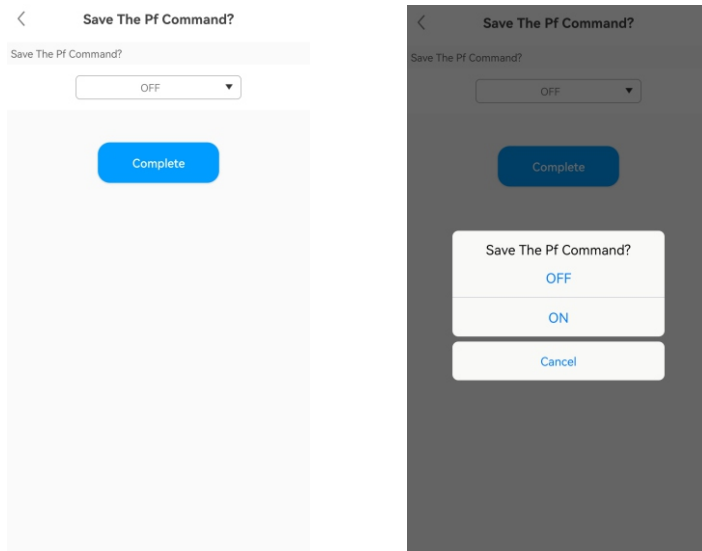


➤ **Set AC Charging and Discharging Power**

Tap Control > AC Charging and Discharging Power, you can configure the AC charging/discharging power and choose whether to remember your settings, as the figure shows.

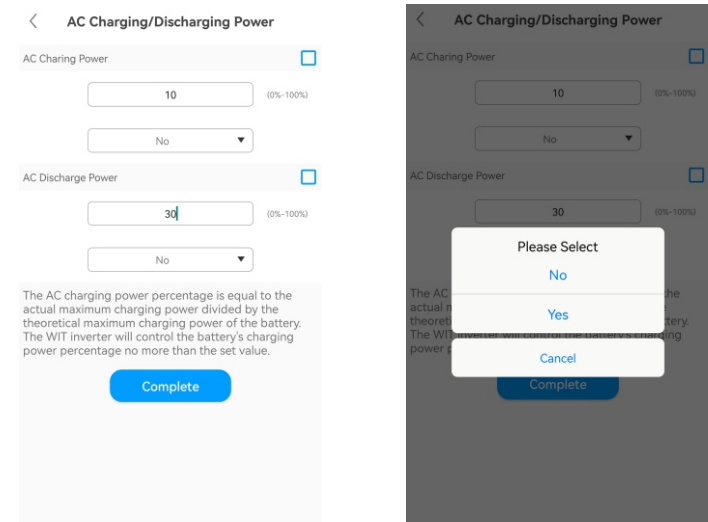


➤ **Set the Storage Parameters**

Tap Control > Storage Parameter Setting, you can enable/disable the AC charging function (Charge from grid), the charging cutoff SOC (100 is recommended) and the discharging cutoff SOC (10 is recommended), as the figure shows.

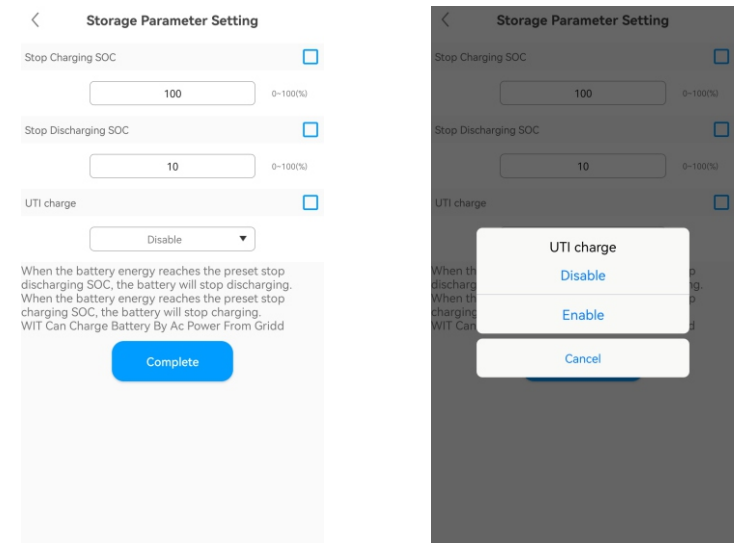


➤ **Set the Reactive Power**

Tap Control > Set reactive power, you can select the corresponding PF mode and whether to remember your settings, as the figure shows.

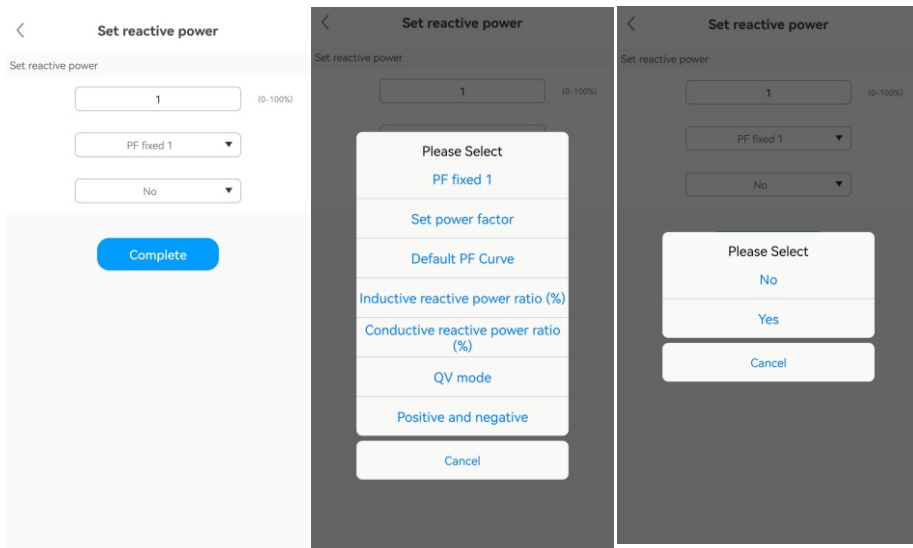


➤ **Set the Single-phase Export Limitation**

Tap Control > Single Export, you can enable/disable the single-phase export limitation function, as the figure shows.

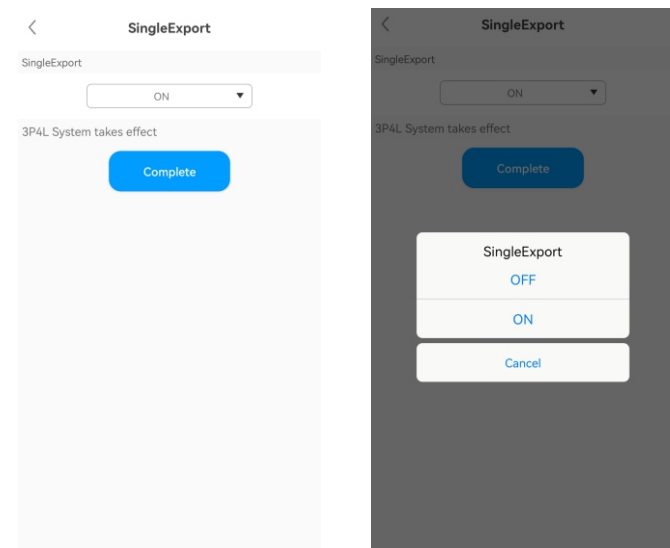


➤ **Set the Export Limitation Parameters**

Tap Control > Export Limitation, you can enable/disable the export limitation function according to local regulations. If the Export Limitation function is enabled, you can set the Export power limit, as the figure shows.

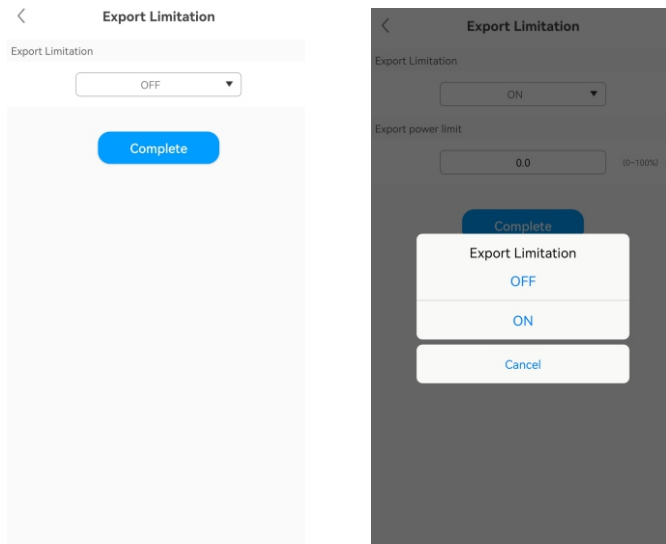

➤ **Set the Power Factor**

Tap Control > Set power factor, you can set the PF value, ranging from -1 to 1, as the figure shows.

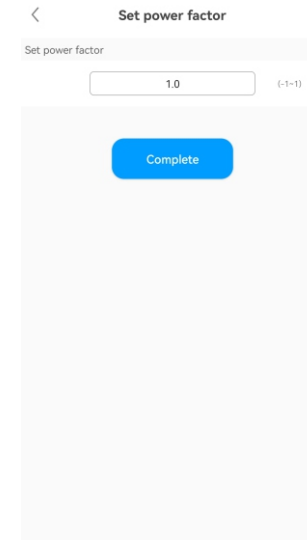

➤ **Set the Maximum Charging/Discharging Current**

Tap Control > Max. Charging/Discharging Current, you can set the maximum charging/discharging current, ranging from 0 to 200A, as the figure shows.

Max. Charging/Discharging

Maximum charge current

(0-200A)

The maximum discharge current is

(0-200A)

➤ **Set the EOD voltage**

Tap Control > EOD Voltage, you can set the battery discharge cutoff voltage, ranging from 600 V to 1000V, as the figure shows.

The EOD voltage

(600-1000V)

Battery stop discharging voltage.

➤ **Set the Equalization Voltage**

Tap Control > Equalization Voltage, you can set the battery maximum charging voltage, ranging from 600 V to 1000V, as the figure shows.

The equalization charging voltage

The equalization charging voltage is

(600-1000V)

Battery stop charging voltage

➤ **Set the Customized PF Curve**

Tap Control > Custom PF curve, you can set the power percentage and the power factor of each point, as the figure shows.

Customize PF curve

Point1

Power percentage (%)

Power factor point

Point2

Power percentage (%)

Power factor point

Point3

Power percentage (%)

Power factor point



Point4

Power percentage (%)



Power factor point

Power percentage(0-100)
Power factor point(-1~1)


(6) Edit: you can change the device name as the figure shows.

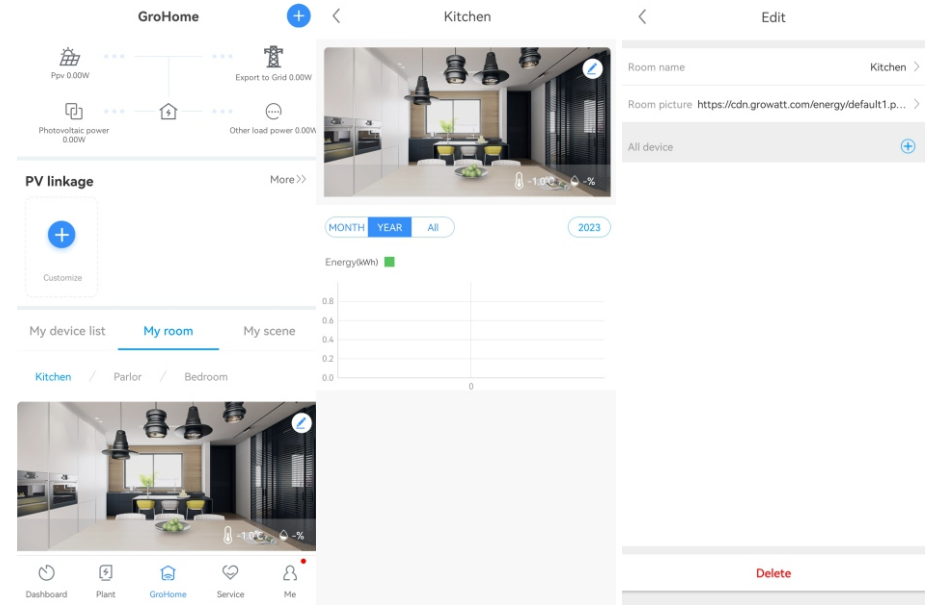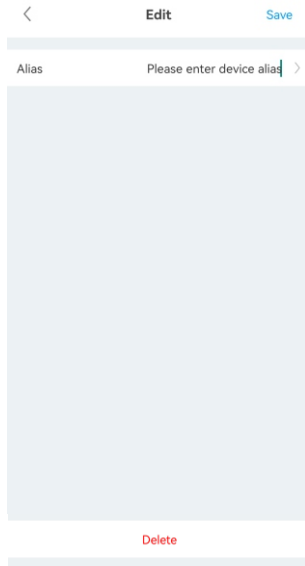


3. GroHome: displays the home energy system, including four sections: "PV linkage", "My device list", "My room" and "My scenario".

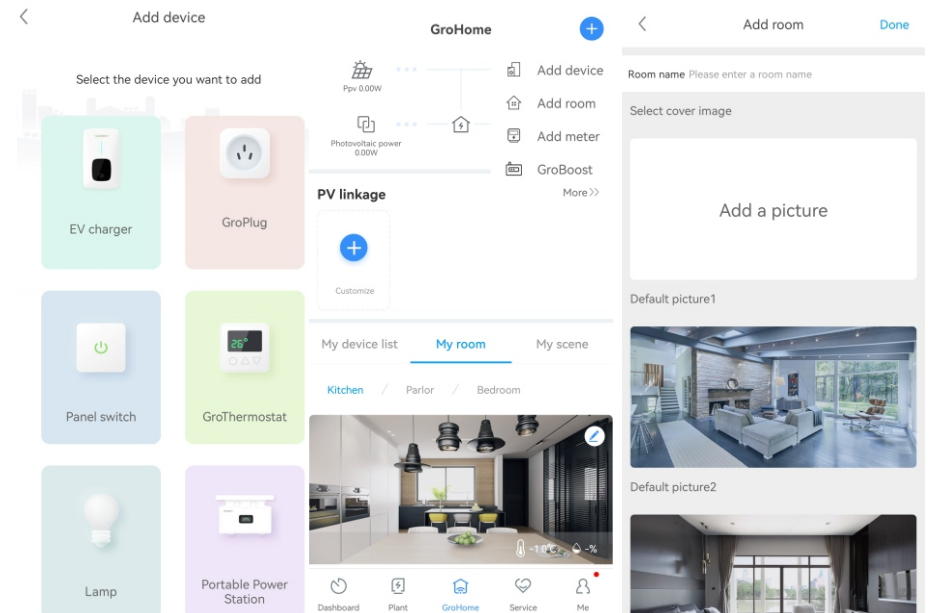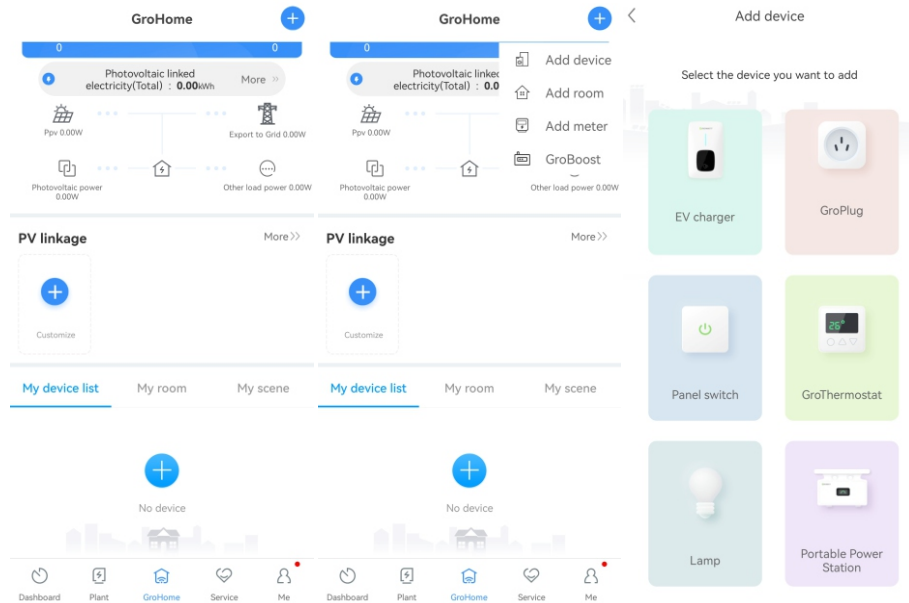

4. **Support:** includes the common faults and troubleshooting suggestions, as shown in the figure below. Should you encounter any problem about our product, you can contact the Growatt after-sales support or refer to the related document.

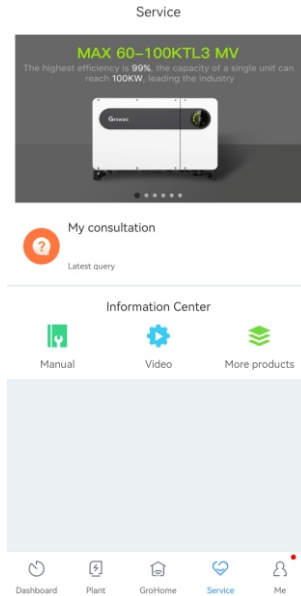


5. **Me:** You can check the account information, configure the datalogger or view notifications, as shown in the figure below.

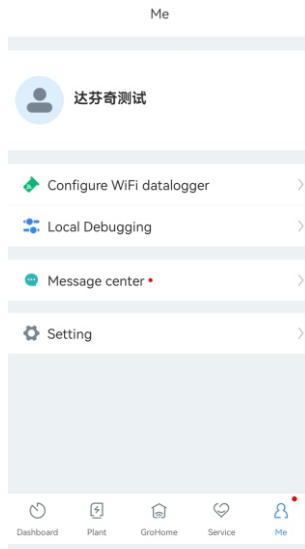


8.1.2 Remote Monitoring on the ShineServer Webpage

1. Open the browser, then enter <https://server.growatt.com/login?lang=en> in the address box to access the login page. Click "Register an Account" if you do not have an account.

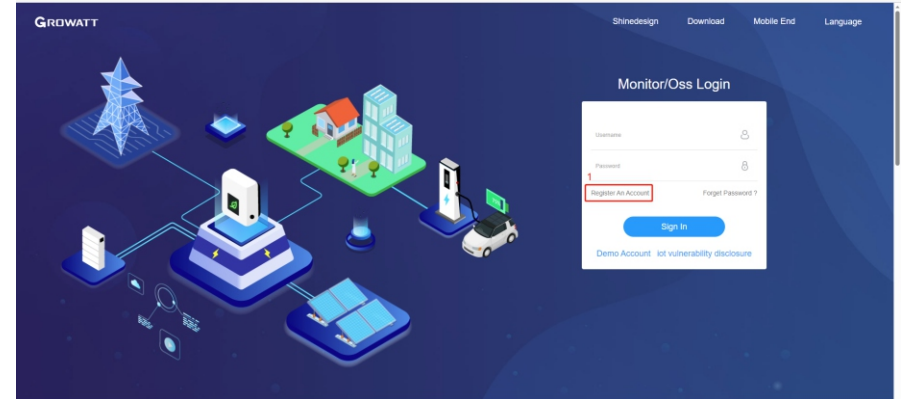

2. After the Registration Page is displayed, fill in the information as required and click to agree to the Privacy Policy. Fields marked with the "." icon are mandatory. Click next, it will bring you to the "Add Plant" page. Then click "Back to Login" on the top right corner.

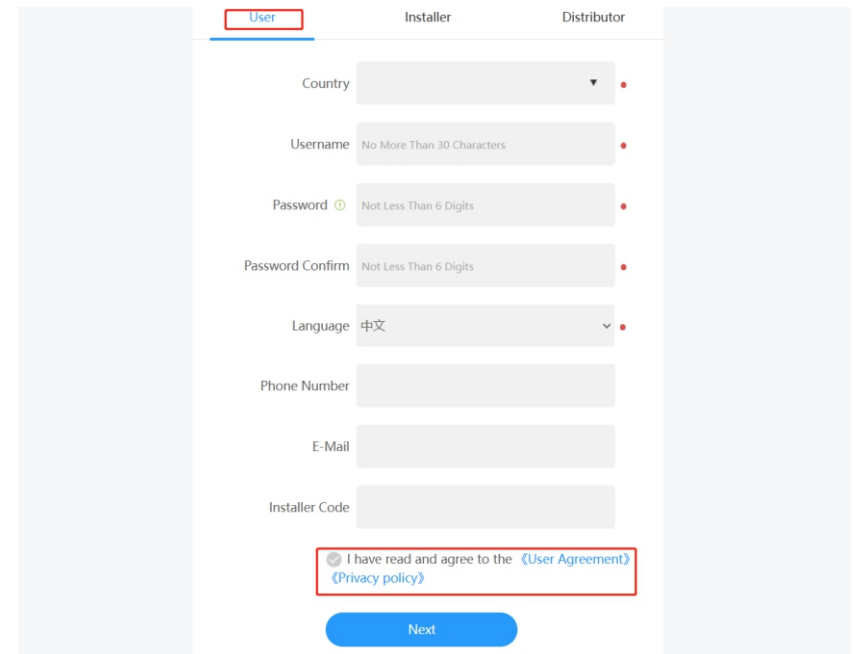

GROWATT Register Back To Login

User: Installer | Distributor

Country:

Inverter Serial Number:

Company Name:

Company Address:

Company website:

I have read and agree to the (Privacy policy)

Register

3. On the Login screen, enter the username and the password to log in to the home screen.

GROWATT | Shinedesign | Download | Mobile End | Language

Monitor/Oss Login

Username:

Password:

Sign In

Register An Account | Forget Password ?

Demo Account | [Get vulnerability disclosure](#)

4. After accessing the home screen, the "Add Plant" window will pop up. Fill in the information as required (marked with ".") and click "Yes". If the plant has been created, you can select the target plant on the home screen.

Add Plant

Installation Information

Plant Name: Installation Date: PV Capacity(kWp): Installer:

Plant Type:

Location Information

Country: City: Address:

Time Zone: Longitude: Latitude: Plant Image:

Set Revenue Formula(Set 1Kwh As The Conversion Standard)

Selling Price: RMB(¥) Standard Coal Saved: CO₂ Reduced: Reducing Deforestation:

Electricity price: Peak Rate: Standing Rate: Off-Peak Rate:

Yes **Cancel**

Total 0.0(kWh) | **PV Capacity** 0.0(kWp) | **Total Revenue** 0(¥)

All Plants: Residential Plant | Commercial Plant | Ground-Mounted Plants

Online | Abnormal | Lost | Power Station Sequencing | Current Power Priority | Please Input Plant Name

Plant 1: Davinci Test | 0.0kwh Today | 0.0kw Current Power

Plant 2: Davinci Test1 | 0.0kwh Today | 0.0kw Current Power

Plant 3: 测试 | 0.0kwh Today | -30.87kw Current Power

5. Click the target plant and the detailed page will be displayed, click "Add Data Logger" on the upper right corner to add the datalogger connected to the inverter.

- 1) Enter the serial number (SN) of the datalogger
- 2) Enter the verification code of the datalogger

GROWATT | 实验室设备_刘品 | Switch theme | Add Plant | **Add Data Logger** | Add Optimizer | 达芬奇测试

Energy | Dashboard | Energy | Home energy | Log | Setting

Current Location: Energy-Plant Management

Parameter Comparison | **Plant Management** | Plant Name: Search | Add Plant

| No. | Plant Name | Country | City | Installation Date | Time Zone | PV Capacity(kWp) | Total Energy(kWh) | Operating Tools |
|-----|-------------|---------|------|-------------------|-----------|------------------|-------------------|-----------------|
| 1 | 测试 | China | 西安 | 2022-08-22 | 8 | 8000 | 733.2 | |
| 2 | WIT 惠州绿岛实验室 | China | 惠州 | 2023-04-14 | 8 | 100 | 0 | |
| 3 | 康智WiFi-X2 | China | 深圳 | 2023-05-04 | 8 | 3000 | 0 | |
| 4 | 深圳南湾测试电站 | China | | 2023-06-07 | 8 | 1000000 | 0 | |
| 5 | 惠州石化专用 | China | 惠州 | 2023-06-19 | 8 | 1000 | 4866.3 | |
| 6 | 实验室设备_刘品 | China | | 2023-08-11 | 8 | 1000000 | 0 | |
| 7 | 多机岛集管理测试 | China | | 2023-08-17 | 8 | 1000000 | 0 | |
| 8 | SEM测试电站 | China | | 2023-08-19 | 8 | 0 | 0 | |

Add Data Logger

Data Logger Sn


Assigned Plant

Yes **Cancel**

6. After adding the datalogger successfully, you can click Dashboard to view details about related devices.



Dashboard:
1. Running status and energy display

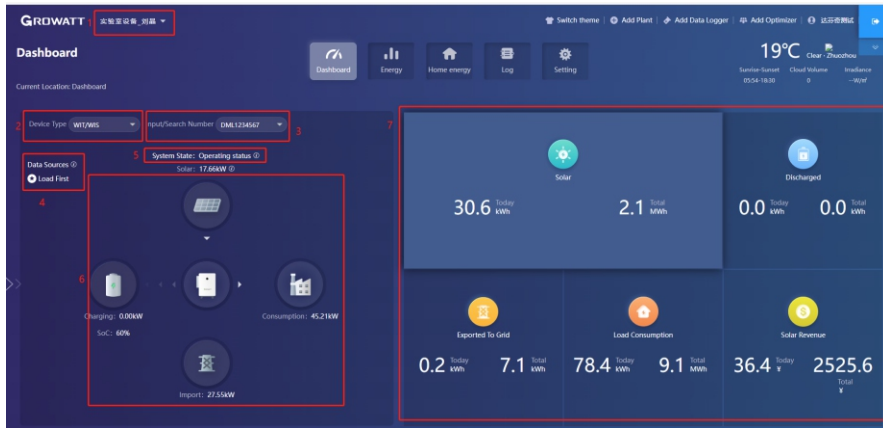


- 1) Plant List: select the target plant from the drop-down list
- 2) Device Type: Select the device from the drop-down list
- 3) Input/Search Number: Upon the initial search, enter the serial number of the specific device; If you have searched for it before, you can select the device from the drop-down list
- 4) Data Sources: displays the data source of the selected device: Load First, Battery First and Grid first
- 5) System Status: displays the running status of the selected device: operating, faulty, standby and off-line
- 6) System Running Graph: displays the power flow between the PV modules, the battery and the AC side
- 7) Energy: displays today's/total PV generation, power imported from grid, power exported to the grid and the load consumption

2. Energy Trend

- 1) System Production: displays the power for self-consumption and the power exported to the grid
- 2) Date: select a specific date, you can view the energy data in a specific period, day, month or year
- 3) Load Consumption: displays the power for self-consumption and the power drawn from the grid
- 4) Display options: to show/hide the content by clicking the corresponding color circle. By placing the cursor on the specific color circle for a long period, it will display the energy trend of the selected item only

3. Battery Information

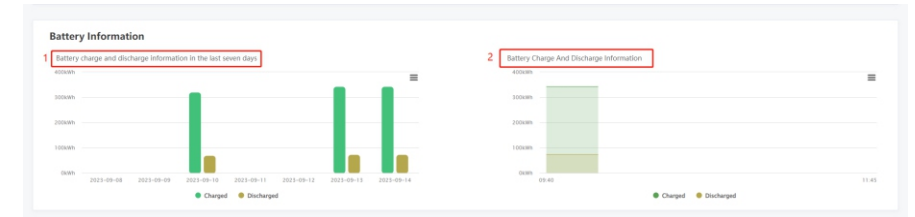


- 1) Battery charged and discharged: display the battery charge and discharge power
- 2) Battery real-time SOC: display the battery SOC

4. My PV devices

This section displays all devices involved in the selected PV plant (online devices are shown first, followed by offline devices).


Energy

1. Parameter comparison

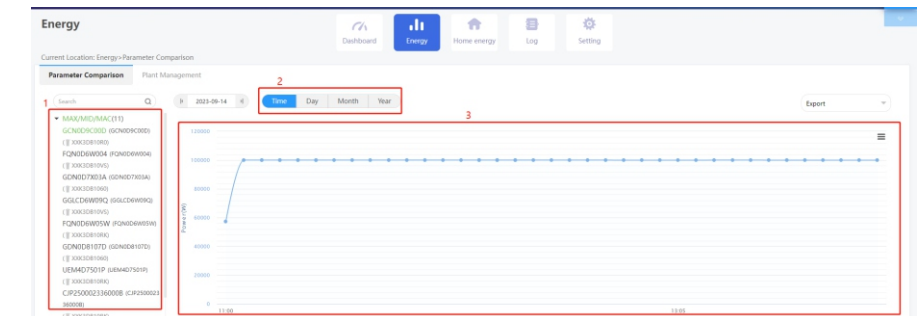

- 1) Device type: Select the device type for comparison, such as the WIT inverter or the meter
- 2) Date: select a specific date, you can view the energy data in a specific period, day, month or year.

2. Plant Management

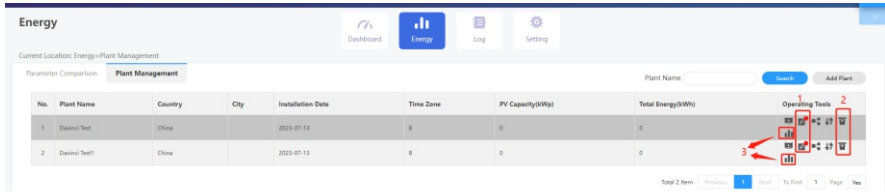


Click Plant Management and you can view all PV plants associated with the current account.

- 1) Edit: Click the "Edit" icon (indicated in the figure above) to modify the PV plant information
- 2) Delete: Click the "Delete" icon (indicated in the figure above) to delete the selected PV plant
- 3) Data: Click the "Data" icon (indicated in the figure above) to view the energy yield and power of the selected plant


Log

On the Log page, you can view the error code and the fault description.

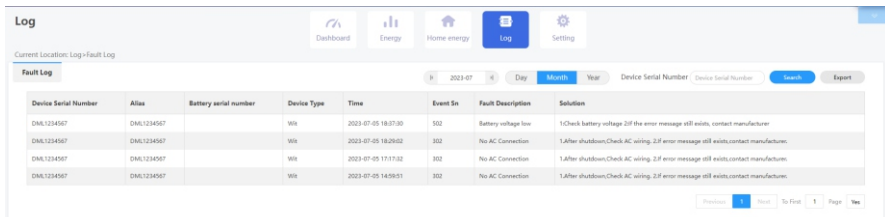

Setting


1. Account management

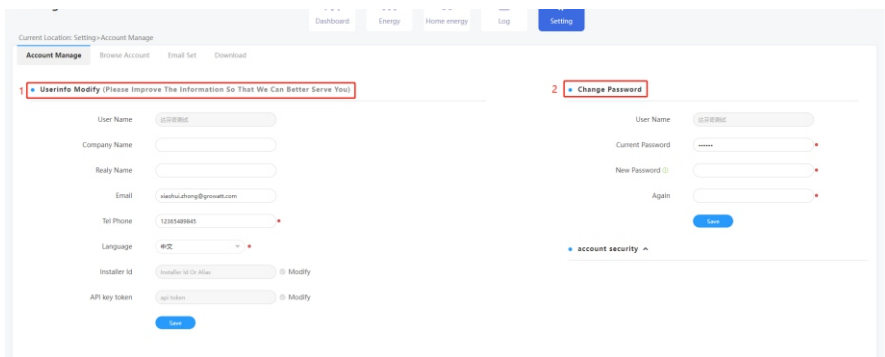

- 1) Modify your account information
- 2) Change the password: you can change the password on this page


2. Download

A range of documents are available for download.

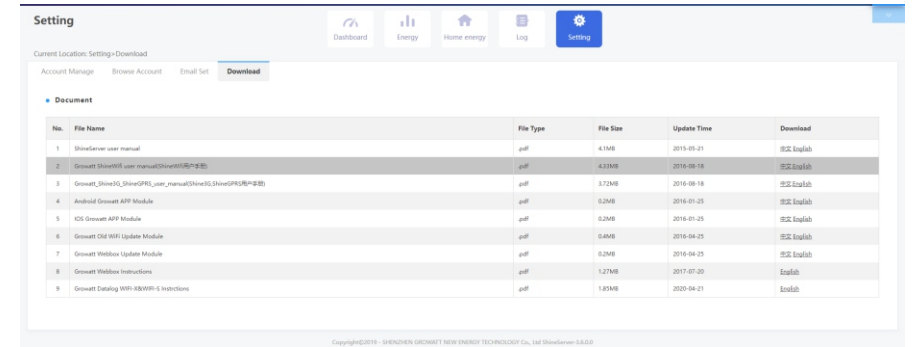


Device

1. Datalogger

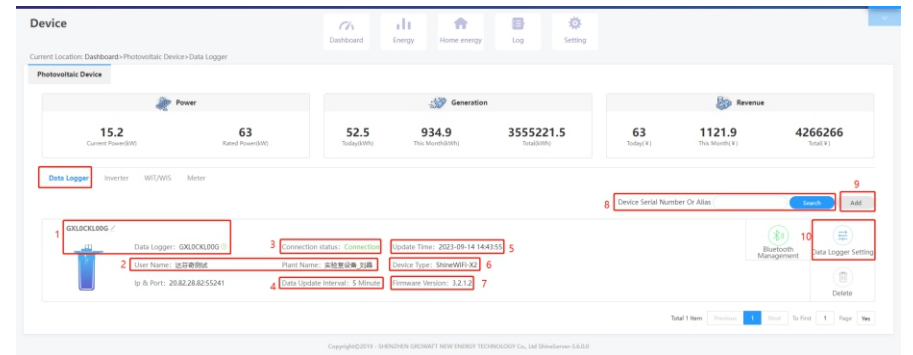

- 1) Serial number: each datalogger has a specific SN, which can be used to search for the device;
- 2) User name and the PV plant to which the datalogger is connected;
- 3) Connection status: connected or disconnected;
- 4) Data update interval;
- 5) Update time;
- 6) Device type;
- 7) Firmware version;
- 8) Enter the serial number to search for the target datalogger;
- 9) Add a datalogger: enter the serial number to add the datalogger;
- 10) Datalogger settings: you can set the update time for the datalogger;

2. WIT

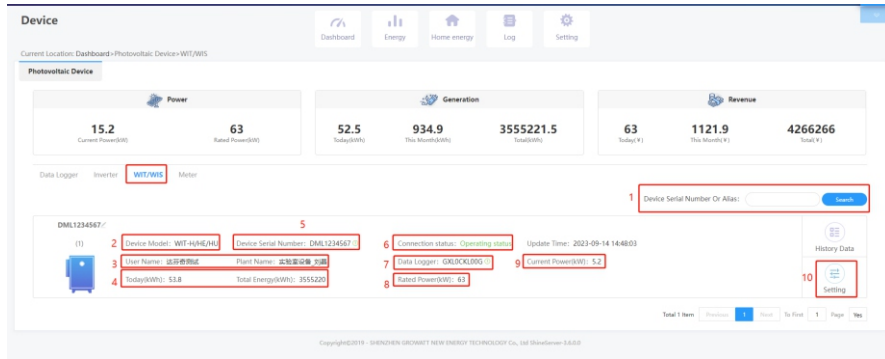

- 1) Enter the serial number to find the device;
 - 2) Device model;
 - 3) User name and the PV plant to which the device is connected;
 - 4) Daily and monthly energy yield;
 - 5) Serial number of the selected device;
 - 6) Operating status: operating, standby, disconnected or faulty;
 - 7) Serial number of the datalogger connected to the device;
 - 8) Rated power;
 - 9) Current power;
 - 10) Parameter settings.
- 10.1) Set the working mode and the time period

Information

Device Serial Number: DML1234567 Alias: DML1234567
 Data Logger: GXL0CKL00G Property: TO1.0/TOaa141193/ZBea-0031/S21B09D00T33P0FU01M0276

Command

Time Slot 1: Load First, 00:00 ~ 00:00, Off

Time Slot 2: Load First, 00:00 ~ 00:00, Off

Time Slot 3: Load First, 00:00 ~ 00:00, Off

Time Slot 4: Load First, 00:00 ~ 00:00, Off

Time Slot 5: Load First, 00:00 ~ 00:00, Off

Time Slot 6: Load First, 00:00 ~ 00:00, Off

Set Inverter On/Off: Boot

Please Enter Key To Save: 20230718

10.2) Powering on/off the device: you can power on/off the device remotely

Setting

Time Slot 4: Load First, 00:00 ~ 00:00, Off

Time Slot 5: Load First, 00:00 ~ 00:00, Off

Time Slot 6: Load First, 00:00 ~ 00:00, Off

Set Inverter On/Off: Boot

Set Time: 2023-07-18 17:58

Mode Switch: Automatic

High Grid Voltage Limit: 438.2 (17.3~762V)

Low Grid Voltage Limit: 338.6 (17.3~762V)

High Grid Frequency Limit: 50.2

Low Grid Frequency Limit: 49.5

Set Inverter On/Off: Off

Please Enter Key To Save: Yes, Advanced Set, Cancel

10.3) Set the time: you can set the time for the device

Setting

Time Slot 4: Load First, 00:00 ~ 00:00, Off

Time Slot 5: Load First, 00:00 ~ 00:00, Off

Time Slot 6: Load First, 00:00 ~ 00:00, Off

Set Inverter On/Off: Boot

Set Time: 2023-07-18 17:58

Mode Switch: Automatic

High Grid Voltage Limit: 438.2 (17.3~762V)

Low Grid Voltage Limit: 338.6 (17.3~762V)

High Grid Frequency Limit: 50.2

Low Grid Frequency Limit: 49.5

Set Inverter On/Off: Off

Please Enter Key To Save: Yes, Advanced Set, Cancel

10.4) Mode switch: you can choose to switch the working mode manually or automatically. If "Manual" is selected, you can set the device to operate in on-grid or off-grid mode. Generally, you are advised to select "Automatic" mode switch.

The screenshot shows the 'Setting' window with the following configuration:

- Time Slot 4: Load First, 00:00 ~ 00:00, Off
- Time Slot 5: Load First, 00:00 ~ 00:00, Off
- Time Slot 6: Load First, 00:00 ~ 00:00, Off
- Set Inverter On/Off: Boot
- Set Time: 2023-07-18 17:58
- Mode Switch: Automatic** (dropdown menu is open showing 'Automatic' and 'Manual' options)
- High Grid Voltage Limit: 50.2
- Low Grid Voltage Limit: 49.5
- High Grid Frequency Limit: 50.2
- Low Grid Frequency Limit: 49.5
- Set Eps On/Off: Off

Buttons at the bottom: Please Enter Key To Save, Yes, Advanced Set, Cancel.

10.5) High grid voltage limit (voltage upper threshold of grid connection)

The screenshot shows the 'Setting' window with the following configuration:

- Set Inverter On/Off: Boot
- Set Time: 2023-07-18 17:58
- Mode Switch: Automatic
- High Grid Voltage Limit: 438.2 (17.3~762V)** (highlighted with a red box)
- Low Grid Voltage Limit: 338.6 (17.3~762V)
- High Grid Frequency Limit: 50.2
- Low Grid Frequency Limit: 49.5
- Set Eps On/Off: Off
- Set Eps Frequency: 50Hz
- Set Eps Voltage: 220V
- Set Save Pf Command: Off

Buttons at the bottom: Please Enter Key To Save, Yes, Advanced Set, Cancel.

10.6) Low grid voltage limit (voltage lower threshold of grid connection)

The screenshot shows the 'Setting' window with the following configuration:

- Set Inverter On/Off: Boot
- Set Time: 2023-07-18 17:58
- Mode Switch: Automatic
- High Grid Voltage Limit: 438.2 (17.3~762V)
- Low Grid Voltage Limit: 338.6 (17.3~762V)** (highlighted with a red box)
- High Grid Frequency Limit: 50.2
- Low Grid Frequency Limit: 49.5
- Set Eps On/Off: Off
- Set Eps Frequency: 50Hz
- Set Eps Voltage: 220V
- Set Save Pf Command: Off

Buttons at the bottom: Please Enter Key To Save, Yes, Advanced Set, Cancel.


10.7) High grid frequency limit (frequency upper threshold of grid connection)

The screenshot shows the 'Setting' window with the following configuration:


- Mode Switch: Automatic
- High Grid Voltage Limit: 438.2 (17.3~762V)
- Low Grid Voltage Limit: 338.6 (17.3~762V)
- High Grid Frequency Limit: 50.5** (highlighted with a red box)
- Low Grid Frequency Limit: 47.5
- Set Eps On/Off: Off
- Set Eps Frequency: 50Hz
- Set Eps Voltage: 220V
- Set Save Pf Command: Off
- AC Charing Power: 0 % Not Memory

Buttons at the bottom: Please Enter Key To Save, Yes, Advanced Set, Cancel.


10.8) Low grid frequency limit (frequency lower threshold of grid connection)

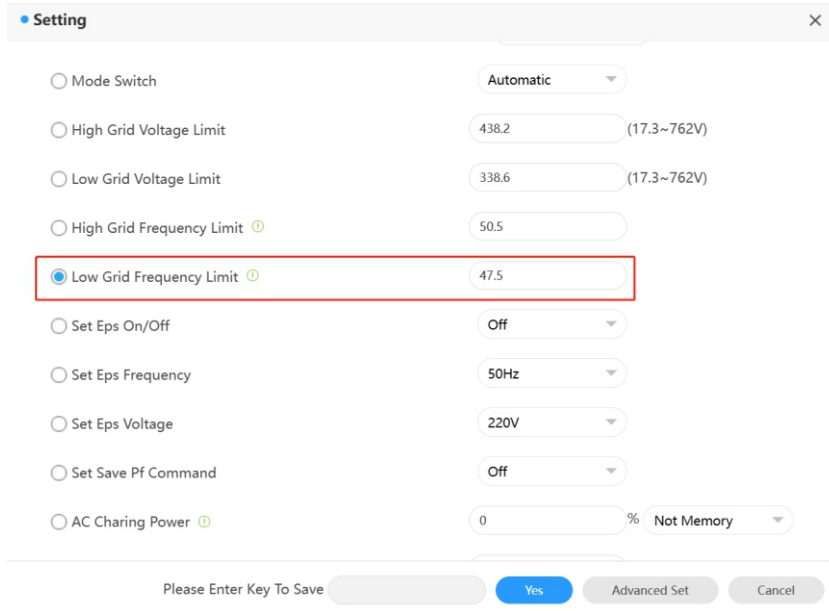


10.10) Off-grid frequency: two options are available: 50Hz/60Hz

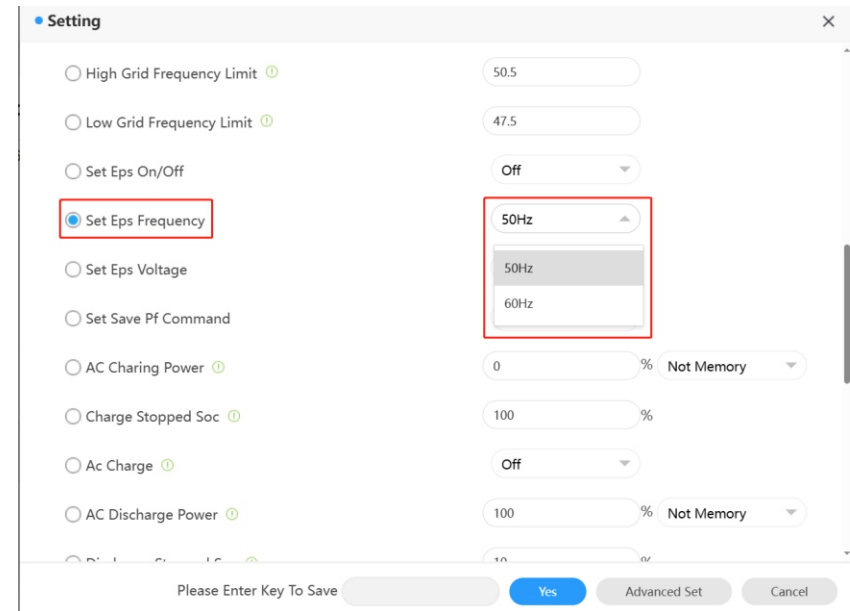

10.9) Set off-grid mode on/off: you can set whether to operate the inverter in the off-grid mode

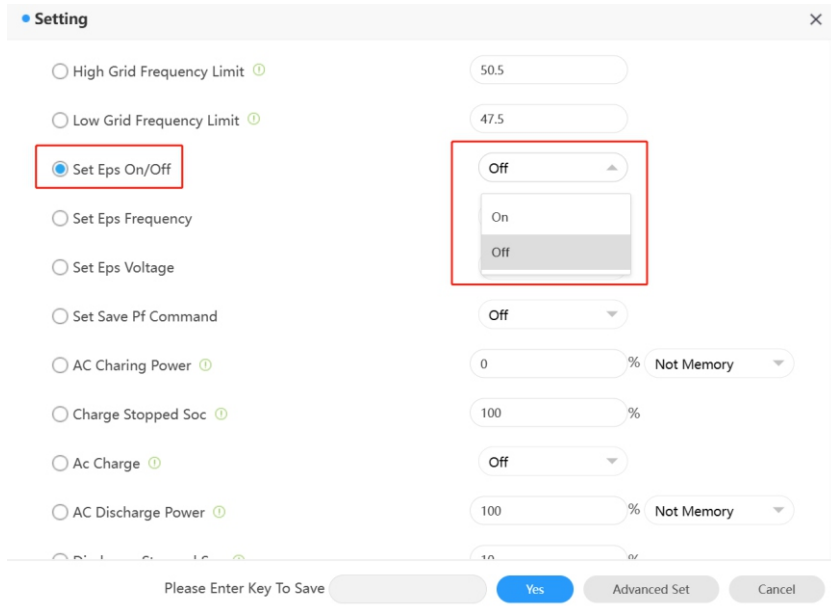

10.11) Off-grid voltage: you can set the value to 220V/230V/240V/277V/127V

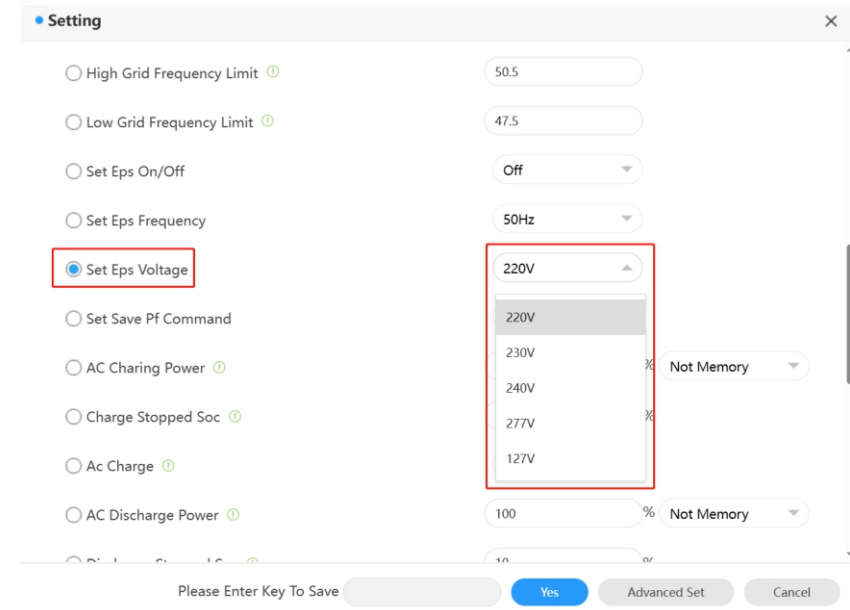

10.12) Save the PF Command: you can set whether to save the PF command setting

The screenshot shows the 'Setting' window with various parameters. The 'Set Save Pf Command' dropdown menu is open, showing options 'Off', 'On', and 'Off'. The 'Off' option is selected. The 'AC Charing Power' is set to 20% and 'Not Memory'. The 'Charge Stopped Soc' is set to 100%. The 'Ac Charge' is set to 'Off'. The 'AC Discharge Power' is set to 100% and 'Not Memory'. The 'Please Enter Key To Save' button is visible at the bottom.

10.13) AC charging power: you can set the inverter's maximum output power

The screenshot shows the 'Setting' window with various parameters. The 'AC Charing Power' dropdown menu is open, showing options 'Not Memory', 'Not Memory', and 'Memory'. The 'Not Memory' option is selected. The 'Charge Stopped Soc' is set to 100%. The 'Ac Charge' is set to 'On'. The 'AC Discharge Power' is set to 10% and 'Not Memory'. The 'Discharge Stopped Soc' is set to 10%. The 'Set Reactive Power Ratio' is set to 1 and 'Pf Fixed 1'. The 'Set Exportlimit' is set to 'On' and 0.0. The 'SingleExport' is set to 'Off'. The 'Please Enter Key To Save' button is visible at the bottom.

10.14) Charge cutoff SOC: you can set the battery charge cutoff SOC (100 is recommended)

The screenshot shows the 'Setting' window with various parameters. The 'Charge Stopped Soc' dropdown menu is open, showing options '100' and '%'. The '100' option is selected. The 'Set Eps Frequency' is set to 50Hz. The 'Set Eps Voltage' is set to 220V. The 'Set Save Pf Command' is set to 'Off'. The 'AC Charing Power' is set to 20% and 'Not Memory'. The 'Ac Charge' is set to 'On'. The 'AC Discharge Power' is set to 10% and 'Not Memory'. The 'Discharge Stopped Soc' is set to 10%. The 'Set Reactive Power Ratio' is set to 1 and 'Pf Fixed 1'. The 'Set Exportlimit' is set to 'On' and 0.0. The 'SingleExport' is set to 'Off'. The 'Please Enter Key To Save' button is visible at the bottom.

10.15) Enable AC charging:

The screenshot shows the 'Setting' window with various parameters. The 'Ac Charge' dropdown menu is open, showing options 'On', 'On', and 'Off'. The 'On' option is selected. The 'AC Charing Power' is set to 20% and 'Not Memory'. The 'Charge Stopped Soc' is set to 100%. The 'AC Discharge Power' is set to 10% and 'Not Memory'. The 'Discharge Stopped Soc' is set to 10%. The 'Set Reactive Power Ratio' is set to 1 and 'Pf Fixed 1'. The 'Set Exportlimit' is set to 'On' and 0.0. The 'SingleExport' is set to 'Off'. The 'Set Pf Value' is set to 1.0 and (-1~1). The 'Charge Max Current' is set to 100.0 and (0~200A). The 'Discharge Max Current' is set to 100.0 and (0~200A). The 'Please Enter Key To Save' button is visible at the bottom.

10.16) AC discharge power: you can set the battery discharge power

The screenshot shows the 'Setting' window with the following configuration:

- AC Charing Power: 20 %
- Charge Stopped Soc: 100 %
- Ac Charge: On
- AC Discharge Power: 10 %** (highlighted with a red box)
- Discharge Stopped Soc: 10 %
- Set Reactive Power Ratio: 1, Pf Fixed 1, Not Memory
- Set Exportlimit: On, Limit Power Rate(%)
- SingleExport: Off
- Set Pf Value: 1.0 (-1~1)
- Charge Max Current: 100.0 (0~200A)
- Discharge Max Current: 100.0 (0~200A)

Buttons at the bottom: Please Enter Key To Save, Yes, Advanced Set, Cancel.

10.17) Discharge cutoff SOC: you can set the battery discharge cutoff SOC (10 is recommended)

The screenshot shows the 'Setting' window with the following configuration:

- AC Charing Power: 20 %
- Charge Stopped Soc: 100 %
- Ac Charge: On
- AC Discharge Power: 10 %
- Discharge Stopped Soc: 10 %** (highlighted with a red box)
- Set Reactive Power Ratio: 1, Pf Fixed 1, Not Memory
- Set Exportlimit: On, Limit Power Rate(%)
- SingleExport: Off
- Set Pf Value: 1.0 (-1~1)
- Charge Max Current: 100.0 (0~200A)
- Discharge Max Current: 100.0 (0~200A)

Buttons at the bottom: Please Enter Key To Save, Yes, Advanced Set, Cancel.

10.18) Set Reactive Power: you can set the corresponding PF mode and select whether to save the configured values

The screenshot shows the 'Setting' window with the following configuration:

- AC Discharge Power: 10 %
- Discharge Stopped Soc: 10 %
- Set Reactive Power Ratio: 1** (highlighted with a red box)
- Pf Fixed 1** (highlighted with a red box, selected in the dropdown menu)
- Not Memory** (highlighted with a red box)
- Set Exportlimit: On, Limit Power Rate(%)
- SingleExport: Off
- Set Pf Value: 1.0 (-1~1)
- Charge Max Current: 100.0 (0~200A)
- Discharge Max Current: 100.0 (0~200A)
- Equalization Voltage: 900.0 (600~1000V)
- EOD Voltage: 600.0 (600~1000V)

Buttons at the bottom: Please Enter Key To Save, Yes, Advanced Set, Cancel.

10.19) Export Limitation: You can enable/disable the export limitation function according to the local applicable regulations and set the export limit power rate if it is enabled

The screenshot shows the 'Setting' window with the following configuration:

- AC Discharge Power: 10 %
- Discharge Stopped Soc: 10 %
- Set Reactive Power Ratio: 1, Pf Fixed 1, Not Memory
- Set Exportlimit: On** (highlighted with a red box)
- 0.0 Limit Power Rate(%)** (highlighted with a red box)
- SingleExport: Off
- Set Pf Value: 1.0 (-1~1)
- Charge Max Current: 160.0 (0~200A)
- Discharge Max Current: 160.0 (0~200A)
- Equalization Voltage: 900.0 (600~1000V)
- EOD Voltage: 600.0 (600~1000V)

Buttons at the bottom: Please Enter Key To Save, Yes, Advanced Set, Cancel.

10.20) Single-phase Export Limitation

The screenshot shows the 'Setting' window with the following configuration:

- AC Discharge Power: 10 % (Not Memory)
- Discharge Stopped Soc: 10 %
- Set Reactive Power Ratio: 1 (Pf Fixed 1, Not Memory)
- Set Exportlimit: On (Limit Power Rate(%))
- SingleExport: Off** (highlighted with a red box)
- Set Pf Value: 1.0 (-1~1)
- Charge Max Current: 160.0 (0~200A)
- Discharge Max Current: 160.0 (0~200A)
- Equalization Voltage: 900.0 (600~1000V)
- EOD Voltage: 600.0 (600~1000V)
- Point 1 (Powerpercent, Pflinepoint): 0, -1.0
- Point 2 (Powerpercent, Pflinepoint): 0, -1.0

Buttons at the bottom: Please Enter Key To Save, Yes, Advanced Set, Cancel.

10.22) Charge Max. Current: you can set the battery maximum charge current

The screenshot shows the 'Setting' window with the following configuration:

- AC Discharge Power: 10 % (Not Memory)
- Discharge Stopped Soc: 10 %
- Set Reactive Power Ratio: 1 (Pf Fixed 1, Not Memory)
- Set Exportlimit: On (Limit Power Rate(%))
- SingleExport: Off
- Set Pf Value: 1.0 (-1~1)
- Charge Max Current: 160.0 (0~200A)** (highlighted with a red box)
- Discharge Max Current: 160.0 (0~200A)
- Equalization Voltage: 900.0 (600~1000V)
- EOD Voltage: 600.0 (600~1000V)
- Point 1 (Powerpercent, Pflinepoint): 0, -1.0
- Point 2 (Powerpercent, Pflinepoint): 0, -1.0

Buttons at the bottom: Please Enter Key To Save, Yes, Advanced Set, Cancel.

10.21) Set PF value: you can set the PF value, ranging from -1 to 1.

The screenshot shows the 'Setting' window with the following configuration:

- AC Discharge Power: 10 % (Not Memory)
- Discharge Stopped Soc: 10 %
- Set Reactive Power Ratio: 1 (Pf Fixed 1, Not Memory)
- Set Exportlimit: On (Limit Power Rate(%))
- SingleExport: Off
- Set Pf Value: 1.0 (-1~1)** (highlighted with a red box)
- Charge Max Current: 160.0 (0~200A)
- Discharge Max Current: 160.0 (0~200A)
- Equalization Voltage: 900.0 (600~1000V)
- EOD Voltage: 600.0 (600~1000V)
- Point 1 (Powerpercent, Pflinepoint): 0, -1.0
- Point 2 (Powerpercent, Pflinepoint): 0, -1.0

Buttons at the bottom: Please Enter Key To Save, Yes, Advanced Set, Cancel.

10.23) Discharge Max. Current: you can set the battery maximum discharge current

The screenshot shows the 'Setting' window with the following configuration:

- Set Exportlimit: On (Limit Power Rate(%))
- SingleExport: Off
- Set Pf Value: 1.0 (-1~1)
- Charge Max Current: 160.0 (0~200A)
- Discharge Max Current: 160.0 (0~200A)** (highlighted with a red box)
- Equalization Voltage: 900.0 (600~1000V)
- EOD Voltage: 600.0 (600~1000V)
- Point 1 (Powerpercent, Pflinepoint): 0, -1.0
- Point 2 (Powerpercent, Pflinepoint): 0, -1.0
- Point 3 (Powerpercent, Pflinepoint): 0, -1.0
- Point 4 (Powerpercent, Pflinepoint): 0, -1.0
- Custom Pf Curve: Powerpercent (0~100); Pflinepoint (-1~1);

Buttons at the bottom: Please Enter Key To Save, Yes, Advanced Set, Cancel.

10.24) Equalization voltage: you can set the battery maximum charge voltage

10.25) EOD voltage: you can set the battery discharge cutoff voltage

10.26) Customized PF curve: you can set the power percentage and the power factor for each point of the PF curve


Meter

- 1) Enter the serial number of the meter or the datalogger to search for the desired meter
- 2) Meter type
- 3) The datalogger worked in conjunction with the meter
- 4) Status of the meter
- 5) The serial number of the WIT inverter to which the meter is connected

9 System Maintenance



9.1 Routine Maintenance

9.1.1 Clean the Chassis

| | |
|--|---|
|  <p>DANGER</p> | <ul style="list-style-type: none"> • Before performing any operation, disconnect the AC and DC power supply and wait for 5 minutes after the system is powered off. • Wipe the dust off the chassis and clean the chassis with a moistened cloth. |
|--|---|

- 1) Check periodically that the humidity is within the acceptable range and keep it away from dust;
- 2) Check the ventilation and heat dissipation of the equipment regularly. For details, see Section 9.1.2.

9.1.2 Fan Maintenance

| | |
|---|--|
|  <p>DANGER</p> | <ul style="list-style-type: none"> • Only qualified and trained electrical technicians are allowed to perform operations. Technicians must observe instructions in this manual local regulations. • Before performing any operation, disconnect all power supplies and wait for 5 minutes until the residual voltage is completely discharged. |
|  <p>WARNING</p> | <ul style="list-style-type: none"> • Do not use the air pump to clean the fan. Otherwise, the fan may be damaged. |

Ventilation and heat dissipation is essential to protect the WIT Inverter from performance de-rate due to excess heat. The fan in the WIT Inverter works to cool the components and the heat sink when the temperature is too high. Check the following possible causes and measures when an exception occurs:

- 1> The fan is stuck with foreign objects or there is dust accumulation on the heat sink; clean the fan cover, fan blades and the heat sink.
- 2> The fan is damaged and needs to be replaced.
- 3> The installation position of the WIT Inverter is not well-ventilated. Select an appropriate installation position that meets the basic installation requirements.

Cleaning and replacing the fan:

- 1> Before cleaning or replacing a fan, disconnect the DC and AC power supply and wait for at least 5 minutes.
- 2> Remove the fan fixing plate using a cross-head screwdriver, as shown in Fig 9.1:

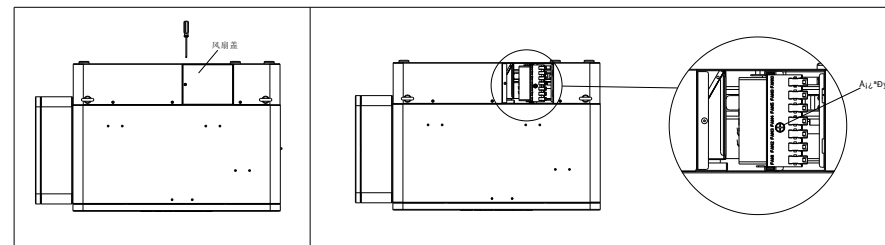


Fig 9.1 Position of the fan fixing plate

- 3> Disconnect the fan connector, remove the fan fixing plate with a screwdriver, and remove the fan, as shown in Fig 9.2:

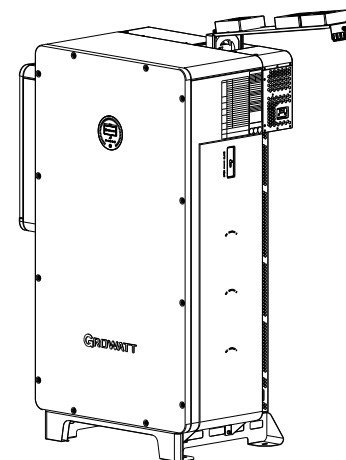



Fig 9.2 Position of the fan

NOTE:

- ① WIT 50-100K-A, WIT 50-100K-H, WIT 50-100K-AE, WIT 50-100K-HE models have five external fans;
 - ② WIT 50-100K-AU and WIT 50-100K-HU models have seven external fans;
- 4> Clean the fan cover, fan blades, and the heat sink, or replace the fan.
 - (1) Use an air pump to clean the heat sink, and use a brush or wet cloth to clean the fan and the its cover;
 - (2) Remove the fan for cleaning if necessary;
 - (3) Remove the fan that needs to be replaced using a cross-head screwdriver and install a new fan.
 - (4) Bind the cables and fix them with a cable tie.
 - (5) Reinstall the fan, the fan fixing plate, and the WIT Inverter.

9.2 Troubleshooting

| | |
|--|--|
|  DANGER | <ul style="list-style-type: none"> It must be operated by trained and professional electrical technicians. Technicians must observe instructions in this manual and local regulations. If the WIT Inverter reports the "PV Isolation low" alarm, do not touch the equipment as a ground fault might have occurred. Beware of high voltages which can cause electric shocks. |
|--|--|

9.2.1 Warning

Warnings indicate abnormal situations of WIT 50-100K Storage/Hybrid Inverters, leading to a reduction in the output power. The warning sign will disappear once the fault is rectified by restarting the inverter or reconfiguring the system. The warning codes are shown in Table 9.1:

Table 9.1 Warning codes

| Warning | Description | Suggestion |
|----------------|--|---|
| Warning 200 | String fault | <ol style="list-style-type: none"> Check if the PV panels are normal after shutdown. If the error message persists, contact Growatt support. |
| Warning 201 | PV string/PID quick-connect terminals abnormal | <ol style="list-style-type: none"> Check the wiring of the string terminals after shutdown. If the error message persists, contact Growatt support. |
| DC SPD Warning | DC SPD function abnormal | <ol style="list-style-type: none"> Check the DC SPD after shutdown. If the error message persists, contact Growatt support. |
| Warning 203 | PV1 or PV2 short circuited | <ol style="list-style-type: none"> Check if PV1 or PV2 is short circuited. If the error message persists, contact Growatt support. |
| Boost Warning | PV Boost driver abnormal | <ol style="list-style-type: none"> Restart the inverter. If the error message persists, contact Growatt support. |
| AC SPD Warning | AC SPD function abnormal | <ol style="list-style-type: none"> After shutdown, check the AC SPD. If the fault persists, contact Growatt. |
| Warning 208 | DC fuse blows | <ol style="list-style-type: none"> Power off the system and check the fuse. If the fault persists, contact Growatt. |

| Warning | Description | Suggestion |
|-------------|---|--|
| Warning 209 | DC input voltage exceeds the upper threshold | <ol style="list-style-type: none"> Turn off the DC switch immediately and check the DC voltage. If the DC voltage is within the specified range and the error message persists, contact Growatt support. |
| PV Reversed | PV string is reversely connected | <ol style="list-style-type: none"> Check the polarity of the PV terminals. If the error message persists, contact Growatt support. |
| Warning 219 | PID function abnormal | <ol style="list-style-type: none"> Restart the inverter. If the error message persists, contact Growatt support. |
| Warning 220 | PV string disconnected | <ol style="list-style-type: none"> Check if the PV string is properly connected. If the error message persists, contact Growatt support. |
| Warning 221 | PV string current unbalanced | <ol style="list-style-type: none"> Check if the PV panels of the corresponding string are normal. If the error message persists, contact Growatt support. |
| Warning 300 | No utility grid connected or utility grid power failure | <ol style="list-style-type: none"> Check if the grid is down. If the error message persists, contact Growatt support. |
| Warning 301 | Grid voltage is beyond the permissible range | <ol style="list-style-type: none"> Check if the grid voltage is within the specified range. If the error message persists, contact Growatt support. |
| Warning 302 | Grid frequency is beyond the permissible range | <ol style="list-style-type: none"> Check if the grid frequency is within the specified range. If the error message persists, contact Growatt support. |
| Warning 303 | Overload | <ol style="list-style-type: none"> Please reduce the load connected to the EPS output terminal. If the error message persists, contact Growatt support. |
| Warning 308 | Meter disconnected | <ol style="list-style-type: none"> Check if the meter is properly connected. If the error message persists, contact Growatt support. |
| Warning 309 | Meter is reversely connected | <ol style="list-style-type: none"> Check if the L line and the N line of the meter are reversely connected. If the error message persists, contact Growatt support. |

| Warning | Description | Suggestion |
|-------------|--|--|
| Warning 310 | The voltage difference between the N line and the PE cable is abnormal | 1. Check if the PE cable is reliably connected after shutdown. 2. If the error message persists, contact Growatt support. |
| Warning 311 | Phase sequence error | No operation is required. The PCS will automatically adjust the phase sequence. |
| Warning 400 | Fan failure | 1. Check if the fan is properly connected after shutdown. 2. If the error message persists, contact Growatt support. |
| Warning 401 | Meter abnormal | 1. Check if the meter is turned on. 2. If the meter is correctly connected to the inverter. |
| Warning 402 | Communication between the optimizer and the inverter is abnormal | 1. Check if the optimizer is turned on. 2. If the optimizer is correctly connected to the inverter. |
| Warning 407 | Over-temperature | 1. Restart the inverter. 2. If the error message persists, contact Growatt support. |
| Warning 408 | NTC temperature sensor is broken | 1. Restart the inverter. 2. If the error message persists, contact Growatt support. |
| Warning 411 | Sync signal abnormal | 1. Check if the sync cable is abnormal. 2. If the error message persists, contact Growatt support. |
| Warning 412 | Startup requirements of grid connection are not met | 1. Check if the grid voltage is within the specified range and check if the grid-connection startup voltage configuration is correct. 2. Check if the PV voltage is within the specified range. 3. Restart the inverter. If the error message persists, contact Growatt support. |
| Warning 500 | The inverter failed to communicate with the battery | 1. Check if the battery is turned on. 2. Check if the battery is correctly and securely connected to the inverter. |
| Warning 501 | Battery disconnected | 1. Check if the battery is properly connected. 2. If the error message persists, contact Growatt support. |

| Warning | Description | Suggestion |
|-------------|---|---|
| Warning 502 | Battery voltage too high | 1. Check if the battery voltage is within the permissible range. 2. Check if the battery is correctly connected. 3. If the error message persists, contact Growatt support. |
| Warning 503 | Battery voltage too low | 1. Check if the battery voltage is within the permissible range. 2. Check if the battery is correctly connected. 3. If the error message persists, contact Growatt support. |
| Warning 504 | Battery terminals are reversely connected | 1. Check if the positive and negative terminals of the battery are reversely connected. 2. If the error message persists, contact Growatt support. |
| Warning 505 | Temperature sensor of the lead-acid battery is disconnected | 1. Check if the temperature sensor of the lead-acid battery is installed or not. 2. Check if the temperature sensor is well-connected. 3. If the error message persists, contact Growatt support. |
| Warning 506 | Battery temperature is out of range | 1. Check if the ambient temperature of the battery is within the specified range. 2. If the error message persists, contact Growatt support. |
| Warning 507 | BMS reported a fault; both charging and discharging failed | 1. Figure out the cause according to the BMS error code. 2. If the error message persists, contact Growatt support. |
| Warning 508 | Lithium battery overload protection | 1. Check if the power of the load exceeds the BAT rated discharge power. 2. If the error message persists, contact Growatt support. |
| Warning 509 | BMS communication abnormal | 1. Restart the inverter. 2. If the error message persists, contact Growatt support. |
| Warning 510 | BAT SPD function abnormal | 1. Check the BAT SPD after powering off the device. 2. If the error message persists, contact Growatt support. |

| Warning | Description | Suggestion |
|-------------|--|---|
| Warning 601 | DC component over high in output voltage | 1. Restart the inverter. 2. If the error message persists, contact Growatt support. |
| Warning 605 | Off-grid bus voltage too low | 1. Check if the load power exceeds the upper limit. 2. Restart the inverter. If the error message persists, contact Growatt support. |
| Warning 609 | Balanced circuit abnormal | 1. Restart the inverter. 2. If the error message persists, contact Growatt support. |

9.2.2 Error

The error code indicates that the device is damaged or the configurations are abnormal. Only qualified and trained electrical technicians are allowed to rectify the faults. The error message will disappear after the fault is rectified. If the problem persists, please contact Growatt.

Table 9.2 Error codes

| Error Code | Description | Suggestion |
|------------------|--|--|
| AFCI Fault | An arc fault has been detected | 1. After shutdown, check the connection of the PV string. 2. Restart the inverter. 3. If the error message persists, please contact Growatt support. |
| GFCI High | An excessively high leakage current has been detected | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| PV Voltage High | DC input voltage exceeds the upper threshold | 1. Disconnect the DC switch immediately and check the voltage. 2. If the DC input voltage is within the permissible range and the error message persists, please contact Growatt support. |
| PV Isolation Low | PV panels have low insulation resistance | 1. Check if the PV strings are properly grounded. 2. If the error message persists, please contact Growatt support. |
| PV Reversed | PV string reversely connected | 1. After shutdown, check if the PV string is reversely connected to the inverter. 2. Restart the inverter. 3. If the error message persists, please contact Growatt support. |
| AC V Outrange | Grid voltage is beyond the permissible range | 1. Check the grid voltage. 2. If the grid voltage is within the permissible range and the error message persists, please contact Growatt support. |
| No AC | No utility grid connected or utility grid power failure | 1. After shutdown, check the AC wiring. 2. If the error message persists, please contact Growatt support. |
| NE Abnormal | The voltage difference between the N line and the PE cable is abnormal | 1. After shutdown, check if the ground cable is reliably connected. 2. If the error message persists, please contact Growatt support. |

| Error Code | Description | Suggestion |
|---------------|--|---|
| AC F Outrange | Grid frequency is beyond the permissible range | 1. Check the grid frequency and restart the inverter. 2. If the error message persists, please contact Growatt support.. |
| Error 309 | Grid ROCOF (Rated of Change of Frequency) abnormal | 1. Check the grid frequency and restart the inverter. 2. If the error message persists, please contact Growatt support. |
| NE Fault | Neutral-to-Ground voltage is too low | 1. Check whether the N line on the inverter side with PV negative grounding is short-circuited with the ground cable and whether the output side is isolated with a transformer. 2. If the error message persists, please contact Growatt support. |
| Error 311 | Export limitation fail-safe | 1. After shutdown, check the connection of the CT and the meter. 2. If the error message persists, please contact Growatt support. |
| Error 400 | DCI bias abnormal | 1. Restart the inverter. 2. If the error message persists, contact Growatt support. |
| Error 402 | High DC component in output current | 1. Restart the inverter. 2. If the error message persists, contact Growatt support. |
| Error 404 | Bus voltage sampling abnormal | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 405 | Relay fault | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 408 | Over-temperature | 1. After shutdown, check the temperature of the inverter and restart the inverter after the temperature is within the acceptable range. 2. If the error message persists, please contact Growatt support. |
| Error 409 | Bus voltage abnormal | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 411 | Internal communication failure | 1. Check the wiring of the communication board after shutdown. 2. If the error message persists, please contact Growatt support. |

| Error Code | Description | Suggestion |
|------------|--|---|
| Error 412 | Temperature sensor disconnected | 1. Check if the temperature sensor module is properly connected. 2. If the error message persists, please contact Growatt support. |
| Error 413 | IGBT drive fault | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 414 | EEPROM error | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 415 | Auxiliary power supply abnormal | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 416 | DC/AC overcurrent protection | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 417 | Communication protocol mismatch | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 418 | DSP and COM firmware version mismatch | 1. Check the firmware version. 2. If the error message persists, please contact Growatt support. |
| Error 419 | DSP software and hardware version mismatch | 1. Check the firmware version. 2. If the error message persists, please contact Growatt support. |
| Error 421 | CPLD abnormal | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 422 | Redundancy sampling inconsistent | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 423 | PWM pass-through signal failure | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 425 | AFCI self-test failure | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 426 | PV current sampling abnormal | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |

| Error Code | Description | Suggestion |
|-----------------|--|--|
| Error 427 | AC current sampling abnormal | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 430 | EPO fault | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 431 | Monitoring chip BOOT verification failed | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 500 | BMS failed to communicate with the inverter | 1. Check the connection of the RS485 cable between the inverter and the battery. 2. Check if the battery is in the sleep mode. 3. If the error message persists, please contact Growatt support. |
| Error 501 | The BMS reports that the battery failed to charge/discharge | 1. Check the connection of the RS485 cable between the inverter and the battery. 2. Check if the battery is in the sleep mode. 3. If the error message persists, please contact Growatt support. |
| Bat Voltage Low | The battery voltage is below the lower threshold | 1. Check the battery voltage. 2. If the error message persists, please contact Growatt support. |
| Error 503 | The battery voltage exceeds upper threshold | 1. Check the battery voltage. If it is within the permissible range, please restart the inverter. If not, please replace the battery. 2. If the error message persists, please contact Growatt support. |
| Error 504 | The battery temperature is beyond the range for charging/discharging | 1. Check the temperature of the battery. 2. If the error message persists, please contact Growatt support. |
| Bat Reversed | Battery terminals reversed | 1. Check if the battery terminals are reversely connected. 2. If the error message persists, please contact Growatt support. |
| Error 506 | Battery open-circuited | 1. Check the wiring of the battery terminals. 2. If the error message persists, please contact Growatt support. |

| Error Code | Description | Suggestion |
|------------------|--|--|
| Error 507 | Battery overload protection | 1. Check if the power of the load exceeds the battery rated discharge power. 2. If the error message persists, please contact Growatt support. |
| Error 508 | BUS2 Volt Abnormal | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 509 | BAT Charge OCP (Overcurrent Protection) | 1. Check if the PV voltage is oversized. 2. If the error message persists, please contact Growatt support. |
| Error 510 | BAT Discharge OCP (Overcurrent Protection) | 1. Check if the battery discharge current configuration is proper. 2. If the error message persists, please contact Growatt support. |
| Error 511 | BAT soft start failed | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| EPS Output Short | Off-grid output short-circuited | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 601 | Off-grid BUS Volt Low | 1. Check if the battery is working properly or the battery experiences capacity loss. 2. If the error message persists, please contact Growatt support. |
| Error 602 | Abnormal Volt at the off-grid terminal | 1. Check if a voltage is present at the AC port. 2. If the error message persists, please contact Growatt support. |
| Error 603 | Soft start failed | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 604 | Off-grid output voltage abnormal | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 605 | Balanced circuit self-test failed | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |

Product Specifications 10

| Error Code | Description | Suggestion |
|--------------|-------------------------------------|---|
| Error 606 | High DC component in output voltage | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| EPS Overload | Off-grid output overload | 1. Restart the inverter. 2. If the error message persists, please contact Growatt support. |
| Error 608 | Off-grid parallel signal abnormal | 1. Check if the communication cables are properly connected. 2. If the error message persists, please contact Growatt support. |

Table 10.1 WIT 50/63/75/100K-A Specification

| Model | WIT 50K-A | WIT 63K-A | WIT 75K-A | WIT100K-A |
|---|--|----------------------------|----------------------------|----------------------------|
| Specifications | | | | |
| Battery data(DC) | | | | |
| Continuous charging / discharging power | 56700W | 71400W | 85100W | 113500W |
| Battery voltage range | 600-1000V (for 3P3W) / 680-1000V (for 3P4W) | | | |
| Recommended battery voltage | 768V | | | |
| Max. charging and discharging current | 83.3A | 105A | 125A | 167A |
| BMS communication | RS485/CAN | | | |
| Output data(AC) | | | | |
| Rated AC output power | 50000W | 63000W | 75000W | 100000W |
| Max. AC apparent power | 55000VA | 69300VA | 82500VA | 110000VA |
| Nominal AC voltage | 220V/230V/240V (L-N) 380V/400V/415V (L-L) | | | |
| AC voltage range | -15% ~ +10% | | | |
| AC grid frequency | 50/60 Hz | | | |
| AC grid frequency range | 45~55Hz/55-65 Hz | | | |
| Rated output current | 75.6A@220V 72.5A@230V | 95.5A@220V 91.3A@230V | 113.6A@220V 108.7A@230V | 151.5A@220V 144.9A@230V |
| Max. output current | 83.3A@220V 79.7A@230V | 105A@220V 100.4A@230V | 125A@220V 119.6A@230V | 166.7A@220V 159.4A@230V |
| Power factor (@nominal power) | >0.99 | | | |
| Adjustable power factor | (1 leading ~ 1 lagging) | | | |
| THDi | <3% | | | |
| AC grid connection type | 3P+PE/3P+N+PE | | | |
| Backup power(AC) | | | | |
| Rated AC output power | 50000W | 63000W | 75000W | 100000W |
| Max. AC apparent power | 60000VA | 75600VA | 90000VA | 120000VA |
| Rated AC output voltage | 220V/230V/240V (L-N) 380V/400V/415V (L-L) | | | |
| Nominal AC output frequency | 50/60 Hz | | | |
| Max. output current | 90.9A@220V 87A@230V | 114.5A@220V 109.6A@230V | 136.4A@220V 130.4A@230V | 181.8A@220V 173.9A@230V |

| Model | WIT 50K-A | WIT 63K-A | WIT 75K-A | WIT100K-A |
|--|---|-----------|-----------|-----------|
| Specifications | | | | |
| Voltage accuracy | 1% | | | |
| Frequency accuracy | 0.1Hz | | | |
| THDv | 3% | | | |
| Unbalanced load | 100% three-phase unbalanced | | | |
| Overload capacity | ≤110%, continuous; 110% ~ 120%:10min >120%, 200ms | | | |
| Efficiency | | | | |
| Max. battery charge/ discharge efficiency | 98.20% | 98.20% | 98.20% | 98.20% |
| Protection devices | | | | |
| PV reverse polarity protection | Yes | | | |
| DC surge protection | Yes (Type II) | | | |
| Insulation resistance monitoring | Yes | | | |
| RCD detection | Yes | | | |
| AC short-circuit protection | Yes | | | |
| AC surge protection | Yes (Type II) | | | |
| Ground fault monitoring | Yes | | | |
| Grid monitoring | Yes | | | |
| Display and communication | | | | |
| Display | OLED+LED/APP | | | |
| USB | Yes | | | |
| RS485 | Yes | | | |
| 4G | Optional | | | |
| WIFI | Optional | | | |
| General data | | | | |
| Dimensions (W /H / D) in mm | 820*1350*510mm | | | |
| Weight | 120kg | | | |
| Operating temperature range | -30°C ... +60°C (> 50°C, derating) | | | |
| Noise emission (typical) | ≤53dB(A) | ≤53dB(A) | ≤65dB(A) | ≤65dB(A) |

| Model | WIT 50K-A | WIT 63K-A | WIT 75K-A | WIT100K-A |
|--------------------------------|---|-----------|-----------|-----------|
| Specifications | | | | |
| Relative humidity | 0~100% | | | |
| Altitude | 4000m | | | |
| Nighttime power consumption | 20W | | | |
| Standby power consumption | 250W | | | |
| Topology | Transformerless | | | |
| Cooling | Smart air cooling | | | |
| Protection degree | IP66 | | | |
| Warranty | 5/10 years(Optional) | | | |
| Standard compliance | | | | |
| Safety | IEC/EN 62109-1,IEC/EN 62109-2,IEC/EN62477-1 | | | |
| EMC | EN 62920-2017 | | | |
| Grid connection standards | EN50549-1, NRS 097-2-1,G99:2020,UKCA,VDE 4105,VDE4110,CEI 0-21:2019+V1:2020,CEI 0- 16:2019+V1:2020,TOR Type A,VDE 0126,NC RFG,PSE- 2018,PTPIREE-2021,C 10/C 11:2021,UNE 217001-2020,UNE 217002-2020,RD647:2020,NTS Type B | | | |

Table 10.2 WIT 50/63/75/100K-H Specification

| Model | WIT 50K-H | WIT 63K-H | WIT 75K-H | WIT100K-H |
|--|--|--------------------------|----------------------------|----------------------------|
| Specifications | | | | |
| Input data (DC) | | | | |
| Max. recommended PV power (for module STC) | 109200W | 124800W | 156000W | 156000W |
| Max. input voltage | 1100V | | | |
| Start voltage | 195V | | | |
| Nominal voltage | 550V | | | |
| MPP voltage range | 180V-800V | | | |
| Full power MPPT voltage range | 520V-800V | | | |
| Max. input current per MPP tracker | 32A | | | |
| Max. short-circuit current per MPP tracker | 40A | | | |
| No. of MPP trackers | 7 | 8 | 10 | 10 |
| No. of PV strings per MPP tracker | 2 | | | |
| Battery data (DC) | | | | |
| Continuous charging / discharging power | 56700W | 71400W | 85100W | 113500W |
| Battery voltage range | 600-1000V (for 3P3W) / 680-1000V (for 3P4W) | | | |
| Recommended battery voltage | 768V | | | |
| Max. charging and discharging current | 83.3A | 105A | 125A | 167A |
| BMS communication | RS485/CAN | | | |
| Output data (AC) | | | | |
| Rated AC output power | 50000W | 63000W | 75000W | 100000W |
| Max. AC apparent power | 55000VA | 69300VA | 82500VA | 110000VA |
| Nominal AC voltage | 220V/230V/240V (L-N) 380V/400V/415V (L-L) | | | |
| AC voltage range | -15% ~ +10% | | | |
| AC grid frequency | 50/60 Hz | | | |
| AC grid frequency range | 45~55Hz/55-65 Hz | | | |
| Rated output current | 75.6A@220V 72.5A@230V | 95.5A@220V 91.3A@230V | 113.6A@220V 108.7A@230V | 151.5A@220V 144.9A@230V |
| Max. output current | 83.3A@220V 79.7A@230V | 105A@220V 100.4A@230V | 125A@220V 119.6A@230V | 166.7A@220V 159.4A@230V |

| Model | WIT 50K-H | WIT 63K-H | WIT 75K-H | WIT100K-H |
|---|---|----------------------------|----------------------------|----------------------------|
| Specifications | | | | |
| Power factor (@nominal power) | >0.99 | | | |
| Adjustable power factor | (1 leading ~ 1 lagging) | | | |
| THDi | <3% | | | |
| AC grid connection type | 3P+PE/3P+N+PE | | | |
| Backup power (AC) | | | | |
| Rated AC output power | 50000W | 63000W | 75000W | 100000W |
| Max. AC apparent power | 60000VA | 75600VA | 90000VA | 120000VA |
| Rated AC output voltage | 220V/230V/240V (L-N) 380V/400V/415V (L-L) | | | |
| Nominal AC output frequency | 50/60 Hz | | | |
| Max. output current | 90.9A@220V 87A@230V | 114.5A@220V 109.6A@230V | 136.4A@220V 130.4A@230V | 181.8A@220V 173.9A@230V |
| Voltage accuracy | 1% | | | |
| Frequency accuracy | 0.1Hz | | | |
| THDv | 3% | | | |
| Unbalanced load | 100% three-phase unbalanced | | | |
| Overload capacity | ≤110%, continuous; 110% ~ 120%:10min >120%, 200ms | | | |
| Efficiency | | | | |
| Max. efficiency | 98.00% | 98.00% | 98.00% | 98.00% |
| Max. battery charge/ discharge efficiency | 98.20% | 98.20% | 98.20% | 98.20% |
| MPPT efficiency | 99.90% | 99.90% | 99.90% | 99.90% |
| Protection devices | | | | |
| PV reverse polarity protection | Yes | | | |
| PV input DC switch | Yes | | | |
| DC surge protection | Yes(Type II) | | | |
| Insulation resistance monitoring | Yes | | | |
| RCD detection | Yes | | | |

| Model | WIT 50K-H | WIT 63K-H | WIT 75K-H | WIT100K-H |
|----------------------------------|---|-----------|-----------|-----------|
| Specifications | | | | |
| AC short-circuit protection | Yes | | | |
| AC surge protection | Yes(Type II) | | | |
| Ground fault monitoring | Yes | | | |
| Grid monitoring | Yes | | | |
| String monitoring | Yes | | | |
| Anti-PID function | Optional | | | |
| AFCI protection | Optional | | | |
| Display and communication | | | | |
| Display | OLED+LED/APP | | | |
| USB | Yes | | | |
| RS485 | Yes | | | |
| 4G | Optional | | | |
| WIFI | Optional | | | |
| General data | | | | |
| Dimensions (W / H / D) in mm | 820*1350*510mm | | | |
| Weight | 133kg | 133kg | 140kg | 140kg |
| Operating temperature range | -30°C ... +60°C (> 50°C derating) | | | |
| Noise emission (typical) | ≤53dB(A) | ≤53dB(A) | ≤65dB(A) | ≤65dB(A) |
| Relative humidity | 0~100% | | | |
| Altitude | 4000m | | | |
| Nighttime power consumption | 20W | | | |
| Standby power consumption | 250W | | | |
| Topology | Transformerless | | | |
| Cooling | Smart air cooling | | | |
| Protection degree | IP66 | | | |
| Warranty | 5/10 years(Optional) | | | |
| Standard compliance | | | | |
| Safety | IEC/EN 62109-1, IEC/EN 62109-2, IEC/EN62477-1 | | | |

| Model | WIT 50K-H | WIT 63K-H | WIT 75K-H | WIT100K-H |
|---------------------------|---|-----------|-----------|-----------|
| Specifications | | | | |
| EMC | EN 62920-2017 | | | |
| Grid connection standards | EN50549-1, NRS 097-2-1, G99:2020, UKCA, VDE 4105, VDE4110, CEI 0-21:2019+V1:2020, CEI 0-16:2019+V1:2020, TOR Type A, VDE 0126, NC RFG, PSE-2018, PTPIREE-2021, C10/C11:2021, UNE 217001-2020, UNE 217002-2020, RD647:2020, NTS Type B | | | |

Table 10.3 WIT 50/63/75/100K-AE Specification

| Model | WIT 50K-AE | WIT 63K-AE | WIT 75K-AE | WIT100K-AE |
|---|--|--|--|--|
| Specifications | | | | |
| Battery data (DC) | | | | |
| Continuous charging / discharging power | 56700W | 71400W | 85100W | 113500W |
| Battery voltage range | 600-1000V (for 3P3W) / 680-1000V (for 3P4W) | | | |
| Recommended battery voltage | 768V | | | |
| Max. charging and discharging current | 83.3A | 105A | 125A | 167A |
| BMS communication | RS485/CAN | | | |
| Ac grid-connection parameters | | | | |
| Rated AC output power | 100000W/ 50000W | 126000W/ 63000W | 150000W/ 75000W | 200000W/ 100000W |
| Max. AC apparent power | 100000VA/ 55000VA | 126000VA/ 69300VA | 150000VA/ 82500VA | 200000VA/ 110000VA |
| Nominal AC voltage | 220V/230V/240V (L-N) 380V/400V/415V (L-L) | | | |
| AC voltage range | -15% ~ +10% | | | |
| AC grid frequency | 50/60 Hz | | | |
| AC grid frequency range | 45~55Hz/55-65 Hz | | | |
| Rated output current | 151.5A/75.6A @220V 144.9A/72.5A @230V | 190.9A/95.5A @220V 182.6A/91.3A @230V | 227.3A/113.6A @220V 217.4A/108.7A @230V | 303A/151.5A @220V 289.9A/144.9A @230V |
| Max. output current | 151.5A/83.3A @220V 144.9A/79.7A @230V | 190.9A/105A @220V 182.6A/100.4A @230V | 227.3A/125A @220V 217.4A/119.6A @230V | 303A/166.7A @220V 289.9A/159.4A @230V |
| Power factor (@nominal power) | >0.99 | | | |
| Adjustable power factor | (1 leading ~ 1 lagging) | | | |
| THDi | <3% | | | |
| AC grid connection type | 3P+PE/3P+N+PE | | | |
| Backup power (AC) | | | | |
| Rated AC output power | 50000W | 63000W | 75000W | 100000W |
| Max. AC apparent power | 60000VA | 75600VA | 90000VA | 120000VA |
| Rated AC output voltage | 220V/230V/240V (L-N) 380V/400V/415V (L-L) | | | |

| Model | WIT 50K-AE | WIT 63K-AE | WIT 75K-AE | WIT100K-AE |
|--|---|----------------------------|----------------------------|----------------------------|
| Specifications | | | | |
| Rated AC output frequency | 50/60 Hz | | | |
| Max. output current | 90.9A@220V 87A@230V | 114.5A@220V 109.6A@230V | 136.4A@220V 130.4A@230V | 181.8A@220V 173.9A@230V |
| Voltage accuracy | 1% | | | |
| Frequency accuracy | 0.1Hz | | | |
| THDv | 3% | | | |
| Unbalanced load | 100% three-phase unbalanced | | | |
| Overload capability | ≤110%, continuous; 110% ~ 120%:10min >120%, 200ms | | | |
| Grid to off-grid switching time | < 200ms | | | |
| Switching time from off-grid to on-grid | 0ms | | | |
| Efficiency | | | | |
| Max. battery charge/discharge efficiency | 98.20% | 98.20% | 98.20% | 98.20% |
| Protection devices | | | | |
| PV reverse polarity protection | Yes | | | |
| DC surge protection | Yes (Type II) | | | |
| Insulation resistance monitoring | Yes | | | |
| RCD detection | Yes | | | |
| AC short-circuit protection | Yes | | | |
| AC surge protection | Yes (Type II) | | | |
| Ground fault monitoring | Yes | | | |
| Grid monitoring | Yes | | | |
| Display and communication | | | | |
| Display | OLED+LED/APP | | | |
| USB | Yes | | | |
| RS485 | Yes | | | |
| 4G | Optional | | | |
| WIFI | Optional | | | |

| Model | WIT 50K-AE | WIT 63K-AE | WIT 75K-AE | WIT100K-AE |
|------------------------------|---|------------|------------|------------|
| Specifications | | | | |
| General data | | | | |
| Dimensions (W / H / D) in mm | 820*1350*510mm | | | |
| Weight | 130kg | | | |
| Operating temperature range | -30°C ... +60°C (> 50°C, derating) | | | |
| Noise emission (typical) | ≤53dB(A) | ≤53dB(A) | ≤65dB(A) | ≤65dB(A) |
| Relative humidity | 0~100% | | | |
| Altitude | 4000m | | | |
| Nighttime power consumption | 20W | | | |
| Standby power consumption | 250W | | | |
| Topology | Transformerless | | | |
| Cooling | Smart air cooling | | | |
| Protection degree | IP66 | | | |
| Warranty | 5/10 years(Optional) | | | |
| Certificates and approvals | | | | |
| Safety | IEC/EN 62109-1, IEC/EN 62109-2, IEC/EN62477-1 | | | |
| EMC | EN 62920-2017 | | | |
| Grid connection standards | EN50549-1, NRS 097-2-1, G99:2020, UKCA, VDE 4105, VDE4110, CEI 0-21:2019+V1:2020, CEI 0-16:2019+V1:2020, TOR Type A, VDE 0126, NC RFG, PSE-2018, PTPIREE-2021, C10/C11:2021, UNE 217001-2020, UNE 217002-2020, RD647:2020, NTS Type B | | | |

Table 10.4 WIT 50/63/75/100K-HE Specification

| Model | WIT 50K-HE | WIT 63K-HE | WIT 75K-HE | WIT100K-HE |
|--|--|----------------------|----------------------|-----------------------|
| Specifications | | | | |
| Input data (DC) | | | | |
| Max. recommended PV power (for module STC) | 109200W | 124800W | 156000W | 156000W |
| Max. input voltage | 1100V | | | |
| Start voltage | 195V | | | |
| Nominal voltage | 550V | | | |
| MPP voltage range | 180V-800V | | | |
| Full power MPPT voltage range | 520V-800V | | | |
| Max. input current per MPP tracker | 32A | | | |
| Max. short-circuit current per MPP tracker | 40A | | | |
| No. of MPP trackers | 7 | 8 | 10 | 10 |
| No. of PV strings per MPP tracker | 2 | | | |
| Battery data (DC) | | | | |
| Continuous charging / discharging power | 56700W | 71400W | 85100W | 113500W |
| Battery voltage range | 600-1000V (for 3P3W) / 680-1000V (for 3P4W) | | | |
| Recommended battery voltage | 768V | | | |
| Max. charging and discharging current | 83.3A | 105A | 125A | 167A |
| BMS communication | RS485/CAN | | | |
| Output data (AC) | | | | |
| Rated AC output power | 100000W/ 50000W | 126000W/ 63000W | 150000W/ 75000W | 200000W/ 100000W |
| Max. AC apparent power | 100000VA/ 55000VA | 126000VA/ 69300VA | 150000VA/ 82500VA | 200000VA/ 110000VA |
| Nominal AC voltage | 220V/230V/240V (L-N) 380V/400V/415V (L-L) | | | |
| AC voltage range | -15% ~ +10% | | | |
| AC grid frequency | 50/60 Hz | | | |
| AC grid frequency range | 45~55Hz/55-65 Hz | | | |

| Model | WIT 50K-HE | WIT 63K-HE | WIT 75K-HE | WIT100K-HE |
|--|---|--|--|--|
| Specifications | | | | |
| Rated output current | 151.5A/75.6A @220V 144.9A/72.5A @230V | 190.9A/95.5A @220V 182.6A/91.3A @230V | 227.3A/113.6A @220V 217.4A/108.7A @230V | 303A/151.5A @220V 289.9A/144.9A @230V |
| Max. output current | 151.5A/83.3A @220V 144.9A/79.7A @230V | 190.9A/105A @220V 182.6A/100.4A @230V | 227.3A/125A @220V 217.4A/119.6A @230V | 303A/166.7A @220V 289.9A/159.4A @230V |
| Power factor (@nominal power) | >0.99 | | | |
| Adjustable power factor | (1 leading ~ 1 lagging) | | | |
| THDi | <3% | | | |
| AC grid connection type | 3P+PE/3P+N+PE | | | |
| Backup power (AC) | | | | |
| Rated AC output power | 50000W | 63000W | 75000W | 100000W |
| Max. AC apparent power | 60000VA | 75600VA | 90000VA | 120000VA |
| Rated AC output voltage | 220V/230V/240V (L-N) 380V/400V/415V (L-L) | | | |
| Nominal AC output frequency | 50/60 Hz | | | |
| Max. output current | 90.9A@220V 87A@230V | 114.5A@220V 109.6A@230V | 136.4A@220V 130.4A@230V | 181.8A@220V 173.9A@230V |
| Voltage accuracy | 1% | | | |
| Frequency accuracy | 0.1Hz | | | |
| THDv | 3% | | | |
| Unbalanced load | 100% three-phase unbalanced | | | |
| Overload capacity | ≤110%, continuous; 110% ~ 120%:10min >120%, 200ms | | | |
| Switching time from on-grid to off-grid | < 200ms | | | |
| Switching time from off-grid to on-grid | 0ms | | | |
| Efficiency | | | | |
| Max. efficiency | 98.00% | 98.00% | 98.00% | 98.00% |
| Max. battery charge/discharge efficiency | 98.20% | 98.20% | 98.20% | 98.20% |

| Model | WIT 50K-HE | WIT 63K-HE | WIT 75K-HE | WIT100K-HE |
|----------------------------------|-----------------------------------|------------|------------|------------|
| Specifications | | | | |
| MPPT efficiency | 99.90% | 99.90% | 99.90% | 99.90% |
| Protection devices | | | | |
| PV reverse polarity protection | Yes | | | |
| PV input DC switch | Yes | | | |
| DC surge protection | Yes (Type II) | | | |
| Insulation resistance monitoring | Yes | | | |
| RCD detection | Yes | | | |
| AC short-circuit protection | Yes | | | |
| AC surge protection | Yes (Type II) | | | |
| Ground fault monitoring | Yes | | | |
| Grid monitoring | Yes | | | |
| String monitoring | Yes | | | |
| Anti-PID function | Optional | | | |
| AFCI protection | Optional | | | |
| Display and communication | | | | |
| Display | OLED+LED/WIFI+APP | | | |
| USB | Yes | | | |
| RS485 | Yes | | | |
| 4G | Optional | | | |
| WIFI | Optional | | | |
| General data | | | | |
| Dimensions (W / H / D) in mm | 820*1350*510mm | | | |
| Weight | 143kg | 143kg | 150kg | 150kg |
| Operating temperature range | -30°C ... +60°C (> 50°C derating) | | | |
| Noise emission (typical) | ≤53dB(A) | ≤53dB(A) | ≤65dB(A) | ≤65dB(A) |
| Relative humidity | 0~100% | | | |
| Altitude | 4000m | | | |

| Model | WIT 50K-HE | WIT 63K-HE | WIT 75K-HE | WIT100K-HE |
|-----------------------------|---|------------|------------|------------|
| Nighttime power consumption | 20W | | | |
| Standby power consumption | 250W | | | |
| Topology | Transformerless | | | |
| Cooling | Smart air cooling | | | |
| Protection degree | IP66 | | | |
| Warranty | 5/10 years(Optional) | | | |
| Standard compliance | | | | |
| Safety | IEC/EN 62109-1, IEC/EN 62109-2, IEC/EN62477-1 | | | |
| EMC | EN 62920-2017 | | | |
| Grid connection standards | EN50549-1, NRS 097-2-1, G99:2020, UKCA, VDE 4105, VDE4110, CEI 0-21:2019+V1:2020, CEI 0-16:2019+V1:2020, TOR Type A, VDE 0126, NC RFG, PSE-2018, PTPIREE-2021, C10/C11:2021, UNE 217001-2020, UNE 217002-2020, RD647:2020, NTS Type B | | | |

Table 10.5 WIT 50/63/75/100K-AU Specification

| Model | WIT 50K-AU | WIT 63K-AU | WIT 75K-AU | WIT100K-AU |
|---|--|--|--|--|
| Specifications | | | | |
| Battery data (DC) | | | | |
| Continuous charging / discharging power | 56700W | 71400W | 85100W | 113500W |
| Battery voltage range | 600-1000V (for 3P3W) / 680-1000V (for 3P4W) | | | |
| Recommended battery voltage | 768V | | | |
| Max. charging and discharging current | 83.3A | 105A | 125A | 167A |
| BMS communication | RS485/CAN | | | |
| Output data (AC) | | | | |
| Rated AC output power | 100000W/ 50000W | 126000W/ 63000W | 150000W/ 75000W | 200000W/ 100000W |
| Max. AC apparent power | 100000VA/ 55000VA | 126000VA/ 69300VA | 150000VA/ 82500VA | 200000VA/ 110000VA |
| Nominal AC voltage | 220V/230V/240V (L-N) 380V/400V/415V (L-L) | | | |
| AC voltage range | -15% ~ +10% | | | |
| AC grid frequency | 50/60 Hz | | | |
| AC grid frequency range | 45~55Hz/55-65 Hz | | | |
| Rated output current | 151.5A/75.6A @220V 144.9A/72.5A @230V | 190.9A/95.5A @220V 182.6A/91.3A @230V | 227.3A/113.6A @220V 217.4A/108.7A @230V | 303A/151.5A @220V 289.9A/144.9A @230V |
| Max. output current | 151.5A/83.3A @220V 144.9A/79.7A @230V | 190.9A/105A @220V 182.6A/100.4A @230V | 227.3A/125A @220V 217.4A/119.6A @230V | 303A/166.7A @220V 289.9A/159.4A @230V |
| Power factor(@nominal power) | >0.99 | | | |
| Adjustable power factor | (1 leading ~ 1 lagging) | | | |
| THDi | <3% | | | |
| AC grid connection type | 3P+PE/3P+N+PE | | | |
| Backup power (AC) | | | | |
| Rated power | 50000W | 63000W | 75000W | 100000W |
| Max. apparent power | 60000VA | 75600VA | 90000VA | 120000VA |
| Rated AC output voltage | 220V/230V/240V (L-N) 380V/400V/415V (L-L) | | | |

| Model | WIT 50K-AU | WIT 63K-AU | WIT 75K-AU | WIT100K-AU |
|--|---|----------------------------|----------------------------|----------------------------|
| Specifications | | | | |
| Nominal AC output frequency | 50/60 Hz | | | |
| Max. output current | 90.9A@220V 87A@230V | 114.5A@220V 109.6A@230V | 136.4A@220V 130.4A@230V | 181.8A@220V 173.9A@230V |
| Voltage accuracy | 1% | | | |
| Frequency accuracy | 0.1Hz | | | |
| THDv | 3% | | | |
| Unbalanced load | 100% three-phase unbalanced | | | |
| Overload capacity | ≤110%, continuous; 110%~120%:10min >120%, 200ms | | | |
| Switching time from on-grid to off-grid | < 20ms | | | |
| Switching time from off-grid to on-grid | 0ms | | | |
| Efficiency | | | | |
| Max. battery charge/discharge efficiency | 98.20% | 98.20% | 98.20% | 98.20% |
| Protection devices | | | | |
| PV reverse polarity protection | Yes | | | |
| DC surge protection | Yes (Type II) | | | |
| Insulation resistance monitoring | Yes | | | |
| RCD detection | Yes | | | |
| AC short-circuit protection | Yes | | | |
| AC surge protection | Yes (Type II) | | | |
| Ground fault monitoring | Yes | | | |
| Grid monitoring | Yes | | | |
| Display and communication | | | | |
| Display | OLED+LED/APP | | | |
| USB | Yes | | | |
| RS485 | Yes | | | |
| 4G | Optional | | | |

| Model | WIT 50K-AU | WIT 63K-AU | WIT 75K-AU | WIT100K-AU |
|-----------------------------|---|------------|------------|------------|
| Specifications | | | | |
| WiFi | Optional | | | |
| General data | | | | |
| Dimensions (W /H / D) in mm | 820*1350*510mm | | | |
| Weight | 140kg | | | |
| Operating temperature range | -30°C ... +60°C (> 50°C, derating) | | | |
| Noise emission (typical) | ≤78dB(A) | ≤78dB(A) | ≤78dB(A) | ≤78dB(A) |
| Relative humidity | 0~100% | | | |
| Altitude | 4000m | | | |
| Nighttime power consumption | 20W | | | |
| Standby power consumption | 250W | | | |
| Topology | Transformerless | | | |
| Cooling | Smart air cooling | | | |
| Protection degree | IP66 | | | |
| Warranty | 5/10 years(Optional) | | | |
| Standard compliance | | | | |
| Safety | IEC/EN 62109-1, IEC/EN 62109-2, IEC/EN62477-1 | | | |
| EMC | EN 62920-2017 | | | |
| Grid connection standards | EN50549-1, NRS 097-2-1, G99:2020, UKCA, VDE 4105, VDE4110, CEI 0-21:2019+V1:2020, CEI 0-16:2019+V1:2020, TOR Type A, VDE 0126, NC RFG, PSE-2018, PTPIREE-2021, C10/C11:2021, UNE 217001-2020, UNE 217002-2020, RD647:2020, NTS Type B | | | |

Table 10.6 WIT 50/63/75/100K-HU Specification

| Model | WIT 50K-HU | WIT 63K-HU | WIT 75K-HU | WIT100K-HU |
|--|--|----------------------|----------------------|-----------------------|
| Specifications | | | | |
| Input data (DC) | | | | |
| Max. recommended PV power (for module STC) | 109200W | 124800W | 156000W | 156000W |
| Max. input voltage | 1100V | | | |
| Start voltage | 195V | | | |
| Nominal voltage | 550V | | | |
| MPP voltage range | 180V-800V | | | |
| Full power MPPT voltage range | 520V-800V | | | |
| Max. input current per MPP tracker | 32A | | | |
| Max. short-circuit current per MPP tracker | 40A | | | |
| No. of MPP trackers | 7 | 8 | 10 | 10 |
| No. of PV strings per MPP tracker | 2 | | | |
| Battery data (DC) | | | | |
| Continuous charging / discharging power | 56700W | 71400W | 85100W | 113500W |
| Battery voltage range | 600-1000V (for 3P3W) / 680-1000V (for 3P4W) | | | |
| Recommended battery voltage | 768V | | | |
| Max. charging and discharging current | 83.3A | 105A | 125A | 167A |
| BMS communication | RS485/CAN | | | |
| Output data (AC) | | | | |
| Rated AC output power | 100000W/ 50000W | 126000W/ 63000W | 150000W/ 75000W | 200000W/ 100000W |
| Max. AC apparent power | 100000VA/ 55000VA | 126000VA/ 69300VA | 150000VA/ 82500VA | 200000VA/ 110000VA |
| Nominal AC voltage | 220V/230V/240V (L-N) 380V/400V/415V (L-L) | | | |
| AC voltage range | -15% ~ +10% | | | |
| AC grid frequency | 50/60 Hz | | | |
| AC grid frequency range | 45~55Hz/55-65 Hz | | | |

| Model | WIT 50K-HU | WIT 63K-HU | WIT 75K-HU | WIT100K-HU |
|--|---|--|--|--|
| Specifications | | | | |
| Rated output current | 151.5A/75.6A @220V 144.9A/72.5A @230V | 190.9A/95.5A @220V 182.6A/91.3A @230V | 227.3A/113.6A @220V 217.4A/108.7A @230V | 303A/151.5A @220V 289.9A/144.9A @230V |
| Max. output current | 151.5A/83.3A @220V 144.9A/79.7A @230V | 190.9A/105A @220V 182.6A/100.4A @230V | 227.3A/125A @220V 217.4A/119.6A @230V | 303A/166.7A @220V 289.9A/159.4A @230V |
| Power factor (@nominal power) | >0.99 | | | |
| Adjustable power factor | (1 leading ~ 1 lagging) | | | |
| THDi | <3% | | | |
| AC grid connection type | 3P+PE/3P+N+PE | | | |
| Backup power (AC) | | | | |
| Rated AC output power | 50000W | 63000W | 75000W | 100000W |
| Max. AC apparent power | 60000VA | 75600VA | 90000VA | 120000VA |
| Rated AC output voltage | 220V/230V/240V (L-N) 380V/400V/415V (L-L) | | | |
| Nominal AC output frequency | 50/60 Hz | | | |
| Max. output current | 90.9A@220V 87A@230V | 114.5A@220V 109.6A@230V | 136.4A@220V 130.4A@230V | 181.8A@220V 173.9A@230V |
| Voltage accuracy | 1% | | | |
| Frequency accuracy | 0.1Hz | | | |
| THDv | 3% | | | |
| Unbalanced load | 100% three-phase unbalanced | | | |
| Overload capacity | ≤110%, continuous; 110% ~ 120%:10min >120%, 200ms | | | |
| Switching time from on-grid to off-grid | < 20ms | | | |
| Switching time from off-grid to on-grid | 0ms | | | |
| Efficiency | | | | |
| Max. efficiency | 98.00% | 98.00% | 98.00% | 98.00% |
| Max. battery charge/discharge efficiency | 98.20% | 98.20% | 98.20% | 98.20% |

| Model | WIT 50K-HU | WIT 63K-HU | WIT 75K-HU | WIT100K-HU |
|----------------------------------|-----------------------------------|------------|------------|------------|
| Specifications | | | | |
| MPPT efficiency | 99.90% | 99.90% | 99.90% | 99.90% |
| Protection devices | | | | |
| PV reverse protection | Yes | | | |
| PV input DC switch | Yes | | | |
| DC surge protection | Yes(Type II) | | | |
| Insulation resistance monitoring | Yes | | | |
| RCD detection | Yes | | | |
| AC short-circuit protection | Yes | | | |
| AC surge protection | Yes(Type II) | | | |
| Ground fault monitoring | Yes | | | |
| Grid monitoring | Yes | | | |
| String monitoring | Yes | | | |
| Anti-PID function | Optional | | | |
| AFCI protection | Optional | | | |
| Display and communication | | | | |
| Display | OLED+LED/APP | | | |
| USB | Yes | | | |
| RS485 | Yes | | | |
| 4G | Optional | | | |
| WIFI | Optional | | | |
| General data | | | | |
| Dimensions (W / H / D) in mm | 820*1350*510mm | | | |
| Weight | 153kg | 153kg | 160kg | 160kg |
| Operating temperature range | -30°C ... +60°C (> 50°C derating) | | | |
| Noise emission (typical) | ≤53dB(A) | ≤53dB(A) | ≤65dB(A) | ≤65dB(A) |
| Relative humidity | 0~100% | | | |
| Altitude | 4000m | | | |

| Model | WIT 50K-HU | WIT 63K-HU | WIT 75K-HU | WIT100K-HU |
|-----------------------------|---|------------|------------|------------|
| Specifications | | | | |
| Nighttime power consumption | 20W | | | |
| Standby power consumption | 250W | | | |
| Topology | Transformerless | | | |
| Cooling | Fan cool | | | |
| Protection degree | IP66 | | | |
| Warranty | 5/10 years(Optional) | | | |
| Standard compliance | | | | |
| Safety | IEC/EN 62109-1, IEC/EN 62109-2, IEC/EN62477-1 | | | |
| EMC | EN 62920-2017 | | | |
| Grid connection standards | EN50549-1, NRS 097-2-1, G99:2020, UKCA, VDE 4105, VDE4110, CEI 0-21:2019+V1:2020, CEI 0-16:2019+V1:2020, TOR Type A, VDE 0126, NC RFG, PSE-2018, PTPiREE-2021, C10/C11:2021, UNE 217001-2020, UNE 217002-2020, RD647:2020, NTS Type B | | | |

11 Decommissioning the WIT Inverter

Handle the WIT Inverter that will not be operated in the future properly.

- 1> Disconnect the external AC circuit breaker and prevent accidental reconnection due to improper operation.
- 2> Set the DC switches to the OFF position.
- 3> Disconnect the upstream battery circuit breaker.
- 4> Wait at least 5 minutes before performing operations on it.
- 5> Disconnect the AC output power cables.
- 6> Disconnect the DC input power cables.
- 7> Remove the WIT inverter from the bracket if it is wall-mounted.
- 8> Dispose of the inverter according to locally applicable disposal regulations.

Warranty 12

Growatt guarantees maintenance and replacement of the defective product under warranty.

12.1 Conditions

1. To serve you better, you will need to fill in a form to provide information about the product including the date of purchase and installation, the serial number of the WIT Inverter, fault description and other information.
2. Return the defective product to Growatt for recycling and disposal.

12.2 Disclaimer

Growatt shall not be liable for any consequences of the following circumstances:

1. Unauthorized removal of the product, such as removing the tamper-proof label and the upper cover of the WIT Inverter.
 2. Damage caused during transportation.
 3. Improper operations during installation and commissioning.
 4. Failure to observe the operation instructions regarding the installation, operation and storage of the WIT Inverter.
 5. Unauthorized modifications or improper maintenance on the WIT Inverter.
 6. Improper use and operation.
 7. Damage caused by storage conditions that do not meet the requirements specified in this manual.
 8. Failure to follow the safety precautions and applicable laws and regulations due to customer's negligence.
 9. Damage due to force majeure, such as lightning, floods, storms, fire.
- In the event of a product malfunction or failure resulting from the circumstance mentioned above, Growatt can provide paid maintenance services after conducting a fault diagnosis if required.

13 Contact Us

If you have technical problems with our products, please contact Growatt for technical support. Please have the following information ready in order to provide you with the necessary assistance:

1. Model number of the WIT Inverter
2. Serial number of the WIT Inverter
3. Error code of the WIT Inverter
4. Information indicated on the LED display
5. DC input voltage and AC output voltage of the WIT Inverter
6. Communication method of the WIT Inverter

Shenzhen Growatt New Energy Co., Ltd

4-13/F, BuildingA, Sino-German (Europe) IndustrialPark,
HangchengAve, Bao'anDistrict, Shenzhen, China

T +86 755 2747 1942

E service@ginverter.com

W www.ginverter.com